# **Experiment #2**

# Addressing Modes and Data Transfer using TASM

# 2.0 Objective

The objective of this experiment is to learn various addressing modes and to verify the actions of data transfer.

# **2.1 Introduction**

Assembly language program can be thought of as consisting of two logical parts: data and code. Most of the assembly language instructions require specification of the location of the data to be operated on. There are a variety of ways to specify and find where the operands required by an instruction are located. These are called addressing modes. This section is a brief overview of some of the addressing modes required to do basic assembly language programming.

The operand required by an instruction may be in any one of the following locations

- in a register internal to the CPU
- in the instruction itself
- in main memory (usually in the data segment)

Therefore the basic addressing modes are register, immediate, and memory addressing modes

### 1. Register Addressing Mode

Specification of an operand that is in a register is called register addressing mode. For example, the instruction

### MOV AX,CX

requires two operands and both are in the CPU registers.

#### 2. Immediate Addressing Mode

In this addressing mode, data is specified as part of the instruction. For example, in the following instruction

#### MOV BX,1000H

the immediate value 1000H is placed into register BX after this instruction is executed.

#### 3. Memory Addressing Mode

A variety of modes are available to specify the location of an operand in memory. These are direct, register-indirect, based, indexed and based-indexed addressing modes

## 2.2 Pre-lab:

Using turbo debugger, initialize the registers and memory locations before executing the following statements and fill the corresponding columns in Table 1.

Example: Initialize AL=10H, SI=30H, BX=1000H, memory location DS:1030H=2AH

## MOV AL,[BX+SI]

(see TABLE 1 for the results after execution of this instruction)

a. Initialize AX=200H; DI=50H; memory location DS:58H=9C, DS:59H=9C

#### MOV AX,[DI+8]

b. Initialize BX=1111H;

#### MOV BX,2000H

c. Initialize BX=1010H; CX=2222H

### **XCHG BX,CX**

d. Initialize AX=2222H; DI=80H; memory location DS:80H=55H, DS:81H=55H

## MOV [DI],AX

e. Initialize AX=1000H; BX=200H; SI=10H; memory location DS:215H=2222H MOV AX,[BX+SI+5]

f. Initialize AX=0H; BP=100H; memory location DS:102H=11H, DS:103H=11H

MOV AX,[BP+2]

	Source		Destination			Addressing
Statement	Register/ Memory	Contents	Register/ Memory	Contents before execution	Contents after execution	Mode
MOV AL,[BX+SI]	Memory	2A	Memory	10	2A	Based indexed
MOV AX,[DI+8]						
MOV BX,2000H						
XCHG BX,CX						
MOV [DI],AX						
MOV AX,[BX+SI+5]						
MOV AX,[BP+2]						

# 2.3 Lab Work:

## USING AN ASSEMBLER

In Experiment 1, we learned to use the DEBUG program development tool that is available in the PC's operating system. This DEBUG program has some limitations. Program addresses must be computed manually (usually requiring two phases – one to enter the instructions and a second to resolve the addresses), no inserting or deleting of instructions is possible, and symbolic addresses cannot be used. All of these limitations of DEBUG can be overcome by using the proper assembly language tools.


Assembly language development tools, such as Microsoft's macro-assembler (MASM), Borland's Turbo assembler (TASM) together with the linker programs, are available for DOS. An assembler considerably reduces program development time.

Using an assembler, it is very easy to write and execute programs. When the program is assembled, it detects all syntax errors in the program - gives the line number at which an error occurred and the type of error.

We will be using the Turbo assembler (TASM) and linker (TLINK) programs in this lab.


### **Program Template**

The following program template must be followed when using the Turbo assembler to write programs.

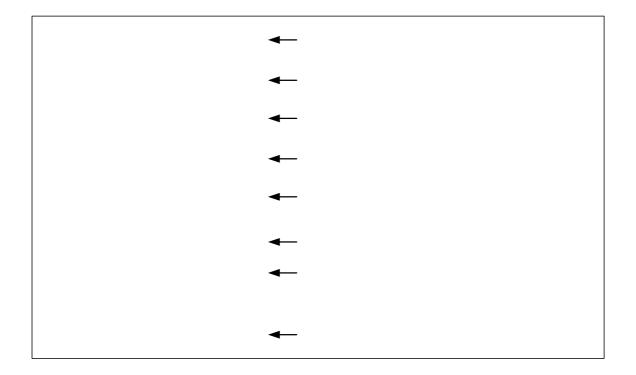

Any line starting with a ';' (semi-colon) is considered a comment and is ignored by the assembler.

A typical program development cycle using an assembler is illustrated in the flowchart below.

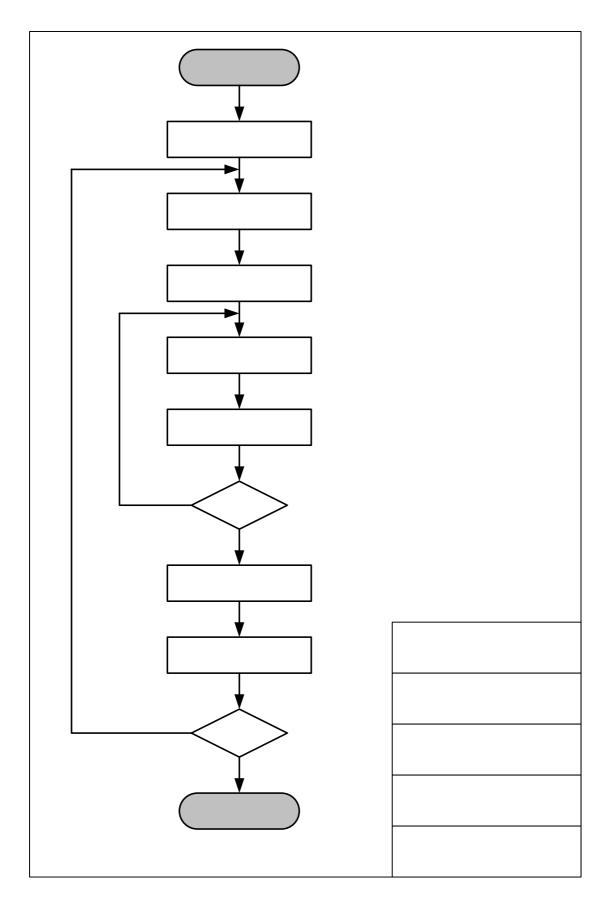

## **2.4 EXAMPLES**

**Program 1:** Enter the following program using an editor. Save the program as "program1.asm". Assemble and link the program. Since the program does nothing except for transferring the contents from one register to another, view and verify the action of each statement using Turbo Debugger (TD).

**Note**: You have to create your source file in the directory where the TAMS.exe and TLINK.exe programs are stored.

TITLE "Program to verify register and immediate addressing modes"				
.MODEL SMALL		; this defines the memory model		
.STACK 100		; define a stack segment of 100 bytes		
.DATA		; this is the data segment		
.CODE		; this is the code segment		
MOV AX	,10	;copy AX with hex number 10		
MOV BX	,10H	;copy BX with hex number 10		
MOV CL,	16D	;copy CL with decimal number 16		
MOV CH	,1010B	;copy CH with binary number 1010		
INC AX		; increment the contents of AX register		
MOV SI,A	AX	;copy SI with the contents of AX		
DEC BX		;decrement the contents of BX register		
MOV BP,	BX	;copy BP with the contents of BX register		
MOV AX INT 21H	,4С00Н	; Exit to DOS function		
END		; end of the program		

In assembler we have to explicitly perform many functions which are taken for granted in high level languages. The most important of these is exiting from a program. The last two lines

#### MOV AX,4C00H INT 21H

in the code segment are used to exit the program and transfer the control back to DOS.

Procedure (to be followed for all programs):

- a. Edit the above program using an editor. Type "edit program1.asm" at the DOS prompt. Save your file and exit the editor. Make sure your file name has an extension of ".asm".
- b. **Assemble** the program created in (a). Type "**tasm program1**" at the DOS prompt. If errors are reported on the screen, then note down the line number and error type from the listing on the screen. To fix the errors go back to step (a) to edit the source file. If no errors are reported, then go to step (c).
- c. Link the object file created in (b). Type "tlink program1" at the DOS prompt. This creates an executable file "program1.exe".
- d. Type "**program1**" at the DOS prompt to run your program.

**Program 2:** Write a program for TASM that stores the hex numbers 20, 30, 40, and 50 in the memory and transfers them to AL, AH, BL, and BH registers. Verify the program using turbo debugger; specially identify the memory location where the data is stored.

TITLE "Program to verify n .MODEL SMALL .STACK 100 .DATA	nemory addressing modes" ; this defines the memory model ; define a stack segment of 100 bytes ; this is the data segment			
num DB 10,20,30,40	; store the four numbers in memory			
.CODE	; this is the code segment			
MOV AX,@DATA MOV DS,AX	; get the address of the data segment ; and store it in register DS			
LEA SI,num	; load the address offset of buffer to store the			
MOV AL,[SI] MOV AH,[SI+1] MOV CL,[SI+2] MOV CH,[SI+3]	; copy AL with memory contents of 'SI', i.e. 10 ; copy AH with memory contents of 'SI+1', i.e. 20 ; copy CL with memory contents of 'SI+2', i.e. 30 ; copy CH with memory contents of 'SI+3', i.e. 40			
MOV AX, 4C00H INT 21H	; Exit to DOS function			

END

; end of the program

<u>The directive DB 'Define Byte'</u> is used to store data in a memory location. Each data has a length of byte. (Another directive is DW 'Define Word' whose data length is of two bytes) The label 'num' is used to identify the location of data. The two instructions

	MOV AX,@DATA MOV DS,AX
together with	LEA SI,num

are used to find the segment and offset address of the memory location 'num'. Notice that memory addressing modes are used to transfer the data.

**Program 3:** Write a program that allows a user to enter characters from the keyboard using the character input function. This program should also store the characters entered into a memory location. Run the program after assembling and linking. Verify the program using turbo debugger, specially identify the location where the data will be stored.

TITLE "Program to enter characters .MODEL SMALL .STACK 100 .DATA		s from keyboard" ; this defines the memory model ; define a stack segment of 100 bytes ; this is the data segment		
char_b	ouf DB 20 DUP(?)	; define a t	ouffer of 20 bytes	
.CODE		; this is the	code segment	
	MOV AX,@DATA MOV DS, AX		t the address of the data segment d store it in register DS	
	LEA SI, char_buf	; lo	ad the offset address of char_buf	
AGAIN:	MOV AH, 01 INT 21H		nction for character input from keyboard SCII value is returned in the AL register	
	MOV [SI], AL	; tra	ansfer the character typed to memory	
	INC SI CMP AL, 0DH JNE AGAIN	; ch	oint to next location in buffer leck if Carriage Return <cr> key was hit not <cr>, then continue input</cr></cr>	
	MOV AX, 4C00H INT 21H	; E2	kit to DOS function	

END

; end of the program

<u>The directive DB when used with DUP</u> allows a sequence of storage locations to be defined or reserved. For example

#### DB 20 DUP(?)

reserves 20 bytes of memory space without initialization. To fill the memory locations with some initial value, write the initial value with DUP instead of using 'question mark'. For example DB 20 DUP(10) will reserve 20 bytes of memory space and will fill it with the numbers 10.

<u>The Keyboard input function</u> waits until a character is typed from the keyboard. When the following two lines

## MOV AH,01

## INT 21H

are encountered in a program, the program will wait for a keyboard input. The ASCII value of the typed character is stored in the AL register. For example if 'carriage return' key is pressed then AL will contain the ASCII value of carriage return i.e. 0DH

#### 2.5 EXERCISE

Write a program in TASM that reserves a memory space 'num1' of 10 bytes and initializes them with the hex number 'AA'. The program should copy the 10 bytes of data of 'num1' into another memory location 'num2' using memory addressing mode. Verify the program using turbo debugger.

Hint : Use DB instruction with DUP to reserve the space for 'num1' of 10 bytes with the initialized value of 'AA'. Again use DB with DUP to reserve another space for 'num2', but without initialization. Use memory content transfer instructions to copy the data of 'num1' to 'num2'.