

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–1.** Prove that the sum of the normal strains in perpendicular directions is constant.

$$\varepsilon_{x'} = \frac{\varepsilon_x + \varepsilon_y}{2} + \frac{\varepsilon_x - \varepsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \quad (1)$$


$$\varepsilon_{y'} = \frac{\varepsilon_x + \varepsilon_y}{2} - \frac{\varepsilon_x - \varepsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \quad (2)$$

Adding Eq. (1) and Eq. (2) yields:

$$\varepsilon_{x'} + \varepsilon_{y'} = \varepsilon_x + \varepsilon_y = \text{constant} \quad \mathbf{QED}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-2.** The state of strain at the point has components of  $\epsilon_x = 200(10^{-6})$ ,  $\epsilon_y = -300(10^{-6})$ , and  $\gamma_{xy} = 400(10^{-6})$ . Use the strain-transformation equations to determine the equivalent in-plane strains on an element oriented at an angle of  $30^\circ$  counterclockwise from the original position. Sketch the deformed element due to these strains within the  $x$ - $y$  plane.

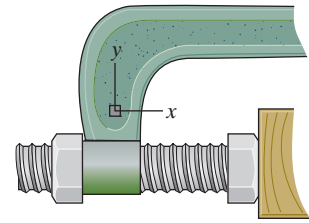

In accordance to the established sign convention,

$$\epsilon_x = 200(10^{-6}), \quad \epsilon_y = -300(10^{-6}) \quad \gamma_{xy} = 400(10^{-6}) \quad \theta = 30^\circ$$

$$\begin{aligned} \epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{200 + (-300)}{2} + \frac{200 - (-300)}{2} \cos 60^\circ + \frac{400}{2} \sin 60^\circ \right] (10^{-6}) \\ &= 248(10^{-6}) \end{aligned}$$

**Ans.**

$$\frac{\gamma_{x'y'}}{2} = -\left( \frac{\epsilon_x - \epsilon_y}{2} \right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$


$$\begin{aligned} \gamma_{x'y'} &= \left\{ -[200 - (-300)] \sin 60^\circ + 400 \cos 60^\circ \right\} (10^{-6}) \\ &= -233(10^{-6}) \end{aligned}$$

**Ans.**

$$\begin{aligned} \epsilon_{y'} &= \frac{\epsilon_x + \epsilon_y}{2} - \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{200 + (-300)}{2} - \frac{200 - (-300)}{2} \cos 60^\circ - \frac{400}{2} \sin 60^\circ \right] (10^{-6}) \\ &= -348(10^{-6}) \end{aligned}$$


**Ans.**

The deformed element of this equivalent state of strain is shown in Fig. *a*

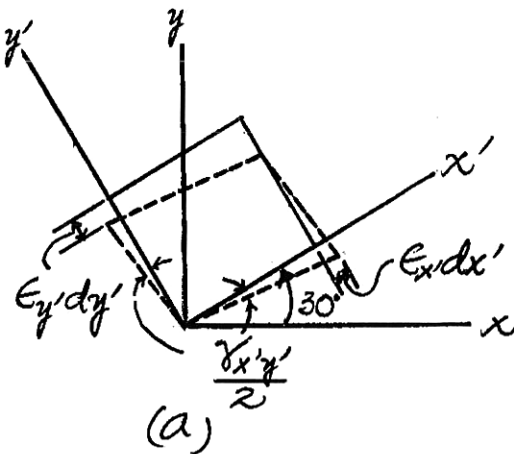

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–3.** A strain gauge is mounted on the 1-in.-diameter A-36 steel shaft in the manner shown. When the shaft is rotating with an angular velocity of  $\omega = 1760 \text{ rev/min}$ , the reading on the strain gauge is  $\epsilon = 800(10^{-6})$ . Determine the power output of the motor. Assume the shaft is only subjected to a torque.

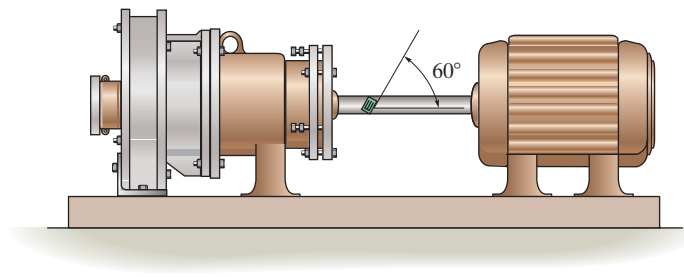

$$\omega = (1760 \text{ rev/min}) \left( \frac{1 \text{ min}}{60 \text{ sec}} \right) \left( \frac{2\pi \text{ rad}}{1 \text{ rev}} \right) = 184.307 \text{ rad/s}$$

$$\epsilon_x = \epsilon_y = 0$$

$$\epsilon_{x'} = \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta$$

$$800(10^{-6}) = 0 + 0 + \frac{\gamma_{xy}}{2} \sin 120^\circ$$

$$\gamma_{xy} = 1.848(10^{-3}) \text{ rad}$$

$$\tau = G \gamma_{xy} = 11(10^3)(1.848)(10^{-3}) = 20.323 \text{ ksi}$$

$$\tau = \frac{Tc}{J}; \quad 20.323 = \frac{T(0.5)}{\frac{\pi}{2}(0.5)^4};$$

$$T = 3.99 \text{ kip} \cdot \text{in} = 332.5 \text{ lb} \cdot \text{ft}$$

$$P = T\omega = 0.3325 (184.307) = 61.3 \text{ kips} \cdot \text{ft/s} = 111 \text{ hp}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10-4.** The state of strain at a point on a wrench has components  $\epsilon_x = 120(10^{-6})$ ,  $\epsilon_y = -180(10^{-6})$ ,  $\gamma_{xy} = 150(10^{-6})$ . Use the strain-transformation equations to determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case specify the orientation of the element and show how the strains deform the element within the  $x$ - $y$  plane.

$$\epsilon_x = 120(10^{-6}) \quad \epsilon_y = -180(10^{-6}) \quad \gamma_{xy} = 150(10^{-6})$$

$$\begin{aligned} \text{a) } \epsilon_{1,2} &= \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ &= \left[ \frac{120 + (-180)}{2} \pm \sqrt{\left(\frac{120 - (-180)}{2}\right)^2 + \left(\frac{150}{2}\right)^2} \right] 10^{-6} \\ \epsilon_1 &= 138(10^{-6}); \quad \epsilon_2 = -198(10^{-6}) \end{aligned}$$

Ans.

Orientation of  $\epsilon_1$  and  $\epsilon_2$

$$\begin{aligned} \tan 2\theta_p &= \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{150}{120 - (-180)} = 0.5 \\ \theta_p &= 13.28^\circ \text{ and } -76.72^\circ \end{aligned}$$

Use Eq. 10.5 to determine the direction of  $\epsilon_1$  and  $\epsilon_2$

$$\epsilon_{x'} = \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta$$

$$\theta = \theta_p = 13.28^\circ$$

$$\begin{aligned} \epsilon_{x'} &= \left[ \frac{120 + (-180)}{2} + \frac{120 - (-180)}{2} \cos(26.56^\circ) + \frac{150}{2} \sin 26.56^\circ \right] 10^{-6} \\ &= 138(10^{-6}) = \epsilon_1 \end{aligned}$$

$$\text{Therefore } \theta_{p1} = 13.3^\circ; \quad \theta_{p2} = -76.7^\circ$$

Ans.

$$\begin{aligned} \text{b) } \frac{\gamma_{\max}^{\text{in-plane}}}{2} &= \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ \gamma_{\max}^{\text{in-plane}} &= 2 \left[ \sqrt{\left(\frac{120 - (-180)}{2}\right)^2 + \left(\frac{150}{2}\right)^2} \right] 10^{-6} = 335(10^{-6}) \end{aligned}$$

Ans.

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left[ \frac{120 + (-180)}{2} \right] 10^{-6} = -30.0(10^{-6})$$

Ans.

Orientation of  $\gamma_{\max}$

$$\tan 2\theta_s = \frac{-(\epsilon_x - \epsilon_y)}{\gamma_{xy}} = \frac{-[120 - (-180)]}{150} = -2.0$$

$$\theta_s = -31.7^\circ \text{ and } 58.3^\circ$$



Ans.

Use Eq. 10-6 to determine the sign of  $\gamma_{\max}^{\text{in-plane}}$

$$\frac{\gamma_{x'y'}}{2} = -\frac{\epsilon_x - \epsilon_y}{2} \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$


$$\theta = \theta_s = -31.7^\circ$$

$$\gamma_{x'y'} = 2 \left[ -\frac{120 - (-180)}{2} \sin(-63.4^\circ) + \frac{150}{2} \cos(-63.4^\circ) \right] 10^{-6} = 335(10^{-6})$$

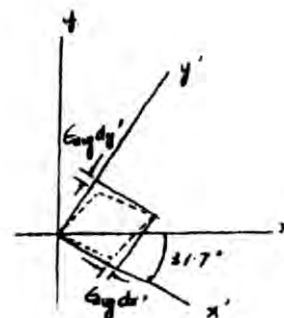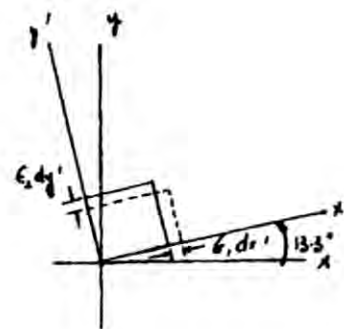

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-5.** The state of strain at the point on the arm has components  $\epsilon_x = 250(10^{-6})$ ,  $\epsilon_y = -450(10^{-6})$ ,  $\gamma_{xy} = -825(10^{-6})$ . Use the strain-transformation equations to determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case specify the orientation of the element and show how the strains deform the element within the  $x$ - $y$  plane.

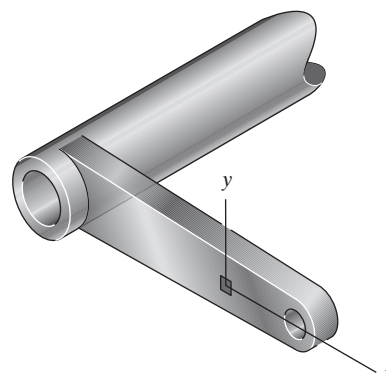

$$\epsilon_x = 250(10^{-6}) \quad \epsilon_y = -450(10^{-6}) \quad \gamma_{xy} = -825(10^{-6})$$

a)

$$\begin{aligned} \epsilon_{1,2} &= \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ &= \left[ \frac{250 - 450}{2} \pm \sqrt{\left(\frac{250 - (-450)}{2}\right)^2 + \left(\frac{-825}{2}\right)^2} \right] (10^{-6}) \end{aligned}$$

$$\epsilon_1 = 441(10^{-6})$$

$$\epsilon_2 = -641(10^{-6})$$

Orientation of  $\epsilon_1$  and  $\epsilon_2$ :

$$\tan 2\theta_p = \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{-825}{250 - (-450)}$$

$$\theta_p = -24.84^\circ \quad \text{and} \quad \theta_p = 65.16^\circ$$

Use Eq. 10-5 to determine the direction of  $\epsilon_1$  and  $\epsilon_2$ :

$$\epsilon_{x'} = \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta$$

$$\theta = \theta_p = -24.84^\circ$$

$$\epsilon_{x'} = \left[ \frac{250 - 450}{2} + \frac{250 - (-450)}{2} \cos(-49.69^\circ) + \frac{-825}{2} \sin(-49.69^\circ) \right] (10^{-6}) = 441(10^{-6})$$

$$\text{Therefore, } \theta_{p1} = -24.8^\circ$$

$$\theta_{p2} = 65.2^\circ$$

b)


$$\frac{\gamma_{\max}^{\text{in-plane}}}{2} = \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2}$$

$$\frac{\gamma_{\max}^{\text{in-plane}}}{2} = 2 \left[ \sqrt{\left(\frac{250 - (-450)}{2}\right)^2 + \left(\frac{-825}{2}\right)^2} \right] (10^{-6}) = 1.08(10^{-3})$$

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left( \frac{250 - 450}{2} \right) (10^{-6}) = -100(10^{-6})$$


Ans.

Ans.

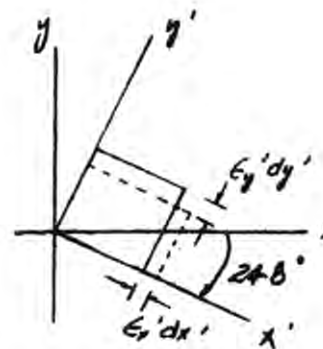

Ans.

Ans.

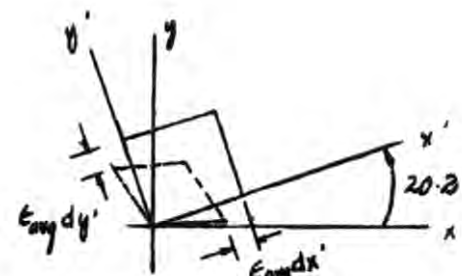


Ans.

Ans.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-6.** The state of strain at the point has components of  $\epsilon_x = -100(10^{-6})$ ,  $\epsilon_y = 400(10^{-6})$ , and  $\gamma_{xy} = -300(10^{-6})$ . Use the strain-transformation equations to determine the equivalent in-plane strains on an element oriented at an angle of  $60^\circ$  counterclockwise from the original position. Sketch the deformed element due to these strains within the  $x$ - $y$  plane.

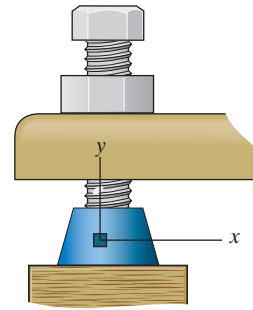

In accordance to the established sign convention,

$$\epsilon_x = -100(10^{-6}) \quad \epsilon_y = 400(10^{-6}) \quad \gamma_{xy} = -300(10^{-6}) \quad \theta = 60^\circ$$

$$\begin{aligned} \epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{-100 + 400}{2} + \frac{-100 - 400}{2} \cos 120^\circ + \frac{-300}{2} \sin 120^\circ \right] (10^{-6}) \\ &= 145(10^{-6}) \end{aligned}$$

**Ans.**

$$\frac{\gamma_{x'y'}}{2} = -\left( \frac{\epsilon_x - \epsilon_y}{2} \right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$


$$\begin{aligned} \gamma_{x'y'} &= \left[ -(-100 - 400) \sin 120^\circ + (-300) \cos 120^\circ \right] (10^{-6}) \\ &= 583(10^{-6}) \end{aligned}$$

**Ans.**

$$\begin{aligned} \epsilon_{y'} &= \frac{\epsilon_x + \epsilon_y}{2} - \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{-100 + 400}{2} - \frac{-100 - 400}{2} \cos 120^\circ - \frac{-300}{2} \sin 120^\circ \right] (10^{-6}) \\ &= 155(10^{-6}) \end{aligned}$$


**Ans.**

The deformed element of this equivalent state of strain is shown in Fig. *a*

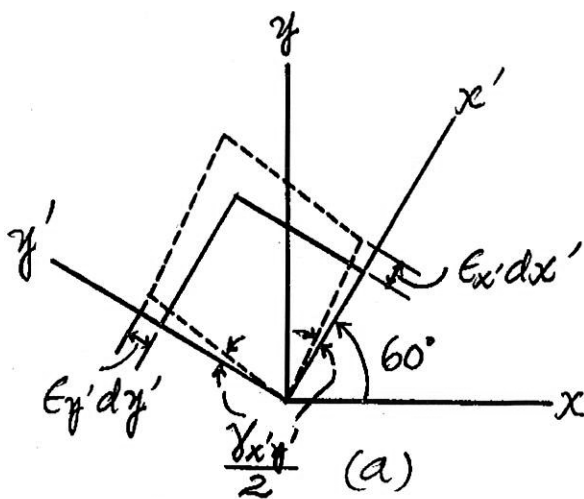

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-7.** The state of strain at the point has components of  $\epsilon_x = 100(10^{-6})$ ,  $\epsilon_y = 300(10^{-6})$ , and  $\gamma_{xy} = -150(10^{-6})$ . Use the strain-transformation equations to determine the equivalent in-plane strains on an element oriented  $\theta = 30^\circ$  clockwise. Sketch the deformed element due to these strains within the  $x$ - $y$  plane.

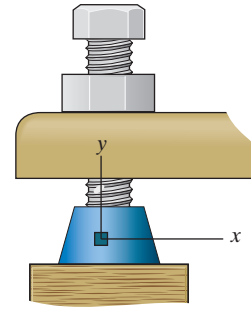

In accordance to the established sign convention,

$$\epsilon_x = 100(10^{-6}) \quad \epsilon_y = 300(10^{-6}) \quad \gamma_{xy} = -150(10^{-6}) \quad \theta = -30^\circ$$

$$\begin{aligned} \epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{100 + 300}{2} + \frac{100 - 300}{2} \cos(-60^\circ) + \frac{-150}{2} \sin(-60^\circ) \right] (10^{-6}) \\ &= 215(10^{-6}) \end{aligned}$$

**Ans.**


$$\begin{aligned} \frac{\gamma_{x'y'}}{2} &= -\left( \frac{\epsilon_x - \epsilon_y}{2} \right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta \\ \gamma_{x'y'} &= \left[ -(100 - 300) \sin(-60^\circ) + (-150) \cos(-60^\circ) \right] (10^{-6}) \\ &= -248(10^{-6}) \end{aligned}$$

**Ans.**

$$\begin{aligned} \epsilon_{y'} &= \frac{\epsilon_x + \epsilon_y}{2} - \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{100 + 300}{2} - \frac{100 - 300}{2} \cos(-60^\circ) - \frac{-150}{2} \sin(-60^\circ) \right] (10^{-6}) \\ &= 185(10^{-6}) \end{aligned}$$


**Ans.**

The deformed element of this equivalent state of strain is shown in Fig. *a*

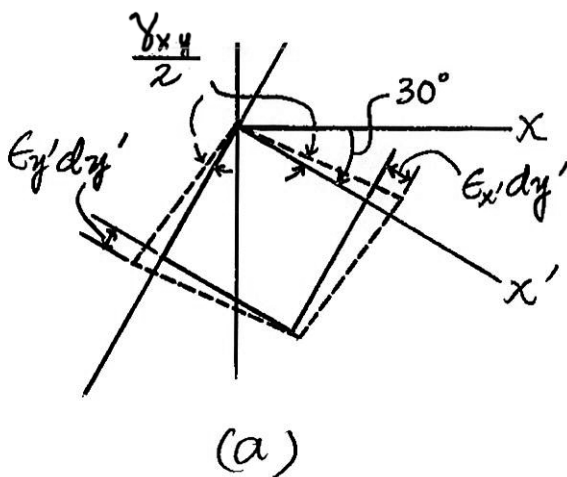

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–8.** The state of strain at the point on the bracket has components  $\epsilon_x = -200(10^{-6})$ ,  $\epsilon_y = -650(10^{-6})$ ,  $\gamma_{xy} = -175(10^{-6})$ . Use the strain-transformation equations to determine the equivalent in-plane strains on an element oriented at an angle of  $\theta = 20^\circ$  counterclockwise from the original position. Sketch the deformed element due to these strains within the  $x$ - $y$  plane.

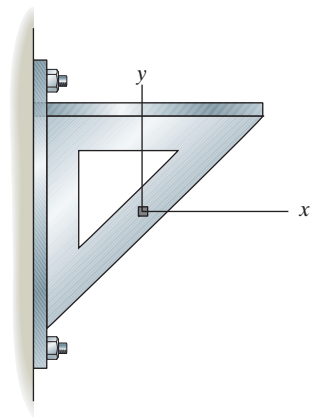


$$\epsilon_x = -200(10^{-6}) \quad \epsilon_y = -650(10^{-6}) \quad \gamma_{xy} = -175(10^{-6}) \quad \theta = 20^\circ$$

$$\begin{aligned} \epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{-200 + (-650)}{2} + \frac{(-200) - (-650)}{2} \cos (40^\circ) + \frac{(-175)}{2} \sin (40^\circ) \right] (10^{-6}) \\ &= -309(10^{-6}) \end{aligned} \quad \text{Ans.}$$

$$\begin{aligned} \epsilon_{y'} &= \frac{\epsilon_x + \epsilon_y}{2} - \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{-200 + (-650)}{2} - \frac{-200 - (-650)}{2} \cos (40^\circ) - \frac{(-175)}{2} \sin (40^\circ) \right] (10^{-6}) \\ &= -541(10^{-6}) \end{aligned} \quad \text{Ans.}$$

$$\frac{\gamma_{x'y'}}{2} = -\frac{\epsilon_x - \epsilon_y}{2} \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$


$$\begin{aligned} \gamma_{x'y'} &= [ -(-200 - (-650)) \sin (40^\circ) + (-175) \cos (40^\circ) ] (10^{-6}) \\ &= -423(10^{-6}) \end{aligned} \quad \text{Ans.}$$

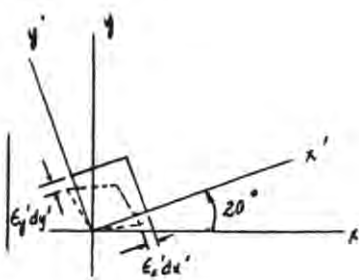



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–9.** The state of strain at the point has components of  $\epsilon_x = 180(10^{-6})$ ,  $\epsilon_y = -120(10^{-6})$ , and  $\gamma_{xy} = -100(10^{-6})$ . Use the strain-transformation equations to determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case specify the orientation of the element and show how the strains deform the element within the  $x$ - $y$  plane.

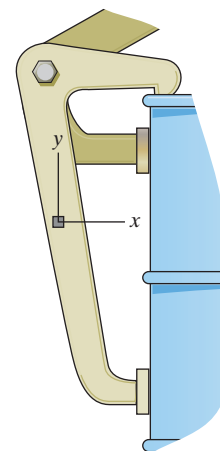

a) In accordance to the established sign convention,  $\epsilon_x = 180(10^{-6})$ ,  $\epsilon_y = -120(10^{-6})$  and  $\gamma_{xy} = -100(10^{-6})$ .

$$\begin{aligned}\epsilon_{1,2} &= \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ &= \left\{ \frac{180 + (-120)}{2} \pm \sqrt{\left[\frac{180 - (-120)}{2}\right]^2 + \left(\frac{-100}{2}\right)^2} \right\} (10^{-6}) \\ &= (30 \pm 158.11)(10^{-6})\end{aligned}$$

$$\epsilon_1 = 188(10^{-6}) \quad \epsilon_2 = -128(10^{-6})$$

**Ans.**

$$\tan 2\theta_p = \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{-100(10^{-6})}{[180 - (-120)](10^{-6})} = -0.3333$$

$$\theta_p = -9.217^\circ \quad \text{and} \quad 80.78^\circ$$

Substitute  $\theta = -9.217^\circ$ ,

$$\begin{aligned}\epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{180 + (-120)}{2} + \frac{180 - (-120)}{2} \cos(-18.43^\circ) + \frac{-100}{2} \sin(-18.43^\circ) \right] (10^{-6}) \\ &= 188(10^{-6}) = \epsilon_1\end{aligned}$$

Thus,

$$(\theta_p)_1 = -9.22^\circ \quad (\theta_p)_2 = 80.8^\circ$$

**Ans.**

The deformed element is shown in Fig (a).

$$\begin{aligned}\text{b) } \frac{\gamma_{\max \text{ in-plane}}}{2} &= \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ \gamma_{\max \text{ in-plane}} &= \left\{ 2 \sqrt{\left[\frac{180 - (-120)}{2}\right]^2 + \left(\frac{-100}{2}\right)^2} \right\} (10^{-6}) = 316 (10^{-6}) \quad \text{Ans.}\end{aligned}$$

$$\tan 2\theta_s = -\left(\frac{\epsilon_x - \epsilon_y}{\gamma_{xy}}\right) = -\left(\frac{[180 - (-120)](10^{-6})}{-100(10^{-6})}\right) = 3$$

$$\theta_s = 35.78^\circ = 35.8^\circ \quad \text{and} \quad -54.22^\circ = -54.2^\circ$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10-9. Continued

The algebraic sign for  $\gamma_{\max}^{\text{in-plane}}$  when  $\theta = 35.78^\circ$ .

$$\frac{\gamma_{x'y'}}{2} = -\left(\frac{\epsilon_x - \epsilon_y}{2}\right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$



$$\gamma_{x'y'} = \left\{ -[180 - (-120)] \sin 71.56^\circ + (-100) \cos 71.56^\circ \right\} (10^{-6})$$

$$= -316(10^{-6})$$

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left[ \frac{180 + (-120)}{2} \right] (10^{-6}) = 30(10^{-6})$$


**Ans.**

The deformed element for the state of maximum In-plane shear strain is shown is shown in Fig. *b*

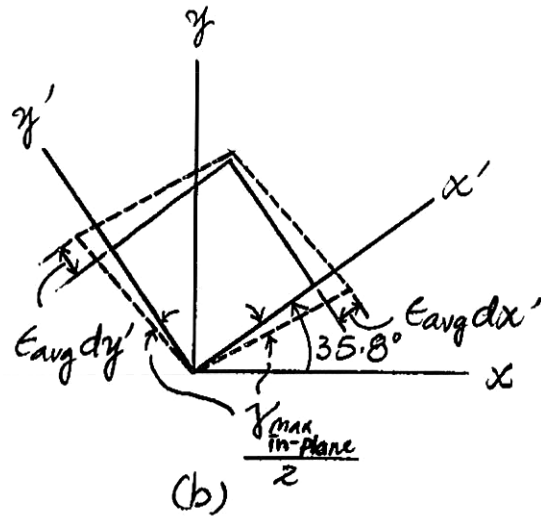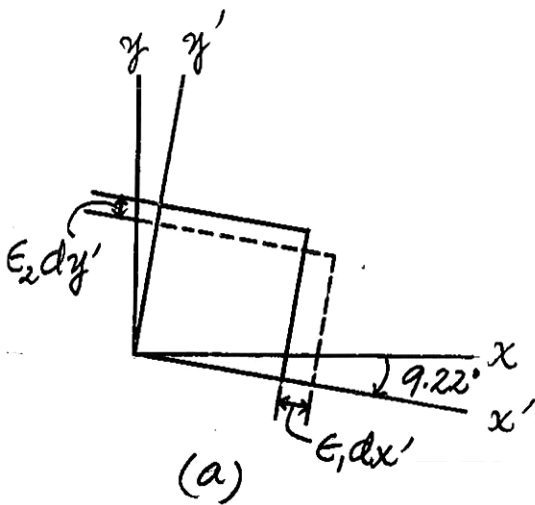

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–10.** The state of strain at the point on the bracket has components  $\epsilon_x = 400(10^{-6})$ ,  $\epsilon_y = -250(10^{-6})$ ,  $\gamma_{xy} = 310(10^{-6})$ . Use the strain-transformation equations to determine the equivalent in-plane strains on an element oriented at an angle of  $\theta = 30^\circ$  clockwise from the original position. Sketch the deformed element due to these strains within the  $x$ - $y$  plane.

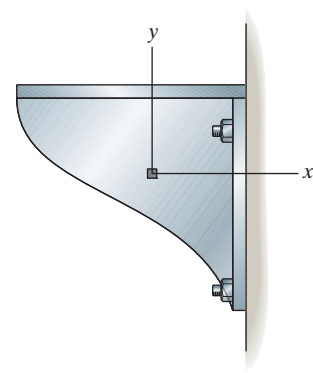


$$\epsilon_x = 400(10^{-6}) \quad \epsilon_y = -250(10^{-6}) \quad \gamma_{xy} = 310(10^{-6}) \quad \theta = -30^\circ$$

$$\begin{aligned} \epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{400 + (-250)}{2} + \frac{400 - (-250)}{2} \cos(-60^\circ) + \left( \frac{310}{2} \right) \sin(-60^\circ) \right] (10^{-6}) \\ &= 103(10^{-6}) \end{aligned} \quad \text{Ans.}$$

$$\begin{aligned} \epsilon_{y'} &= \frac{\epsilon_x + \epsilon_y}{2} - \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{400 + (-250)}{2} - \frac{400 - (-250)}{2} \cos(60^\circ) - \frac{310}{2} \sin(-60^\circ) \right] (10^{-6}) \\ &= 46.7(10^{-6}) \end{aligned} \quad \text{Ans.}$$


$$\frac{\gamma_{x'y'}}{2} = -\frac{\epsilon_x - \epsilon_y}{2} \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$

$$\gamma_{x'y'} = [-(400 - (-250)) \sin(-60^\circ) + 310 \cos(-60^\circ)] (10^{-6}) = 718(10^{-6}) \quad \text{Ans.}$$

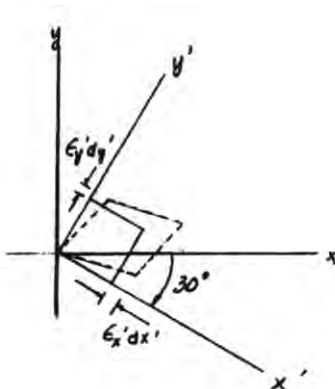

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–11.** The state of strain at the point has components of  $\epsilon_x = -100(10^{-6})$ ,  $\epsilon_y = -200(10^{-6})$ , and  $\gamma_{xy} = 100(10^{-6})$ . Use the strain-transformation equations to determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case specify the orientation of the element and show how the strains deform the element within the  $x$ - $y$  plane.

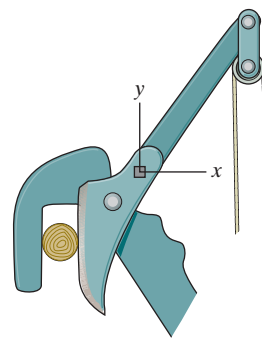

In accordance to the established sign convention,  $\epsilon_x = -100(10^{-6})$ ,  $\epsilon_y = -200(10^{-6})$  and  $\gamma_{xy} = 100(10^{-6})$ .

$$\begin{aligned}\epsilon_{1,2} &= \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ &= \left\{ \frac{-100 + (-200)}{2} \pm \sqrt{\left[\frac{-100 - (-200)}{2}\right]^2 + \left(\frac{100}{2}\right)^2} \right\} (10^{-6}) \\ &= (-150 \pm 70.71)(10^{-6})\end{aligned}$$

$$\epsilon_1 = -79.3(10^{-6}) \quad \epsilon_2 = -221(10^{-6})$$

**Ans.**

$$\begin{aligned}\tan 2\theta_P &= \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{100(10^{-6})}{[-100 - (-200)](10^{-6})} = 1 \\ \theta_P &= 22.5^\circ \quad \text{and} \quad -67.5^\circ\end{aligned}$$

Substitute  $\theta = 22.5$ ,

$$\begin{aligned}\epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{-100 + (-200)}{2} + \frac{-100 - (-200)}{2} \cos 45^\circ + \frac{100}{2} \sin 45^\circ \right] (10^{-6}) \\ &= -79.3(10^{-6}) = \epsilon_1\end{aligned}$$

Thus,

$$(\theta_P)_1 = 22.5^\circ \quad (\theta_P)_2 = -67.5^\circ$$

**Ans.**

The deformed element of the state of principal strain is shown in Fig. *a*

$$\begin{aligned}\frac{\gamma_{\max \text{ in-plane}}}{2} &= \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ \gamma_{\max \text{ in-plane}} &= \left\{ 2 \sqrt{\left[\frac{-100 - (-200)}{2}\right]^2 + \left(\frac{100}{2}\right)^2} \right\} (10^{-6}) = 141(10^{-6})\end{aligned}$$

**Ans.**

$$\begin{aligned}\tan 2\theta_s &= -\left(\frac{\epsilon_x - \epsilon_y}{\gamma_{xy}}\right) = -\left\{ \frac{[-100 - (-200)](10^{-6})}{100(10^{-6})} \right\} = -1 \\ \theta_s &= -22.5^\circ \quad \text{and} \quad 67.5^\circ\end{aligned}$$

**Ans.**

The algebraic sign for  $\gamma_{\max \text{ in-plane}}$  when  $\theta = -22.5^\circ$ .

$$\frac{\gamma_{x'y'}}{2} = -\left(\frac{\epsilon_x - \epsilon_y}{2}\right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$

$$\begin{aligned}\gamma_{x'y'} &= -[-100 - (-200)] \sin(-45^\circ) + 100 \cos(-45^\circ) \\ &= 141(10^{-6})\end{aligned}$$



$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left[ \frac{-100 + (-200)}{2} \right] (10^{-6}) = -150(10^{-6})$$

**Ans.**

The deformed element for the state of maximum In-plane shear strain is shown in Fig. *b*.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

10-11. Continued

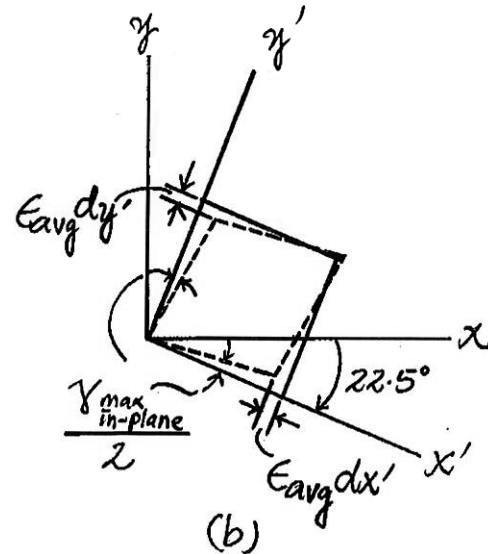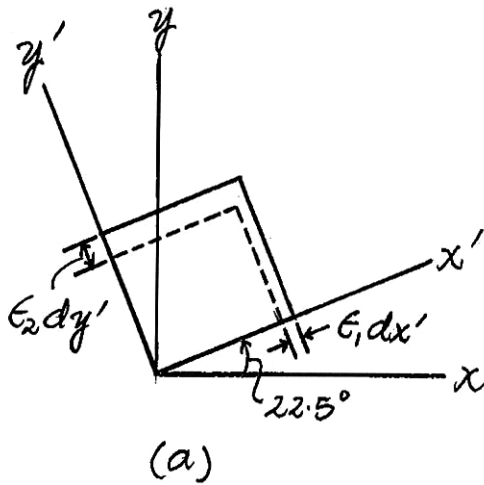

\*10-12. The state of plane strain on an element is given by  $\epsilon_x = 500(10^{-6})$ ,  $\epsilon_y = 300(10^{-6})$ , and  $\gamma_{xy} = -200(10^{-6})$ . Determine the equivalent state of strain on an element at the same point oriented  $45^\circ$  clockwise with respect to the original element.

Strain Transformation Equations:

$$\epsilon_x = 500(10^{-6}) \quad \epsilon_y = 300(10^{-6}) \quad \gamma_{xy} = -200(10^{-6}) \quad \theta = -45^\circ$$

We obtain



$$\begin{aligned} \epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{500 + 300}{2} + \frac{500 - 300}{2} \cos(-90^\circ) + \left( \frac{-200}{2} \right) \sin(-90^\circ) \right] (10^{-6}) \\ &= 500(10^{-6}) \end{aligned}$$

$$\frac{\gamma_{x'y'}}{2} = -\left( \frac{\epsilon_x - \epsilon_y}{2} \right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$

$$\begin{aligned} \gamma_{x'y'} &= [-(500 - 300) \sin(-90^\circ) + (-200) \cos(-90^\circ)] (10^{-6}) \\ &= 200(10^{-6}) \end{aligned}$$


$$\begin{aligned} \epsilon_{y'} &= \frac{\epsilon_x + \epsilon_y}{2} - \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{500 + 300}{2} - \frac{500 - 300}{2} \cos(-90^\circ) - \left( \frac{-200}{2} \right) \sin(-90^\circ) \right] (10^{-6}) \\ &= 300(10^{-6}) \end{aligned}$$

The deformed element for this state of strain is shown in Fig. a.

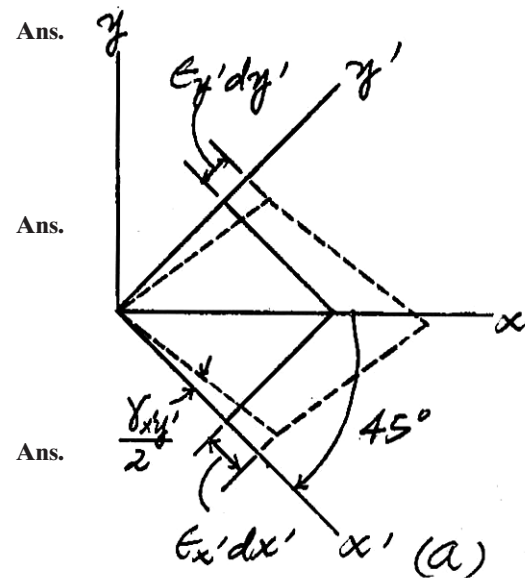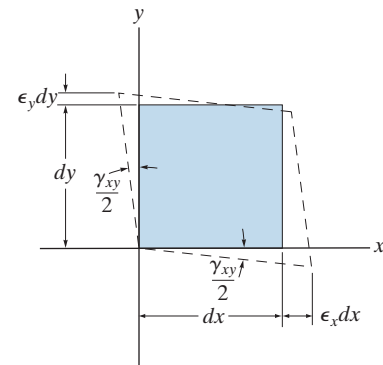

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–13.** The state of plane strain on an element is  $\epsilon_x = -300(10^{-6})$ ,  $\epsilon_y = 0$ , and  $\gamma_{xy} = 150(10^{-6})$ . Determine the equivalent state of strain which represents (a) the principal strains, and (b) the maximum in-plane shear strain and the associated average normal strain. Specify the orientation of the corresponding elements for these states of strain with respect to the original element.

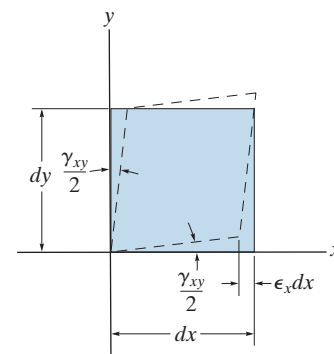

**In-Plane Principal Strains:**  $\epsilon_x = -300(10^{-6})$ ,  $\epsilon_y = 0$ , and  $\gamma_{xy} = 150(10^{-6})$ . We obtain

$$\begin{aligned}\epsilon_{1,2} &= \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ &= \left[ \frac{-300 + 0}{2} \pm \sqrt{\left(\frac{-300 - 0}{2}\right)^2 + \left(\frac{150}{2}\right)^2} \right] (10^{-6}) \\ &= (-150 \pm 167.71)(10^{-6})\end{aligned}$$

$$\epsilon_1 = 17.7(10^{-6}) \quad \epsilon_2 = -318(10^{-6})$$

**Ans.**

**Orientation of Principal Strain:**

$$\tan 2\theta_p = \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{150(10^{-6})}{(-300 - 0)(10^{-6})} = -0.5$$

$$\theta_p = -13.28^\circ \text{ and } 76.72^\circ$$

Substituting  $\theta = -13.28^\circ$  into Eq. 9-1,

$$\begin{aligned}\epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{-300 + 0}{2} + \frac{-300 - 0}{2} \cos(-26.57^\circ) + \frac{150}{2} \sin(-26.57^\circ) \right] (10^{-6}) \\ &= -318(10^{-6}) = \epsilon_2\end{aligned}$$

Thus,

$$(\theta_p)_1 = 76.7^\circ \text{ and } (\theta_p)_2 = -13.3^\circ$$

**Ans.**

The deformed element of this state of strain is shown in Fig. *a*.

**Maximum In-Plane Shear Strain:**

$$\begin{aligned}\frac{\gamma_{\max \text{ in-plane}}}{2} &= \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ \gamma_{\max \text{ in-plane}} &= \left[ 2\sqrt{\left(\frac{-300 - 0}{2}\right)^2 + \left(\frac{150}{2}\right)^2} \right] (10^{-6}) = 335(10^{-6})\end{aligned}$$

**Ans.**

**Orientation of the Maximum In-Plane Shear Strain:**

$$\tan 2\theta_s = -\left(\frac{\epsilon_x - \epsilon_y}{\gamma_{xy}}\right) = -\left[\frac{(-300 - 0)(10^{-6})}{150(10^{-6})}\right] = 2$$

$$\theta_s = 31.7^\circ \text{ and } 122^\circ$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10-13. Continued

The algebraic sign for  $\gamma_{\max}^{\text{in-plane}}$  when  $\theta = \theta_s = 31.7^\circ$  can be obtained using

$$\frac{\gamma_{x'y'}}{2} = -\left(\frac{\epsilon_x - \epsilon_y}{2}\right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$



$$\begin{aligned} \gamma_{x'y'} &= [ -(-300 - 0) \sin 63.43^\circ + 150 \cos 63.43^\circ ] (10^{-6}) \\ &= 335(10^{-6}) \end{aligned}$$

**Average Normal Strain:**

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left( \frac{-300 + 0}{2} \right) (10^{-6}) = -150(10^{-6})$$


**Ans.**

The deformed element for this state of strain is shown in Fig. *b*.

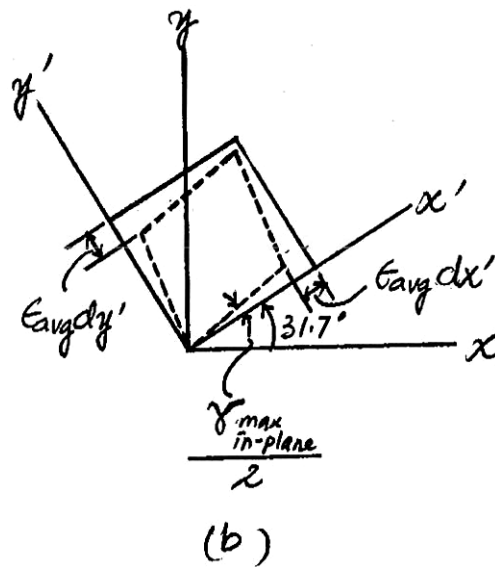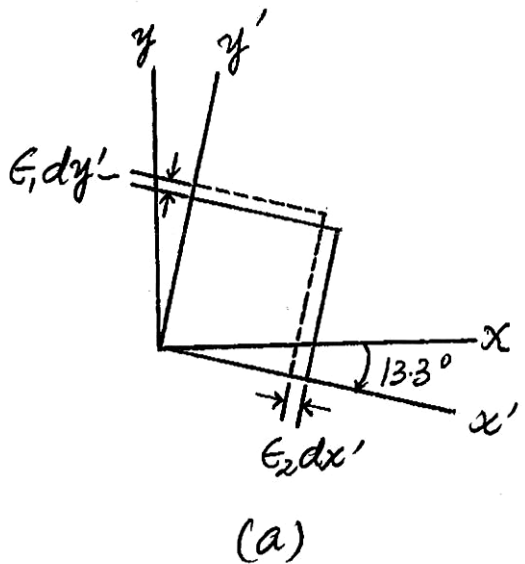

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–14.** The state of strain at the point on a boom of an hydraulic engine crane has components of  $\epsilon_x = 250(10^{-6})$ ,  $\epsilon_y = 300(10^{-6})$ , and  $\gamma_{xy} = -180(10^{-6})$ . Use the strain-transformation equations to determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case, specify the orientation of the element and show how the strains deform the element within the  $x$ - $y$  plane.

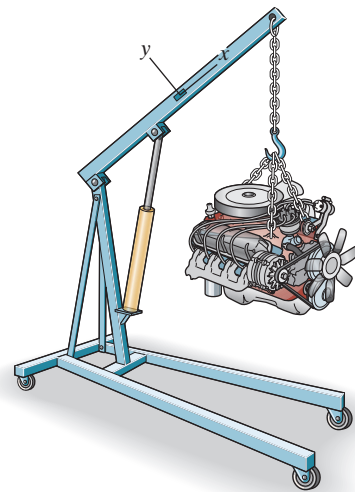

a)

*In-Plane Principal Strain:* Applying Eq. 10–9,

$$\begin{aligned}\epsilon_{1,2} &= \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ &= \left[ \frac{250 + 300}{2} \pm \sqrt{\left(\frac{250 - 300}{2}\right)^2 + \left(\frac{-180}{2}\right)^2} \right] (10^{-6}) \\ &= 275 \pm 93.41\end{aligned}$$

$$\epsilon_1 = 368(10^{-6}) \quad \epsilon_2 = 182(10^{-6})$$

**Ans.**

*Orientation of Principal Strain:* Applying Eq. 10–8,

$$\begin{aligned}\tan 2\theta_P &= \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{-180(10^{-6})}{(250 - 300)(10^{-6})} = 3.600 \\ \theta_P &= 37.24^\circ \quad \text{and} \quad -52.76^\circ\end{aligned}$$

Use Eq. 10–5 to determine which principal strain deforms the element in the  $x'$  direction with  $\theta = 37.24^\circ$ .

$$\begin{aligned}\epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{250 + 300}{2} + \frac{250 - 300}{2} \cos 74.48^\circ + \frac{-180}{2} \sin 74.48^\circ \right] (10^{-6}) \\ &= 182(10^{-6}) = \epsilon_2\end{aligned}$$

Hence,

$$\theta_{P1} = -52.8^\circ \quad \text{and} \quad \theta_{P2} = 37.2^\circ$$

**Ans.**

b)

*Maximum In-Plane Shear Strain:* Applying Eq. 10–11,

$$\begin{aligned}\frac{\gamma_{\text{in-plane}}^{\max}}{2} &= \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2} \\ \gamma_{\text{in-plane}}^{\max} &= 2 \left[ \sqrt{\left(\frac{250 - 300}{2}\right)^2 + \left(\frac{-180}{2}\right)^2} \right] (10^{-6}) \\ &= 187(10^{-6})\end{aligned}$$

**Ans.**



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10–14. Continued

*Orientation of the Maximum In-Plane Shear Strain:* Applying Eq. 10–10,

$$\tan 2\theta_s = -\frac{\varepsilon_x - \varepsilon_y}{\gamma_{xy}} = -\frac{250 - 300}{-180} = -0.2778$$

$$\theta_s = -7.76^\circ \quad \text{and} \quad 82.2^\circ \quad \text{Ans.}$$

The proper sign of  $\gamma_{\text{in-plane}}^{\text{max}}$  can be determined by substituting  $\theta = -7.76^\circ$  into Eq. 10–6.

$$\frac{\gamma_{x'y'}}{2} = -\frac{\varepsilon_x - \varepsilon_y}{2} \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$



$$\begin{aligned} \gamma_{x'y'} &= \{-[250 - 300] \sin (-15.52^\circ) + (-180) \cos (-15.52^\circ)\}(10^{-6}) \\ &= -187(10^{-6}) \end{aligned}$$

*Normal Strain and Shear strain:* In accordance with the sign convention,

$$\varepsilon_x = 250(10^{-6}) \quad \varepsilon_y = 300(10^{-6}) \quad \gamma_{xy} = -180(10^{-6})$$

*Average Normal Strain:* Applying Eq. 10–12,

$$\varepsilon_{\text{avg}} = \frac{\varepsilon_x + \varepsilon_y}{2} = \left[ \frac{250 + 300}{2} \right](10^{-6}) = 275(10^{-6}) \quad \text{Ans.}$$

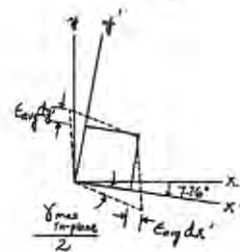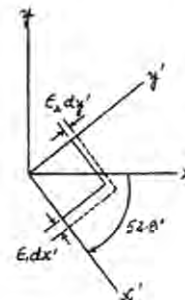

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–16.** The state of strain at a point on a support has components of  $\epsilon_x = 350(10^{-6})$ ,  $\epsilon_y = 400(10^{-6})$ ,  $\gamma_{xy} = -675(10^{-6})$ . Use the strain-transformation equations to determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case specify the orientation of the element and show how the strains deform the element within the  $x$ - $y$  plane.

a)

$$\epsilon_{1,2} = \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2}$$

$$= \frac{350 + 400}{2} \pm \sqrt{\left(\frac{350 - 400}{2}\right)^2 + \left(\frac{-675}{2}\right)^2}$$

$$\epsilon_1 = 713(10^{-6})$$

$$\epsilon_2 = 36.6(10^{-6})$$


$$\tan 2\theta_P = \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{-675}{(350 - 400)}$$

$$\theta_P = 42.9^\circ$$

Ans.

Ans.

Ans.

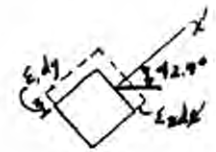

b)

$$\frac{(\gamma_{x'y'})_{\max}}{2} = \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2}$$

$$\frac{(\gamma_{x'y'})_{\max}}{2} = \sqrt{\left(\frac{350 - 400}{2}\right)^2 + \left(\frac{-675}{2}\right)^2}$$

$$(\gamma_{x'y'})_{\max} = 677(10^{-6})$$

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \frac{350 + 400}{2} = 375(10^{-6})$$


$$\tan 2\theta_s = \frac{-(\epsilon_x - \epsilon_y)}{\gamma_{xy}} = \frac{350 - 400}{675}$$

$$\theta_s = -2.12^\circ$$

Ans.

Ans.

Ans.

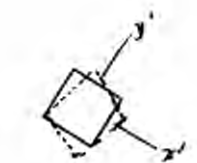

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

•10-17. Solve part (a) of Prob. 10-4 using Mohr's circle.

$$\epsilon_x = 120(10^{-6}) \quad \epsilon_y = -180(10^{-6}) \quad \gamma_{xy} = 150(10^{-6})$$

$$A (120, 75)(10^{-6}) \quad C (-30, 0)(10^{-6})$$

$$R = \left[ \sqrt{[120 - (-30)]^2 + (75)^2} \right] (10^{-6})$$

$$= 167.71 (10^{-6})$$

$$\epsilon_1 = (-30 + 167.71)(10^{-6}) = 138(10^{-6})$$



**Ans.**

$$\epsilon_2 = (-30 - 167.71)(10^{-6}) = -198(10^{-6})$$

**Ans.**

$$\tan 2\theta_p = \left( \frac{75}{30 + 120} \right), \quad \theta_p = 13.3^\circ$$

**Ans.**

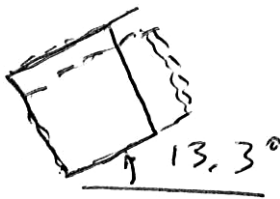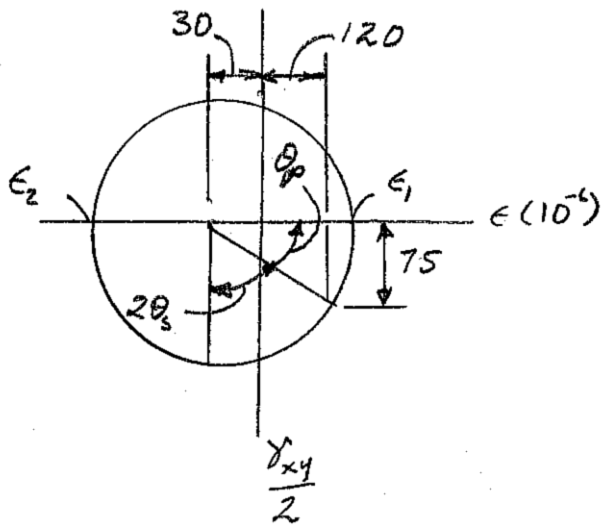

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–18.** Solve part (b) of Prob. 10–4 using Mohr's circle.

$$\epsilon_x = 120(10^{-6}) \quad \epsilon_y = -180(10^{-6}) \quad \gamma_{xy} = 150(10^{-6})$$

$$A (120, 75)(10^{-6}) \quad C (-30, 0)(10^{-6})$$

$$R = [\sqrt{[120 - (-30)]^2 + (75)^2}](10^{-6})$$

$$= 167.71 (10^{-6})$$

$$\frac{\gamma_{xy}}{2 \frac{\max}{\text{in-plane}}} = R = 167.7(10^{-6})$$

$$\gamma_{xy \frac{\max}{\text{in-plane}}} = 335(10^{-6})$$


**Ans.**

$$\epsilon_{\text{avg}} = -30 (10^{-6})$$

**Ans.**

$$\tan 2\theta_s = \frac{120 + 30}{75} \quad \theta_s = -31.7^\circ$$

**Ans.**

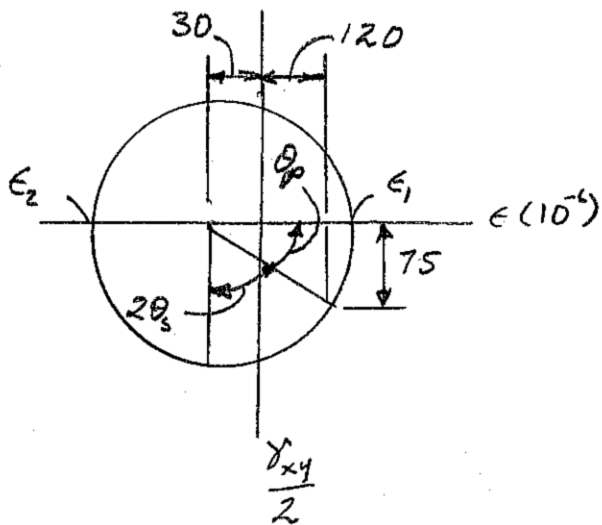

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–19.** Solve Prob. 10–8 using Mohr's circle.

$$\varepsilon_x = -200(10^{-6}) \quad \varepsilon_y = -650(10^{-6}) \quad \gamma_{xy} = -175(10^{-6}) \quad \frac{\gamma_{xy}}{2} = -87.5(10^{-6})$$

$$\theta = 20^\circ, \quad 2\theta = 40^\circ$$

$$A(-200, -87.5)(10^{-6}) \quad C(-425, 0)(10^{-6})$$

$$R = [\sqrt{(-200 - (-425))^2 + 87.5^2}](10^{-6}) = 241.41(10^{-6})$$

$$\tan \alpha = \frac{87.5}{-200 - (-425)}; \quad \alpha = 21.25^\circ$$

$$\phi = 40 + 21.25 = 61.25^\circ$$

$$\varepsilon_{x'} = (-425 + 241.41 \cos 61.25^\circ)(10^{-6}) = -309(10^{-6})$$

**Ans.**



$$\varepsilon_{y'} = (-425 - 241.41 \cos 61.25^\circ)(10^{-6}) = -541(10^{-6})$$

**Ans.**

$$\frac{-\gamma_{x'y'}}{2} = 241.41(10^{-6}) \sin 61.25^\circ$$

$$\gamma_{x'y'} = -423(10^{-6})$$

**Ans.**

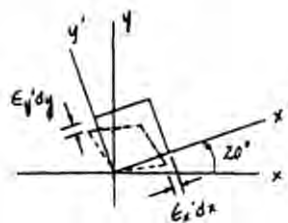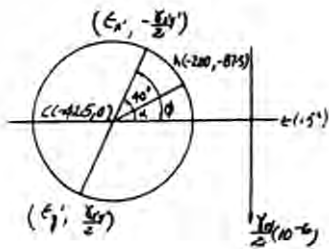

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–20.** Solve Prob. 10–10 using Mohr's circle.

$$\varepsilon_x = 400(10^{-6}) \quad \varepsilon_y = -250(10^{-6}) \quad \gamma_{xy} = 310(10^{-6}) \quad \frac{\gamma_{xy}}{2} = 155(10^{-6}) \quad \theta = 30^\circ$$

$$A(400, 155)(10^{-6}) \quad C(75, 0)(10^{-6})$$

$$R = [\sqrt{(400 - 75)^2 + 155^2}](10^{-6}) = 360.1(10^{-6})$$

$$\tan \alpha = \frac{155}{400 - 75}; \quad \alpha = 25.50^\circ$$

$$\phi = 60 + 25.50 = 85.5^\circ$$

$$\varepsilon_{x'} = (75 + 360.1 \cos 85.5^\circ)(10^{-6}) = 103(10^{-6})$$

**Ans.**



$$\varepsilon_{y'} = (75 - 360.1 \cos 85.5^\circ)(10^{-6}) = 46.7(10^{-6})$$

**Ans.**

$$\frac{\gamma_{x'y'}}{2} = (360.1 \sin 85.5^\circ)(10^{-6})$$

$$\gamma_{x'y'} = 718(10^{-6})$$

**Ans.**

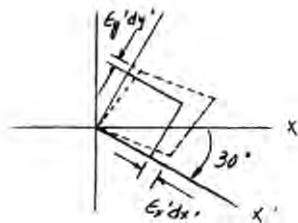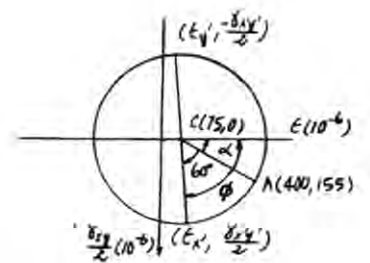

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

•10–21. Solve Prob. 10–14 using Mohr's circle.

**Construction of the Circle:** In accordance with the sign convention,  $\varepsilon_x = 250(10^{-6})$ ,  $\varepsilon_y = 300(10^{-6})$ , and  $\frac{\gamma_{xy}}{2} = -90(10^{-6})$ . Hence,

$$\varepsilon_{\text{avg}} = \frac{\varepsilon_x + \varepsilon_y}{2} = \left( \frac{250 + 300}{2} \right) (10^{-6}) = 275(10^{-6}) \quad \text{Ans.}$$

The coordinates for reference points *A* and *C* are

$$A(250, -90)(10^{-6}) \quad C(275, 0)(10^{-6})$$

The radius of the circle is

$$R = \left( \sqrt{(275 - 250)^2 + 90^2} \right) (10^{-6}) = 93.408$$

**In-Plane Principal Strain:** The coordinates of points *B* and *D* represent  $\varepsilon_1$  and  $\varepsilon_2$ , respectively.

$$\varepsilon_1 = (275 + 93.408)(10^{-6}) = 368(10^{-6}) \quad \text{Ans.}$$

$$\varepsilon_2 = (275 - 93.408)(10^{-6}) = 182(10^{-6}) \quad \text{Ans.}$$

**Orientation of Principal Strain:** From the circle,

$$\tan 2\theta_{P_2} = \frac{90}{275 - 250} = 3.600 \quad 2\theta_{P_2} = 74.48^\circ$$

$$2\theta_{P_1} = 180^\circ - 2\theta_{P_2}$$

$$\theta_{P_1} = \frac{180^\circ - 74.78^\circ}{2} = 52.8^\circ \quad (\text{Clockwise}) \quad \text{Ans.}$$

**Maximum In-Plane Shear Strain:** Represented by the coordinates of point *E* on the circle.




$$\frac{\gamma_{\text{max in-plane}}}{2} = -R = -93.408(10^{-6})$$

$$\gamma_{\text{max in-plane}} = -187(10^{-6}) \quad \text{Ans.}$$

**Orientation of the Maximum In-Plane Shear Strain:** From the circle,

$$\tan 2\theta_s = \frac{275 - 250}{90} = 0.2778$$

$$\theta_s = 7.76^\circ \quad (\text{Clockwise}) \quad \text{Ans.}$$

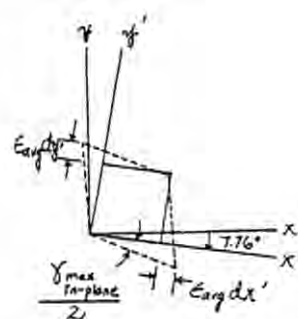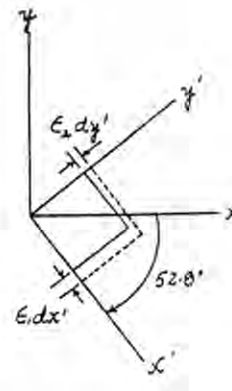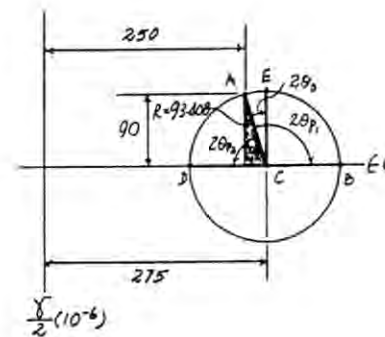

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–22.** The strain at point  $A$  on the bracket has components  $\epsilon_x = 300(10^{-6})$ ,  $\epsilon_y = 550(10^{-6})$ ,  $\gamma_{xy} = -650(10^{-6})$ . Determine (a) the principal strains at  $A$  in the  $x$ - $y$  plane, (b) the maximum shear strain in the  $x$ - $y$  plane, and (c) the absolute maximum shear strain.

$$\epsilon_x = 300(10^{-6}) \quad \epsilon_y = 550(10^{-6}) \quad \gamma_{xy} = -650(10^{-6}) \quad \frac{\gamma_{xy}}{2} = -325(10^{-6})$$

$$A(300, -325)10^{-6} \quad C(425, 0)10^{-6}$$

$$R = [\sqrt{(425 - 300)^2 + (-325)^2}]10^{-6} = 348.2(10^{-6})$$

a)

$$\epsilon_1 = (425 + 348.2)(10^{-6}) = 773(10^{-6})$$

Ans.

$$\epsilon_2 = (425 - 348.2)(10^{-6}) = 76.8(10^{-6})$$

Ans.

b)




$$\gamma_{\max}^{\text{in-plane}} = 2R = 2(348.2)(10^{-6}) = 696(10^{-6})$$

Ans.

c)

$$\frac{\gamma_{\max}^{\text{abs}}}{2} = \frac{773(10^{-6})}{2}; \quad \gamma_{\max}^{\text{abs}} = 773(10^{-6})$$

Ans.

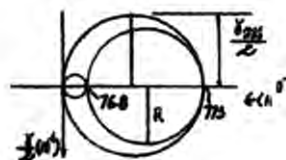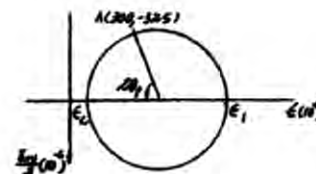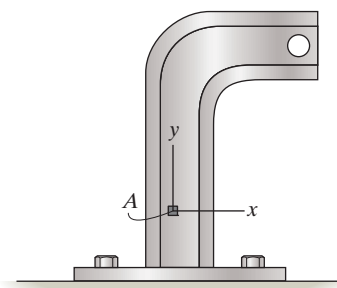

**10–23.** The strain at point  $A$  on the leg of the angle has components  $\epsilon_x = -140(10^{-6})$ ,  $\epsilon_y = 180(10^{-6})$ ,  $\gamma_{xy} = -125(10^{-6})$ . Determine (a) the principal strains at  $A$  in the  $x$ - $y$  plane, (b) the maximum shear strain in the  $x$ - $y$  plane, and (c) the absolute maximum shear strain.

$$\epsilon_x = -140(10^{-6}) \quad \epsilon_y = 180(10^{-6}) \quad \gamma_{xy} = -125(10^{-6}) \quad \frac{\gamma_{xy}}{2} = -62.5(10^{-6})$$

$$A(-140, -62.5)10^{-6} \quad C(20, 0)10^{-6}$$

$$R = [\sqrt{(20 - (-140))^2 + (-62.5)^2}]10^{-6} = 171.77(10^{-6})$$

a)

$$\epsilon_1 = (20 + 171.77)(10^{-6}) = 192(10^{-6})$$

Ans.



$$\epsilon_2 = (20 - 171.77)(10^{-6}) = -152(10^{-6})$$

Ans.

(b, c)

$$\gamma_{\max}^{\text{abs}} = \gamma_{\max}^{\text{in-plane}} = 2R = 2(171.77)(10^{-6}) = 344(10^{-6})$$


Ans.

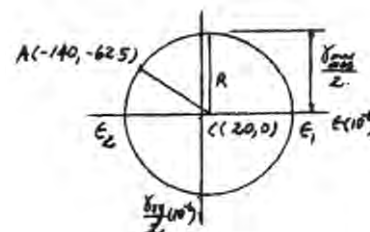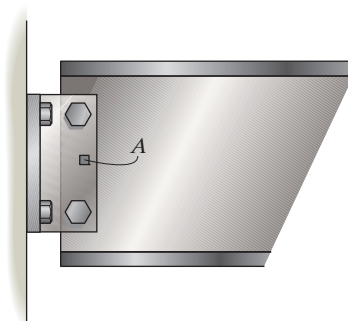



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10-24.** The strain at point  $A$  on the pressure-vessel wall has components  $\epsilon_x = 480(10^{-6})$ ,  $\epsilon_y = 720(10^{-6})$ ,  $\gamma_{xy} = 650(10^{-6})$ . Determine (a) the principal strains at  $A$ , in the  $x$ - $y$  plane, (b) the maximum shear strain in the  $x$ - $y$  plane, and (c) the absolute maximum shear strain.

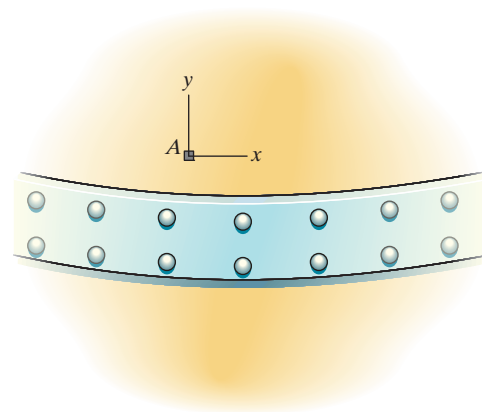

$$\epsilon_x = 480(10^{-6}) \quad \epsilon_y = 720(10^{-6}) \quad \gamma_{xy} = 650(10^{-6}) \quad \frac{\gamma_{xy}}{2} = 325(10^{-6})$$

$$A(480, 325)10^{-6} \quad C(600, 0)10^{-6}$$

$$R = (\sqrt{(600 - 480)^2 + 325^2})10^{-6} = 346.44(10^{-6})$$

a)

$$\epsilon_1 = (600 + 346.44)10^{-6} = 946(10^{-6})$$

**Ans.**

$$\epsilon_2 = (600 - 346.44)10^{-6} = 254(10^{-6})$$

**Ans.**

b)


$$\frac{\gamma_{\max}}{\text{in-plane}} = 2R = 2(346.44)10^{-6} = 693(10^{-6})$$

**Ans.**

c)


$$\frac{\gamma_{\max}^{\text{abs}}}{2} = \frac{946(10^{-6})}{2}; \quad \gamma_{\max}^{\text{abs}} = 946(10^{-6})$$

**Ans.**

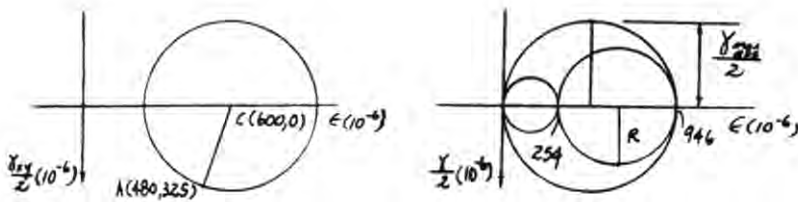

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–25.** The  $60^\circ$  strain rosette is mounted on the bracket. The following readings are obtained for each gauge:  $\epsilon_a = -100(10^{-6})$ ,  $\epsilon_b = 250(10^{-6})$ , and  $\epsilon_c = 150(10^{-6})$ . Determine (a) the principal strains and (b) the maximum in-plane shear strain and associated average normal strain. In each case show the deformed element due to these strains.

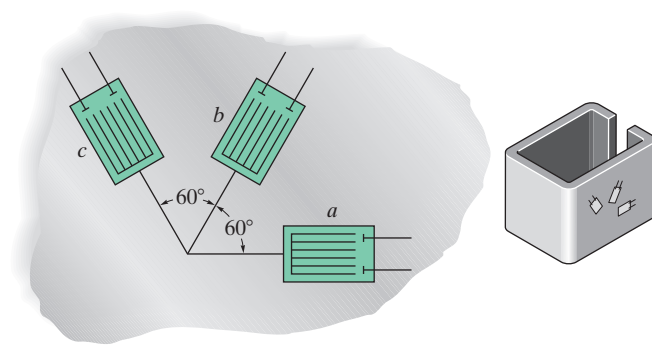

This is a  $60^\circ$  strain rosette. Thus,

$$\epsilon_x = \epsilon_a = -100(10^{-6})$$

$$\epsilon_y = \frac{1}{3}(2\epsilon_b + 2\epsilon_c - \epsilon_a)$$

$$= \frac{1}{3}[2(250) + 2(150) - (-100)](10^{-6})$$

$$= 300(10^{-6})$$

$$\gamma_{xy} = \frac{2}{\sqrt{3}}(\epsilon_b - \epsilon_c) = \frac{2}{\sqrt{3}}(250 - 150)(10^{-6}) = 115.47(10^{-6})$$

In accordance to the established sign convention,  $\epsilon_x = -100(10^{-6})$ ,  $\epsilon_y = 300(10^{-6})$  and  $\frac{\gamma_{xy}}{2} = 57.74(10^{-6})$ .

Thus,

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left(\frac{-100 + 300}{2}\right)(10^{-6}) = 100(10^{-6})$$

**Ans.**

Then, the coordinates of reference point *A* and Center *C* of the circle are

$$A(-100, 57.74)(10^{-6}) \quad C(100, 0)(10^{-6})$$

Thus, the radius of the circle is

$$R = CA = \left(\sqrt{(-100 - 100)^2 + 208.16}\right)(10^{-6}) = 208.17(10^{-6})$$

Using these result, the circle is shown in Fig. *a*.

The coordinates of points *B* and *D* represent  $\epsilon_1$  and  $\epsilon_2$  respectively.

$$\epsilon_1 = (100 + 208.17)(10^{-6}) = 308(10^{-6})$$

**Ans.**

$$\epsilon_2 = (100 - 208.17)(10^{-6}) = -108(10^{-6})$$

**Ans.**

Referring to the geometry of the circle,

$$\tan 2(\theta_P)_2 = \frac{57.74(10^{-6})}{(100 + 100)(10^{-6})} = 0.2887$$

$$(\theta_P)_2 = 8.05^\circ \quad (\text{Clockwise})$$

**Ans.**

The deformed element for the state of principal strain is shown in Fig. *b*.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-25. Continued**

The coordinates for point  $E$  represent  $\epsilon_{\text{avg}}$  and  $\frac{\gamma_{\text{max in-plane}}}{2}$ . Thus,

$$\frac{\gamma_{\text{max in-plane}}}{2} = R = 208.17(10^{-6})$$

$$\gamma_{\text{max in-plane}} = 416(10^{-6})$$

**Ans.**




Referring to the geometry of the circle,

$$\tan 2\theta_s = \frac{100 + 100}{57.74}$$


$$\theta_s = 36.9^\circ \quad (\text{Counter Clockwise})$$

**Ans.**

The deformed element for the state of maximum In-plane shear strain is shown in Fig. c.

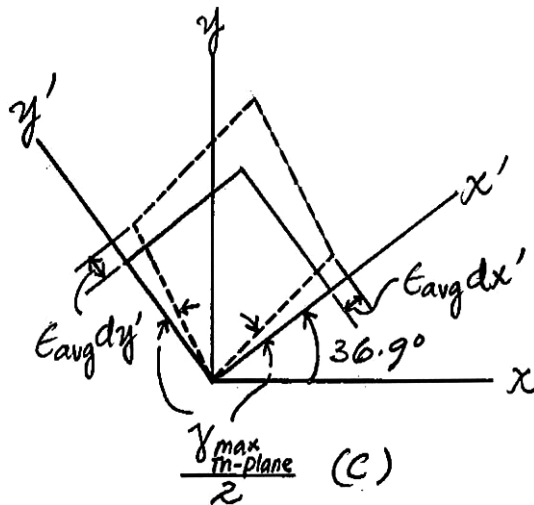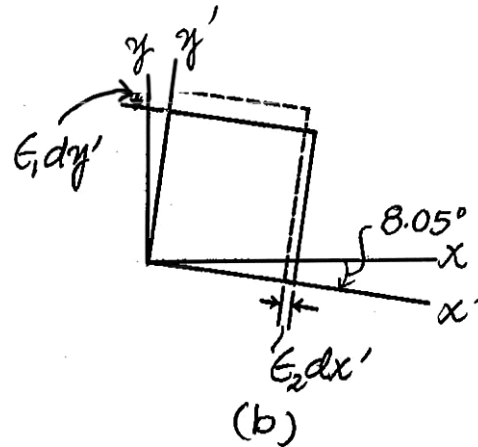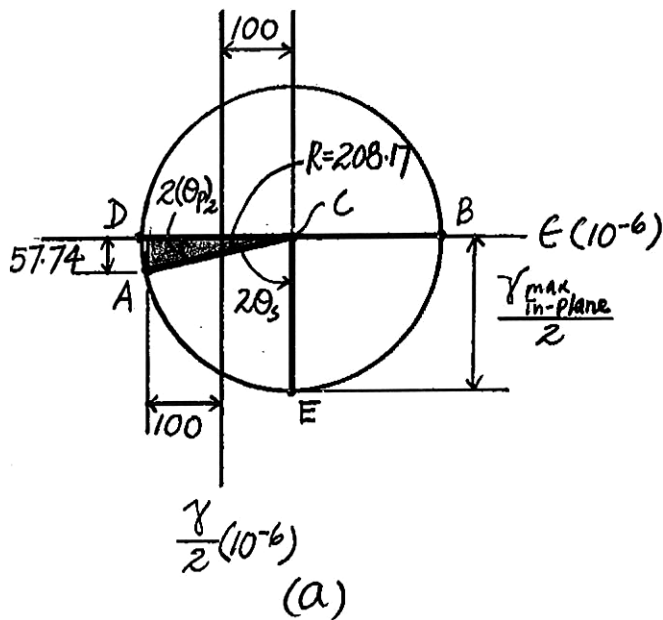

**10–26.** The  $60^\circ$  strain rosette is mounted on a beam. The following readings are obtained for each gauge:  $\epsilon_a = 200(10^{-6})$ ,  $\epsilon_b = -450(10^{-6})$ , and  $\epsilon_c = 250(10^{-6})$ . Determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case show the deformed element due to these strains.

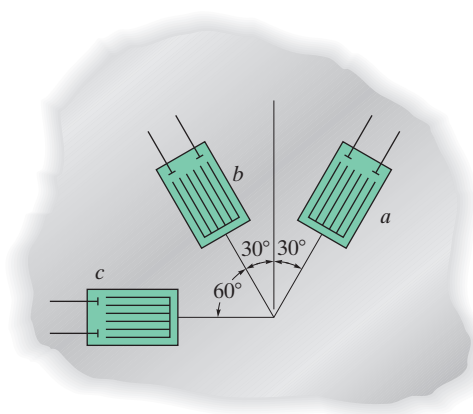

With  $\theta_a = 60^\circ$ ,  $\theta_b = 120^\circ$  and  $\theta_c = 180^\circ$ ,

$$\epsilon_a = \epsilon_x \cos^2 \theta_a + \epsilon_y \sin^2 \theta_a + \gamma_{xy} \sin \theta_a \cos \theta_a$$

$$200(10^{-6}) = \epsilon_x \cos^2 60^\circ + \epsilon_y \sin^2 60^\circ + \gamma_{xy} \sin 60^\circ \cos 60^\circ$$

$$0.25\epsilon_x + 0.75\epsilon_y + 0.4330 \gamma_{xy} = 200(10^{-6}) \quad (1)$$

$$\epsilon_b = \epsilon_x \cos^2 \theta_b + \epsilon_y \sin^2 \theta_b + \gamma_{xy} \sin \theta_b \cos \theta_b$$

$$-450(10^{-6}) = \epsilon_x \cos^2 120^\circ + \epsilon_y \sin^2 120^\circ + \gamma_{xy} \sin 120^\circ \cos 120^\circ$$

$$0.25\epsilon_x + 0.75\epsilon_y - 0.4330 \gamma_{xy} = -450(10^{-6}) \quad (2)$$

$$\epsilon_c = \epsilon_x \cos^2 \theta_c + \epsilon_y \sin^2 \theta_c + \gamma_{xy} \sin \theta_c \cos \theta_c$$

$$250(10^{-6}) = \epsilon_x \cos^2 180^\circ + \epsilon_y \sin^2 180^\circ + \gamma_{xy} \sin 180^\circ \cos 180^\circ$$

$$\epsilon_x = 250(10^{-6})$$

Substitute this result into Eqs. (1) and (2) and solve them,

$$\epsilon_y = -250(10^{-6}) \quad \gamma_{xy} = 750.56(10^{-6})$$

In accordance to the established sign convention,  $\epsilon_x = 250(10^{-6})$ ,  $\epsilon_y = -250(10^{-6})$ , and  $\frac{\gamma_{xy}}{2} = 375.28(10^{-6})$ . Thus,

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left[ \frac{250 + (-250)}{2} \right] (10^{-6}) = 0 \quad \text{Ans.}$$

Then, the coordinates of the reference point  $A$  and center  $C$  of the circle are

$$A(250, 375.28)(10^{-6}) \quad C(0, 0)$$

Thus, the radius of the circle is

$$R = CA = \left( \sqrt{(250 - 0)^2 + 375.28^2} \right) (10^{-6}) = 450.92(10^{-6})$$

Using these results, the circle is shown in Fig.  $a$ .

The coordinates for points  $B$  and  $D$  represent  $\epsilon_1$  and  $\epsilon_2$ , respectively. Thus,

$$\epsilon_1 = 451(10^{-6}) \quad \epsilon_2 = -451(10^{-6}) \quad \text{Ans.}$$

Referring to the geometry of the circle,

$$\tan 2(\theta_P)_1 = \frac{375.28}{250} = 1.5011$$

$$(\theta_P)_1 = 28.2^\circ \quad (\text{Counter Clockwise}) \quad \text{Ans.}$$

The deformed element for the state of principal strains is shown in Fig.  $b$ .

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10-26. Continued

The coordinates of point  $E$  represent  $\epsilon_{\text{avg}}$  and  $\frac{\gamma_{\text{max in-plane}}}{2}$ . Thus,

$$\frac{\gamma_{\text{max in-plane}}}{2} = R = 450.92(10^{-6}) \quad \gamma_{\text{max in-plane}} = 902(10^{-6})$$




Ans.

Referring to the geometry of the circle,


$$\tan 2\theta_s = \frac{250}{375.28} = 0.6662$$

$$\theta_s = 16.8^\circ \quad (\text{Clockwise})$$

Ans.

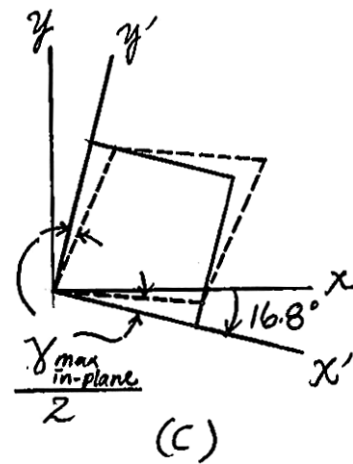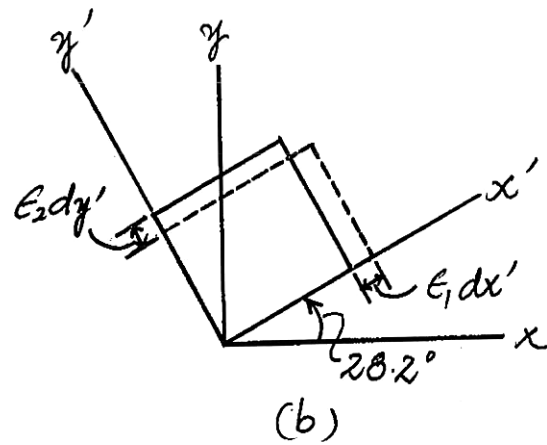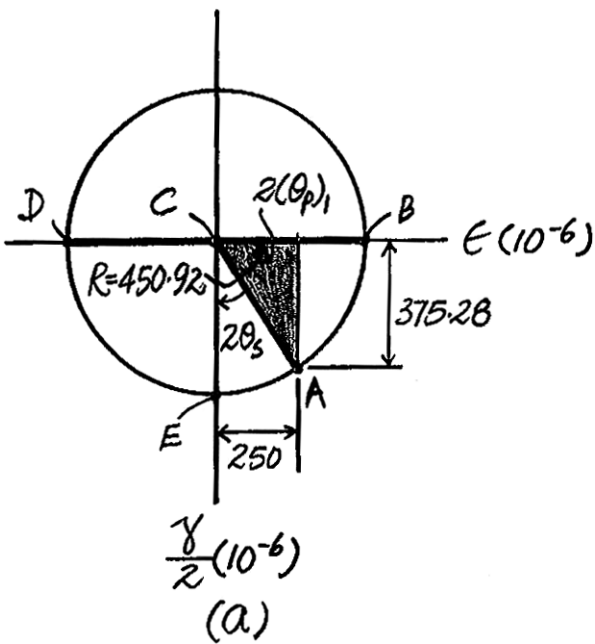

**10–27.** The  $45^\circ$  strain rosette is mounted on a steel shaft. The following readings are obtained from each gauge:  $\epsilon_a = 300(10^{-6})$ ,  $\epsilon_b = -250(10^{-6})$ , and  $\epsilon_c = -450(10^{-6})$ . Determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case show the deformed element due to these strains.

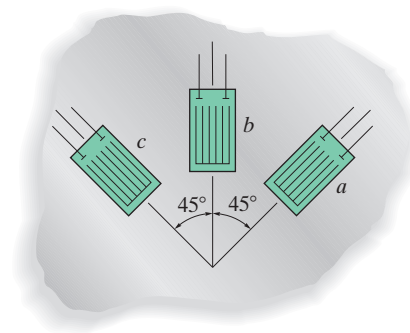

With  $\theta_a = 45^\circ$ ,  $\theta_b = 90^\circ$  and  $\theta_c = 135^\circ$ ,

$$\epsilon_a = \epsilon_x \cos^2 \theta_a + \epsilon_y \sin^2 \theta_a + \gamma_{xy} \sin \theta_a \cos \theta_a$$

$$300(10^{-6}) = \epsilon_x \cos^2 45^\circ + \epsilon_y \sin^2 45^\circ + \gamma_{xy} \sin 45^\circ \cos 45^\circ$$

$$\epsilon_x + \epsilon_y + \gamma_{xy} = 600(10^{-6}) \quad (1)$$

$$\epsilon_b = \epsilon_x \cos^2 \theta_b + \epsilon_y \sin^2 \theta_b + \gamma_{xy} \sin \theta_b \cos \theta_b$$

$$-250(10^{-6}) = \epsilon_x \cos^2 90^\circ + \epsilon_y \sin^2 90^\circ + \gamma_{xy} \sin 90^\circ \cos 90^\circ$$

$$\epsilon_y = -250(10^{-6})$$

$$\epsilon_c = \epsilon_x \cos^2 \theta_c + \epsilon_y \sin^2 \theta_c + \gamma_{xy} \sin \theta_c \cos \theta_c$$

$$-450(10^{-6}) = \epsilon_x \cos^2 135^\circ + \epsilon_y \sin^2 135^\circ + \gamma_{xy} \sin 135^\circ \cos 135^\circ$$

$$\epsilon_x + \epsilon_y - \gamma_{xy} = -900(10^{-6}) \quad (2)$$

Substitute the result of  $\epsilon_y$  into Eq. (1) and (2) and solve them

$$\epsilon_x = 100(10^{-6}) \quad \gamma_{xy} = 750(10^{-6})$$

In accordance to the established sign convention,  $\epsilon_x = 100(10^{-6})$ ,  $\epsilon_y = -250(10^{-6})$

and  $\frac{\gamma_{xy}}{2} = 375(10^{-6})$ . Thus,

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left[ \frac{100 + (-250)}{2} \right] (10^{-6}) = -75(10^{-6}) \quad \text{Ans.}$$

Then, the coordinates of the reference point  $A$  and the center  $C$  of the circle are

$$A(100, 375)(10^{-6}) \quad C(-75, 0)(10^{-6})$$

Thus, the radius of the circle is

$$R = CA = \left( \sqrt{[100 - (-75)]^2 + 375^2} \right) (10^{-6}) = 413.82(10^{-6})$$

Using these results, the circle is shown in Fig.  $a$ .

The Coordinates of points  $B$  and  $D$  represent  $\epsilon_1$  and  $\epsilon_2$ , respectively. Thus,

$$\epsilon_1 = (-75 + 413.82)(10^{-6}) = 339(10^{-6}) \quad \text{Ans.}$$

$$\epsilon_2 = (-75 - 413.82)(10^{-6}) = -489(10^{-6}) \quad \text{Ans.}$$

Referring to the geometry of the circle

$$\tan 2(\theta_p)_1 = \frac{375}{100 + 75} = 2.1429$$

$$(\theta_p)_1 = 32.5^\circ \quad (\text{Counter Clockwise}) \quad \text{Ans.}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10-27. Continued

The deformed element for the state of principal strains is shown in Fig. *b*.

The coordinates of point *E* represent  $\epsilon_{\text{avg}}$  and  $\frac{\gamma_{\text{max in-plane}}}{2}$ . Thus

$$\frac{\gamma_{\text{max in-plane}}}{2} = R = 413.82(10^6) \quad \gamma_{\text{max in-plane}} = 828(10^{-6})$$




Ans.

Referring to the geometry of the circle

$$\tan 2\theta_s = \frac{-100 + 75}{375} = 0.4667$$


$$\theta_s = 12.5^\circ \quad (\text{Clockwise})$$

Ans.

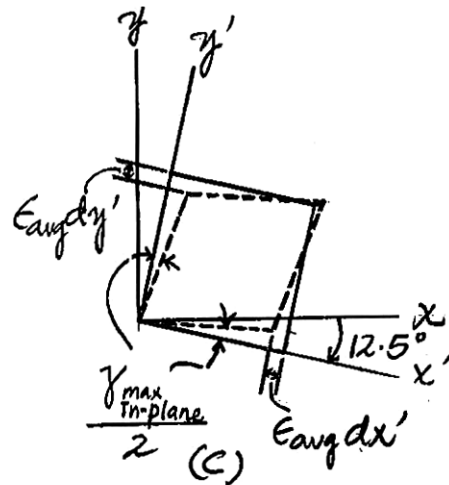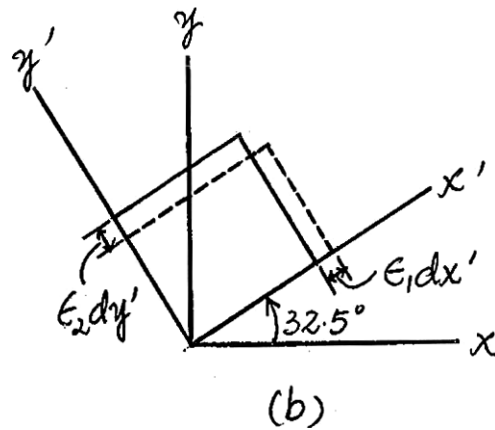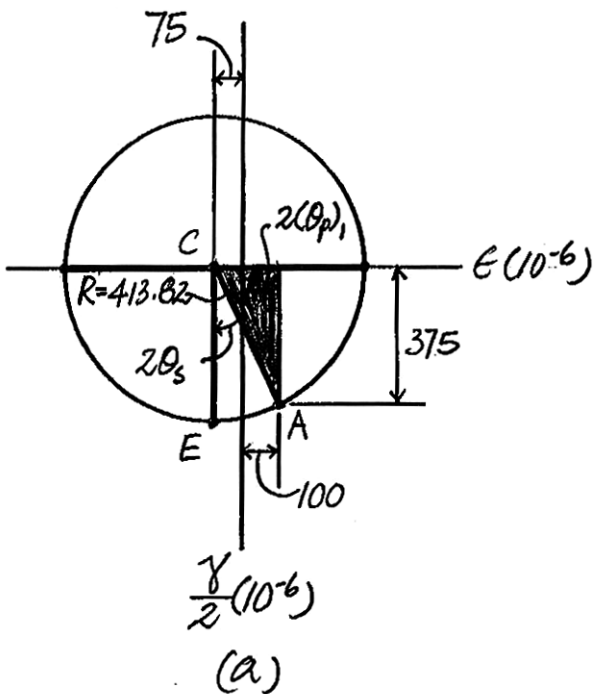

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10-28.** The  $45^\circ$  strain rosette is mounted on the link of the backhoe. The following readings are obtained from each gauge:  $\epsilon_a = 650(10^{-6})$ ,  $\epsilon_b = -300(10^{-6})$ ,  $\epsilon_c = 480(10^{-6})$ . Determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and associated average normal strain.

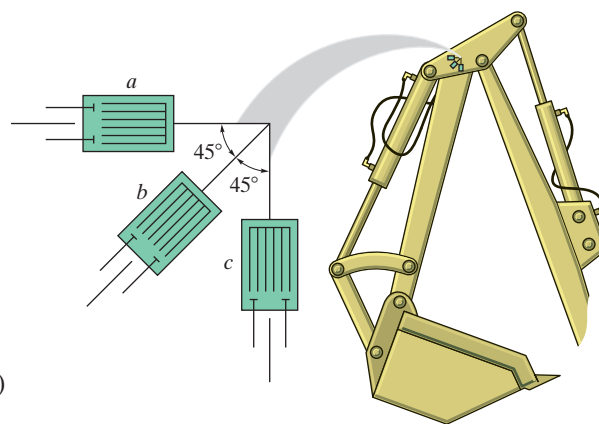

$$\epsilon_a = 650(10^{-6}); \quad \epsilon_b = -300(10^{-6}); \quad \epsilon_c = 480(10^{-6})$$

$$\theta_a = 180^\circ; \quad \theta_b = 225^\circ \quad \theta_c = 270^\circ$$

$$\text{Applying Eq. 10-16, } \epsilon = \epsilon_x \cos^2 \theta + \epsilon_y \sin^2 \theta + \gamma_{xy} \sin \theta \cos \theta$$

$$650(10^{-6}) = \epsilon_x \cos^2 (180^\circ) + \epsilon_y \sin^2 (180^\circ) + \gamma_{xy} \sin (180^\circ) \cos (180^\circ)$$

$$\epsilon_x = 650(10^{-6})$$

$$480(10^{-6}) = \epsilon_x \cos^2 (270^\circ) + \epsilon_y \sin^2 (270^\circ) + \gamma_{xy} \sin (270^\circ) \cos (270^\circ)$$

$$\epsilon_y = 480(10^{-6})$$

$$-300(10^{-6}) = 650(10^{-6}) \cos^2 (225^\circ) + 480(10^{-6}) \sin^2 (225^\circ) + \gamma_{xy} \sin (225^\circ) \cos (225^\circ)$$

$$\gamma_{xy} = -1730(10^{-6})$$

$$\text{Therefore, } \epsilon_x = 650(10^{-6}) \quad \epsilon_y = 480(10^{-6}) \quad \gamma_{xy} = -1730(10^{-6})$$

$$\frac{\gamma_{xy}}{2} = -865(10^{-6})$$

Mohr's circle:

$$A(650, -865) 10^{-6} \quad C(565, 0) 10^{-6}$$

$$R = CA = [\sqrt{(650 - 565)^2 + 865^2}] 10^{-6} = 869.17(10^{-6})$$

$$(a) \quad \epsilon_1 = [565 + 869.17] 10^{-6} = 1434(10^{-6})$$

$$\epsilon_2 = [565 - 869.17] 10^{-6} = -304(10^{-6})$$

$$(b) \quad \gamma_{\max \text{ in-plane}} = 2R = 2(869.17)(10^{-6}) = 1738(10^{-6})$$


$$\epsilon_{\text{avg}} = 565(10^{-6})$$

Ans.

Ans.

Ans.

Ans.

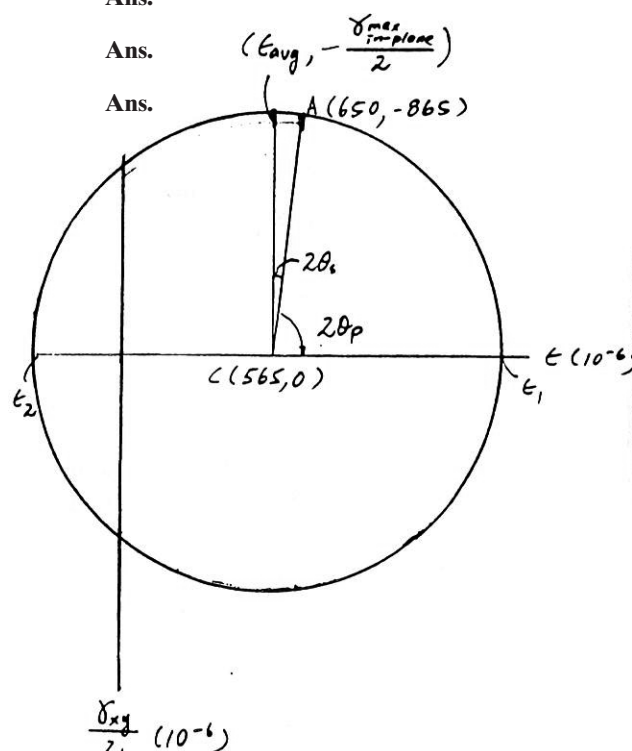



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–30.** For the case of plane stress, show that Hooke's law can be written as

$$\sigma_x = \frac{E}{(1 - \nu^2)}(\epsilon_x + \nu\epsilon_y), \quad \sigma_y = \frac{E}{(1 - \nu^2)}(\epsilon_y + \nu\epsilon_x)$$

*Generalized Hooke's Law:* For plane stress,  $\sigma_z = 0$ . Applying Eq. 10-18,

$$\begin{aligned} \epsilon_x &= \frac{1}{E}(\sigma_x - \nu\sigma_y) \\ \nu E \epsilon_x &= (\sigma_x - \nu\sigma_y)\nu \\ \nu E \epsilon_x &= \nu\sigma_x - \nu^2\sigma_y \end{aligned} \quad [1]$$

$$\begin{aligned} \epsilon_y &= \frac{1}{E}(\sigma_y - \nu\sigma_x) \\ E \epsilon_y &= -\nu\sigma_x + \sigma_y \end{aligned} \quad [2]$$

Adding Eq [1] and Eq.[2] yields.

$$\begin{aligned} \nu E \epsilon_x - E \epsilon_y &= \sigma_y - \nu^2\sigma_y \\ \sigma_y &= \frac{E}{1 - \nu^2}(\nu\epsilon_x + \epsilon_y) \end{aligned} \quad (Q.E.D.)$$

Substituting  $\sigma_y$  into Eq. [2]

$$\begin{aligned} E \epsilon_y &= -\nu\sigma_x + \frac{E}{1 - \nu^2}(\nu\epsilon_x + \epsilon_y) \\ \sigma_x &= \frac{E(\nu\epsilon_x + \epsilon_y)}{\nu(1 - \nu^2)} - \frac{E\epsilon_y}{\nu} \\ &= \frac{E\nu\epsilon_x + E\epsilon_y - E\epsilon_y + E\epsilon_y\nu^2}{\nu(1 - \nu^2)} \\ &= \frac{E}{1 - \nu^2}(\epsilon_x + \nu\epsilon_y) \end{aligned} \quad (Q.E.D.)$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–31.** Use Hooke's law, Eq. 10–18, to develop the strain-transformation equations, Eqs. 10–5 and 10–6, from the stress-transformation equations, Eqs. 9–1 and 9–2.

Stress transformation equations:

$$\sigma_{x'} = \frac{\sigma_x + \sigma_y}{2} + \frac{\sigma_x - \sigma_y}{2} \cos 2\theta + \tau_{xy} \sin 2\theta \quad (1)$$

$$\tau_{x'y'} = \frac{\sigma_x - \sigma_y}{2} \sin 2\theta + \tau_{xy} \cos 2\theta \quad (2)$$

$$\sigma_{y'} = \frac{\sigma_x + \sigma_y}{2} - \frac{\sigma_x - \sigma_y}{2} \cos 2\theta - \tau_{xy} \sin 2\theta \quad (3)$$

Hooke's Law:

$$\varepsilon_x = \frac{\sigma_x}{E} - \frac{\nu \sigma_y}{E} \quad (4)$$

$$\varepsilon_y = \frac{-\nu \sigma_x}{E} + \frac{\sigma_y}{E} \quad (5)$$

$$\tau_{xy} = G \gamma_{xy} \quad (6)$$

$$G = \frac{E}{2(1 + \nu)} \quad (7)$$

From Eqs. (4) and (5)

$$\varepsilon_x + \varepsilon_y = \frac{(1 - \nu)(\sigma_x + \sigma_y)}{E} \quad (8)$$

$$\varepsilon_x - \varepsilon_y = \frac{(1 + \nu)(\sigma_x - \sigma_y)}{E} \quad (9)$$

From Eqs. (6) and (7)

$$\tau_{xy} = \frac{E}{2(1 + \nu)} \gamma_{xy} \quad (10)$$

From Eq. (4)

$$\varepsilon_{x'} = \frac{\sigma_{x'}}{E} - \frac{\nu \sigma_{y'}}{E} \quad (11)$$

Substitute Eqs. (1) and (3) into Eq. (11)

$$\varepsilon_{x'} = \frac{(1 - \nu)(\sigma_x - \sigma_y)}{2E} + \frac{(1 + \nu)(\sigma_x - \sigma_y)}{2E} \cos 2\theta + \frac{(1 + \nu)\tau_{xy} \sin 2\theta}{E} \quad (12)$$

By using Eqs. (8), (9) and (10) and substitute into Eq. (12),

$$\varepsilon_{x'} = \frac{\varepsilon_x + \varepsilon_y}{2} + \frac{\varepsilon_x - \varepsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \quad \text{QED}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10–31. Continued

From Eq. (6).

$$\gamma_{x'y'} = G \gamma_{x'y'} = \frac{E}{2(1+\nu)} \gamma_{x'y'} \quad (13)$$

Substitute Eqs. (13), (6) and (9) into Eq. (2),

$$\frac{E}{2(1+\nu)} \gamma_{x'y'} = -\frac{E(\epsilon_x - \epsilon_y)}{2(1+\nu)} \sin 2\theta + \frac{E}{2(1+\nu)} \gamma_{xy} \cos 2\theta$$

$$\frac{\gamma_{x'y'}}{2} = -\frac{(\epsilon_x - \epsilon_y)}{2} \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta \quad \text{QED}$$

**\*10–32.** A bar of copper alloy is loaded in a tension machine and it is determined that  $\epsilon_x = 940(10^{-6})$  and  $\sigma_x = 14$  ksi,  $\sigma_y = 0$ ,  $\sigma_z = 0$ . Determine the modulus of elasticity,  $E_{cu}$ , and the dilatation,  $e_{cu}$ , of the copper.  $\nu_{cu} = 0.35$ .

$$\epsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)]$$

$$940(10^{-6}) = \frac{1}{E_{cu}} [14(10^3) - 0.35(0 + 0)]$$

$$E_{cu} = 14.9(10^3) \text{ ksi} \quad \text{Ans.}$$

$$\epsilon_{cu} = \frac{1-2\nu}{E} (\sigma_x + \sigma_y + \sigma_z) = \frac{1-2(0.35)}{14.9(10^3)} (14 + 0 + 0) = 0.282(10^{-3}) \quad \text{Ans.}$$

**•10–33.** The principal strains at a point on the aluminum fuselage of a jet aircraft are  $\epsilon_1 = 780(10^{-6})$  and  $\epsilon_2 = 400(10^{-6})$ . Determine the associated principal stresses at the point in the same plane.  $E_{al} = 10(10^3)$  ksi,  $\nu_{al} = 0.33$ . *Hint:* See Prob. 10–30.

Plane stress,  $\sigma_3 = 0$

See Prob 10-30,

$$\begin{aligned} \sigma_1 &= \frac{E}{1-\nu^2} (\epsilon_1 + \nu\epsilon_2) \\ &= \frac{10(10^3)}{1-0.33^2} (780(10^{-6}) + 0.33(400)(10^{-6})) = 10.2 \text{ ksi} \quad \text{Ans.} \end{aligned}$$

$$\begin{aligned} \sigma_2 &= \frac{E}{1-\nu^2} (\epsilon_2 + \nu\epsilon_1) \\ &= \frac{10(10^3)}{1-0.33^2} (400(10^{-6}) + 0.33(780)(10^{-6})) = 7.38 \text{ ksi} \quad \text{Ans.} \end{aligned}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–34.** The rod is made of aluminum 2014-T6. If it is subjected to the tensile load of 700 N and has a diameter of 20 mm, determine the absolute maximum shear strain in the rod at a point on its surface.



*Normal Stress:* For uniaxial loading,  $\sigma_y = \sigma_z = 0$ .

$$\sigma_x = \frac{P}{A} = \frac{700}{\frac{\pi}{4}(0.02^2)} = 2.228 \text{ MPa}$$

*Normal Strain:* Applying the generalized Hooke's Law.

$$\begin{aligned}\epsilon_x &= \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)] \\ &= \frac{1}{73.1(10^9)} [2.228(10^6) - 0] \\ &= 30.48(10^{-6})\end{aligned}$$

$$\begin{aligned}\epsilon_y &= \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)] \\ &= \frac{1}{73.1(10^9)} [0 - 0.35(2.228(10^6) + 0)] \\ &= -10.67(10^{-6})\end{aligned}$$

$$\begin{aligned}\epsilon_z &= \frac{1}{E} [\sigma_z - \nu(\sigma_x + \sigma_y)] \\ &= \frac{1}{73.1(10^9)} [0 - 0.35(2.228(10^6) + 0)] \\ &= -10.67(10^{-6})\end{aligned}$$

Therefore,

$$\epsilon_{\max} = 30.48(10^{-6}) \quad \epsilon_{\min} = -10.67(10^{-6})$$

*Absolute Maximum Shear Strain:*

$$\begin{aligned}\gamma_{\max}^{\text{abs}} &= \epsilon_{\max} - \epsilon_{\min} \\ &= [30.48 - (-10.67)](10^{-6}) = 41.1(10^{-6})\end{aligned}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–35.** The rod is made of aluminum 2014-T6. If it is subjected to the tensile load of 700 N and has a diameter of 20 mm, determine the principal strains at a point on the surface of the rod.



*Normal Stress:* For uniaxial loading,  $\sigma_y = \sigma_z = 0$ .

$$\sigma_x = \frac{P}{A} = \frac{700}{\frac{\pi}{4}(0.02^2)} = 2.228 \text{ MPa}$$

*Normal Strains:* Applying the generalized Hooke's Law.

$$\begin{aligned}\epsilon_x &= \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)] \\ &= \frac{1}{73.1(10^9)} [2.228(10^6) - 0] \\ &= 30.48(10^{-6}) \\ \epsilon_y &= \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)] \\ &= \frac{1}{73.1(10^9)} [0 - 0.35(2.228(10^6) + 0)] \\ &= -10.67(10^{-6}) \\ \epsilon_z &= \frac{1}{E} [\sigma_z - \nu(\sigma_x + \sigma_y)] \\ &= \frac{1}{73.1(10^9)} [0 - 0.35(2.228(10^6) + 0)] \\ &= -10.67(10^{-6})\end{aligned}$$


*Principal Strains:* From the results obtained above,

$$\epsilon_{\max} = 30.5(10^{-6}) \quad \epsilon_{\text{int}} = \epsilon_{\min} = -10.7(10^{-6})$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–36.** The steel shaft has a radius of 15 mm. Determine the torque  $T$  in the shaft if the two strain gauges, attached to the surface of the shaft, report strains of  $\epsilon_{x'} = -80(10^{-6})$  and  $\epsilon_{y'} = 80(10^{-6})$ . Also, compute the strains acting in the  $x$  and  $y$  directions.  $E_{st} = 200 \text{ GPa}$ ,  $\nu_{st} = 0.3$ .

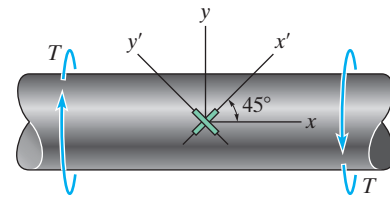

$$\epsilon_{x'} = -80(10^{-6}) \quad \epsilon_{y'} = 80(10^{-6})$$

Pure shear

$$\epsilon_x = \epsilon_y = 0$$

**Ans.**

$$\epsilon_{x'} = \epsilon_x \cos^2 \theta + \epsilon_y \sin^2 \theta + \gamma_{xy} \sin \theta \cos \theta$$

$$\theta = 45^\circ$$

$$-80(10^{-6}) = 0 + 0 + \gamma_{xy} \sin 45^\circ \cos 45^\circ$$

$$\gamma_{xy} = -160(10^{-6})$$

**Ans.**

$$\text{Also, } \theta = 135^\circ$$

$$80(10^{-6}) = 0 + 0 + \gamma \sin 135^\circ \cos 135^\circ$$

$$\gamma_{xy} = -160(10^{-6})$$

$$G = \frac{E}{2(1 + \nu)} = \frac{200(10^9)}{2(1 + 0.3)} = 76.923(10^9)$$

$$\tau = G\gamma = 76.923(10^9)(160)(10^{-6}) = 12.308(10^6) \text{ Pa}$$

$$T = \frac{\tau J}{c} = \frac{12.308(10^6) \left( \frac{\pi}{2} \right) (0.015)^4}{0.015} = 65.2 \text{ N} \cdot \text{m}$$

**Ans.**

**10–37.** Determine the bulk modulus for each of the following materials: (a) rubber,  $E_r = 0.4 \text{ ksi}$ ,  $\nu_r = 0.48$ , and (b) glass,  $E_g = 8(10^3) \text{ ksi}$ ,  $\nu_g = 0.24$ .

a) For rubber:

$$K_r = \frac{E_r}{3(1 - 2\nu_r)} = \frac{0.4}{3[1 - 2(0.48)]} = 3.33 \text{ ksi}$$

**Ans.**


b) For glass:

$$K_g = \frac{E_g}{3(1 - 2\nu_g)} = \frac{8(10^3)}{3[1 - 2(0.24)]} = 5.13(10^3) \text{ ksi}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–38.** The principal stresses at a point are shown in the figure. If the material is A-36 steel, determine the principal strains.

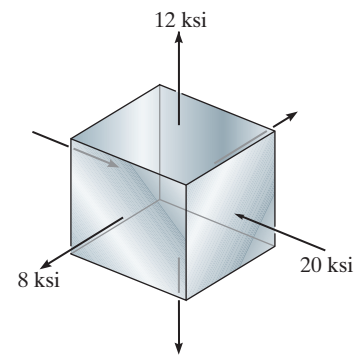


$$\varepsilon_1 = \frac{1}{E} [\sigma_1 - \nu(\sigma_2 + \sigma_3)] = \frac{1}{29.0(10^3)} \left\{ 12 - 0.32[8 + (-20)] \right\} = 546 (10^{-6})$$

$$\varepsilon_2 = \frac{1}{E} [\sigma_2 - \nu(\sigma_1 + \sigma_3)] = \frac{1}{29.0(10^3)} \left\{ 8 - 0.32[12 + (-20)] \right\} = 364 (10^{-6})$$

$$\varepsilon_3 = \frac{1}{E} [\sigma_3 - \nu(\sigma_1 + \sigma_2)] = \frac{1}{29.0(10^3)} [-20 - 0.32(12 + 8)] = -910 (10^{-6})$$

$$\varepsilon_{\max} = 546 (10^{-6}) \quad \varepsilon_{\text{int}} = 364 (10^{-6}) \quad \varepsilon_{\min} = -910 (10^{-6}) \quad \text{Ans.}$$

**10–39.** The spherical pressure vessel has an inner diameter of 2 m and a thickness of 10 mm. A strain gauge having a length of 20 mm is attached to it, and it is observed to increase in length by 0.012 mm when the vessel is pressurized. Determine the pressure causing this deformation, and find the maximum in-plane shear stress, and the absolute maximum shear stress at a point on the outer surface of the vessel. The material is steel, for which  $E_{\text{st}} = 200 \text{ GPa}$  and  $\nu_{\text{st}} = 0.3$ .

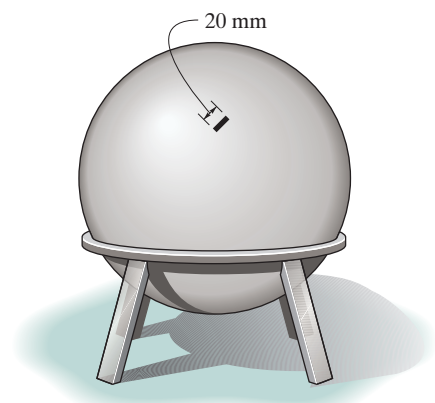

*Normal Stresses:* Since  $\frac{r}{t} = \frac{1000}{10} = 100 > 10$ , the *thin wall* analysis is valid to determine the normal stress in the wall of the spherical vessel. This is a plane stress problem where  $\sigma_{\min} = 0$  since there is no load acting on the outer surface of the wall.

$$\sigma_{\max} = \sigma_{\text{lat}} = \frac{pr}{2t} = \frac{p(1000)}{2(10)} = 50.0p \quad [1]$$

*Normal Strains:* Applying the generalized Hooke's Law with

$$\varepsilon_{\max} = \varepsilon_{\text{lat}} = \frac{0.012}{20} = 0.600(10^{-3}) \text{ mm/mm}$$

$$\varepsilon_{\max} = \frac{1}{E} [\sigma_{\max} - \nu(\sigma_{\text{lat}} + \sigma_{\min})]$$

$$0.600(10^{-3}) = \frac{1}{200(10^4)} [50.0p - 0.3(50.0p + 0)]$$

$$p = 3.4286 \text{ MPa} = 3.43 \text{ MPa} \quad \text{Ans.}$$


From Eq.[1]  $\sigma_{\max} = \sigma_{\text{lat}} = 50.0(3.4286) = 171.43 \text{ MPa}$

*Maximum In-Plane Shear (Sphere's Surface):* Mohr's circle is simply a dot. As the result, the state of stress is the same consisting of two normal stresses with zero shear stress regardless of the orientation of the element.

$$\tau_{\text{in-plane}}^{\max} = 0 \quad \text{Ans.}$$


*Absolute Maximum Shear Stress:*

$$\tau_{\text{abs max}} = \frac{\sigma_{\max} - \sigma_{\min}}{2} = \frac{171.43 - 0}{2} = 85.7 \text{ MPa} \quad \text{Ans.}$$

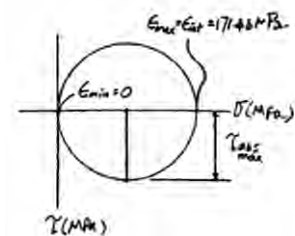

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10-40.** The strain in the  $x$  direction at point  $A$  on the steel beam is measured and found to be  $\epsilon_x = -100(10^{-6})$ . Determine the applied load  $P$ . What is the shear strain  $\gamma_{xy}$  at point  $A$ ?  $E_{st} = 29(10^3)$  ksi,  $\nu_{st} = 0.3$ .

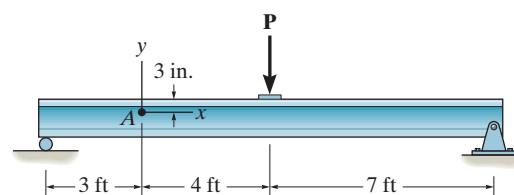

$$I_x = \frac{1}{12}(6)(9)^3 - \frac{1}{12}(5.5)(8^3) = 129.833 \text{ in}^4$$

$$Q_A = (4.25)(0.5)(6) + (2.75)(0.5)(2.5) = 16.1875 \text{ in}^3$$

$$\sigma = E\epsilon_x = 29(10^3)(100)(10^{-6}) = 2.90 \text{ ksi}$$

$$\sigma = \frac{My}{I}, \quad 2.90 = \frac{1.5P(12)(1.5)}{129.833}$$

$$P = 13.945 = 13.9 \text{ kip}$$



**Ans.**

$$\tau_A = \frac{VQ}{It} = \frac{0.5(13.945)(16.1875)}{129.833(0.5)} = 1.739 \text{ ksi}$$

$$G = \frac{E}{2(1 + \nu)} = \frac{29(10^3)}{2(1 + 0.3)} = 11.154(10^3) \text{ ksi}$$

$$\gamma_{xy} = \frac{\tau_{xy}}{G} = \frac{1.739}{11.154(10^3)} = 0.156(10^{-3}) \text{ rad}$$


**Ans.**

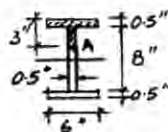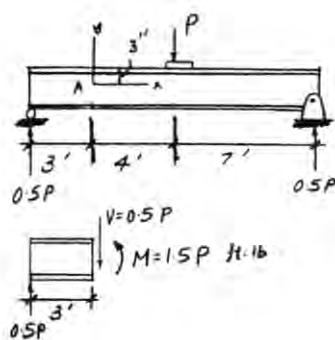



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–41.** The cross section of the rectangular beam is subjected to the bending moment  $\mathbf{M}$ . Determine an expression for the increase in length of lines  $AB$  and  $CD$ . The material has a modulus of elasticity  $E$  and Poisson's ratio is  $\nu$ .

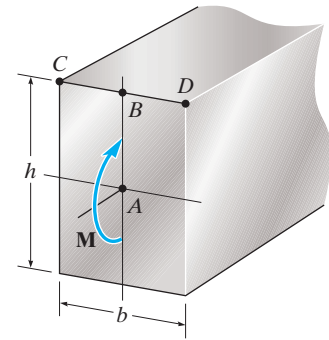

For line  $AB$ ,

$$\sigma_z = -\frac{My}{I} = -\frac{My}{\frac{1}{12}bh^3} = -\frac{12My}{bh^3}$$

$$\varepsilon_y = -\frac{\nu\sigma_z}{E} = \frac{12\nu My}{Eb^3h^3}$$

$$\begin{aligned}\Delta L_{AB} &= \int_0^{\frac{h}{2}} \varepsilon_y dy = \frac{12\nu M}{Eb^3h^3} \int_0^{\frac{h}{2}} y dy \\ &= \frac{3\nu M}{2Eb^3h}\end{aligned}$$

**Ans.**

For line  $CD$ ,


$$\sigma_z = -\frac{Mc}{I} = -\frac{M\frac{h}{2}}{\frac{1}{12}bh^3} = -\frac{6M}{bh^2}$$

$$\varepsilon_x = -\frac{\nu\sigma_z}{E} = \frac{6\nu M}{Eb^3h^2}$$

$$\begin{aligned}\Delta L_{CD} &= \varepsilon_x L_{CD} = \frac{6\nu M}{Eb^3h^2}(b) \\ &= \frac{6\nu M}{Eb^2h^2}\end{aligned}$$

**Ans.**

**10–42.** The principal stresses at a point are shown in the figure. If the material is aluminum for which  $E_{al} = 10(10^3)$  ksi and  $\nu_{al} = 0.33$ , determine the principal strains.

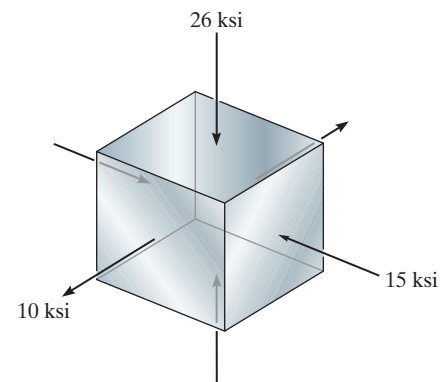

$$\varepsilon_x = \frac{1}{E}(\sigma_x - \nu(\sigma_y + \sigma_z)) = \frac{1}{10(10^3)}(10 - 0.33(-15 - 26)) = 2.35(10^{-3}) \quad \text{Ans.}$$

$$\varepsilon_y = \frac{1}{E}(\sigma_y - \nu(\sigma_x + \sigma_z)) = \frac{1}{10(10^3)}(-15 - 0.33)(10 - 26) = -0.972(10^{-3}) \quad \text{Ans.}$$

$$\varepsilon_z = \frac{1}{E}(\sigma_z - \nu(\sigma_x + \sigma_y)) = \frac{1}{10(10^3)}(-26 - 0.33(10 - 15)) = -2.44(10^{-3}) \quad \text{Ans.}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–43.** A single strain gauge, placed on the outer surface and at an angle of  $30^\circ$  to the axis of the pipe, gives a reading at point  $A$  of  $\epsilon_a = -200(10^{-6})$ . Determine the horizontal force  $P$  if the pipe has an outer diameter of 2 in. and an inner diameter of 1 in. The pipe is made of A-36 steel.

Using the method of section and consider the equilibrium of the FBD of the pipe's upper segment, Fig.  $a$ ,

$$\Sigma F_z = 0; \quad V_z - p = 0 \quad V_z = p$$

$$\Sigma M_x = 0; \quad T_x - p(1.5) = 0 \quad T_x = 1.5p$$

$$\Sigma M_y = 0; \quad M_y - p(2.5) = 0 \quad M_y = 2.5p$$

The normal stress is due to bending only. For point  $A$ ,  $z = 0$ . Thus

$$\sigma_x = \frac{M_y z}{I_y} = 0$$

The shear stress is the combination of torsional shear stress and transverse shear stress. Here,  $J = \frac{\pi}{2}(1^4 - 0.5^4) = 0.46875\pi \text{ in}^4$ . Thus, for point  $A$

$$\tau_t = \frac{T_x c}{J} = \frac{1.5p(1)(1)}{0.46875\pi} = \frac{38.4}{\pi} p$$

Referring to Fig.  $b$ ,

$$\begin{aligned} (Q_A)_z &= \bar{y}'_1 A'_1 - \bar{y}'_2 A'_2 = \frac{4(1)}{3\pi} \left[ \frac{\pi}{2}(1^2) \right] - \frac{4(0.5)}{3\pi} \left[ \frac{\pi}{2}(0.5^2) \right] \\ &= 0.5833 \text{ in}^3 \end{aligned}$$

$$I_y = \frac{\pi}{4}(1^4 - 0.5^4) = 0.234375\pi \text{ in}^4$$

Combine these two shear stress components,

$$\tau = \tau_t + \tau_v = \frac{38.4P}{\pi} + \frac{2.4889P}{\pi} = \frac{40.8889P}{\pi}$$

Since no normal stress acting on point  $A$ , it is subjected to pure shear which can be represented by the element shown in Fig.  $c$ .

For pure shear,  $\epsilon_x = \epsilon_z = 0$ ,

$$\epsilon_a = \epsilon_x \cos^3 \theta_a + \epsilon_z \sin^3 \theta_a + \gamma_{xz} \sin \theta_a \cos \theta_a$$

$$-200(10^{-6}) = 0 + 0 + \gamma_{xz} \sin 150^\circ \cos 150^\circ$$





$$\gamma_{xz} = 461.88(10^{-6})$$

Applying the Hooke's Law for shear,

$$\tau_{xz} = G \gamma_{xz}$$

$$\frac{40.8889P}{\pi} = 11.0(10^3)[461.88(10^{-6})]$$


$$P = 0.3904 \text{ kip} = 390 \text{ lb}$$

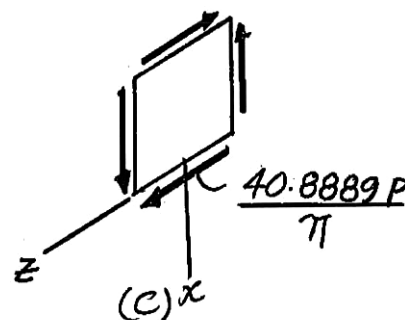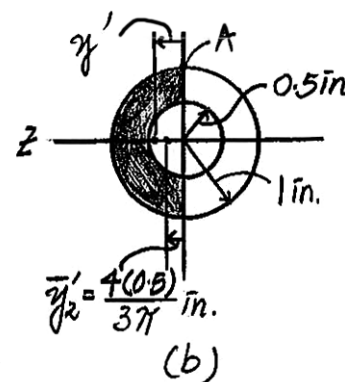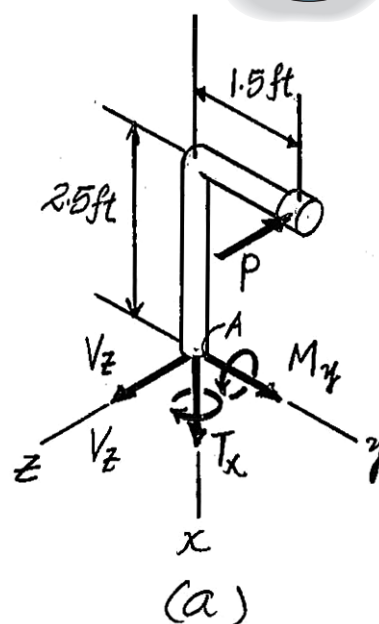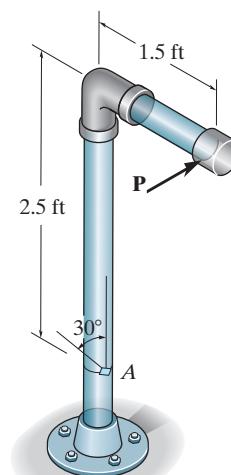

Ans.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–44.** A single strain gauge, placed in the vertical plane on the outer surface and at an angle of  $30^\circ$  to the axis of the pipe, gives a reading at point  $A$  of  $\epsilon_a = -200(10^{-6})$ . Determine the principal strains in the pipe at point  $A$ . The pipe has an outer diameter of 2 in. and an inner diameter of 1 in. and is made of A-36 steel.

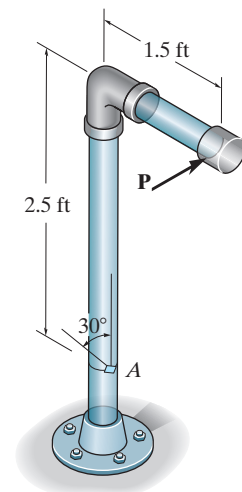

Using the method of sections and consider the equilibrium of the FBD of the pipe's upper segment, Fig.  $a$ ,

$$\Sigma F_z = 0; \quad V_z - P = 0 \quad V_z = P$$

$$\Sigma M_x = 0; \quad T_x - P(1.5) = 0 \quad T_x = 1.5P$$

$$\Sigma M_y = 0; \quad M_y - P(2.5) = 0 \quad M_y = 2.5P$$

By observation, no normal stress acting on point  $A$ . Thus, this is a case of pure shear.

For the case of pure shear,

$$\epsilon_x = \epsilon_z = \epsilon_y = 0$$

$$\epsilon_a = \epsilon_x \cos^2 \theta_a + \epsilon_z \sin^2 \theta_a + \gamma_{xz} \sin \theta_a \cos \theta_a$$


$$-200(10^{-6}) = 0 + 0 + \gamma_{xz} \sin 150^\circ \cos 150^\circ$$

$$\gamma_{xz} = 461.88(10^{-6})$$

$$\begin{aligned} \epsilon_{1,2} &= \frac{\epsilon_x + \epsilon_z}{2} + \sqrt{\left(\frac{\epsilon_x - \epsilon_z}{2}\right)^2 + \left(\frac{\gamma_{xz}}{2}\right)^2} \\ &= \left[ \frac{0 + 0}{2} \pm \sqrt{\left(\frac{0 - 0}{2}\right)^2 + \left(\frac{461.88}{2}\right)^2} \right] (10^{-6}) \end{aligned}$$


$$\epsilon_1 = 231(10^{-6}) \quad \epsilon_2 = -231(10^{-6})$$

**Ans.**

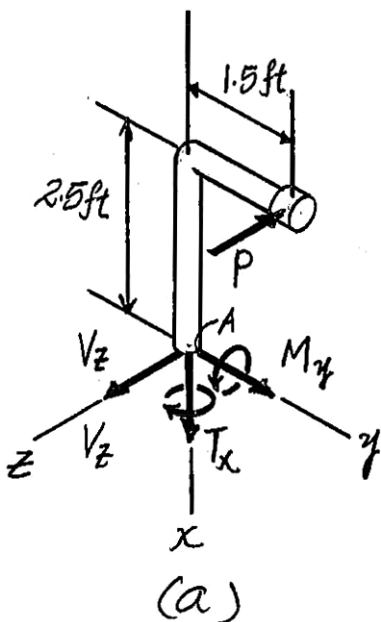

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–45.** The cylindrical pressure vessel is fabricated using hemispherical end caps in order to reduce the bending stress that would occur if flat ends were used. The bending stresses at the seam where the caps are attached can be eliminated by proper choice of the thickness  $t_h$  and  $t_c$  of the caps and cylinder, respectively. This requires the radial expansion to be the same for both the hemispheres and cylinder. Show that this ratio is  $t_c/t_h = (2 - \nu)/(1 - \nu)$ . Assume that the vessel is made of the same material and both the cylinder and hemispheres have the same inner radius. If the cylinder is to have a thickness of 0.5 in., what is the required thickness of the hemispheres? Take  $\nu = 0.3$ .

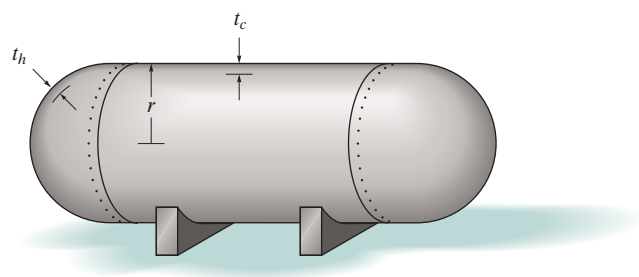

For cylindrical vessel:

$$\sigma_1 = \frac{p r}{t_c}; \quad \sigma_2 = \frac{p r}{2 t_c}$$

$$\varepsilon_1 = \frac{1}{E} [\sigma_1 - \nu (\sigma_2 + \sigma_3)] \quad \sigma_3 = 0$$

$$= \frac{1}{E} \left( \frac{p r}{t_c} - \frac{\nu p r}{2 t_c} \right) = \frac{p r}{E t_c} \left( 1 - \frac{1}{2} \nu \right)$$

$$d r = \varepsilon_1 r = \frac{p r^2}{E t_c} \left( 1 - \frac{1}{2} \nu \right) \quad (1)$$

For hemispherical end caps:

$$\sigma_1 = \sigma_2 = \frac{p r}{2 t_h}$$

$$\varepsilon_1 = \frac{1}{E} [\sigma_1 - \nu (\sigma_2 + \sigma_3)]; \quad \sigma_3 = 0$$

$$= \frac{1}{E} \left( \frac{p r}{2 t_h} - \frac{\nu p r}{2 t_h} \right) = \frac{p r}{2 E t_h} (1 - \nu)$$

$$d r = \varepsilon_1 r = \frac{p r^2}{2 E t_h} (1 - \nu) \quad (2)$$

Equate Eqs. (1) and (2):

$$\frac{p r^2}{E t_c} \left( 1 - \frac{1}{2} \nu \right) = \frac{p r^2}{2 E t_h} (1 - \nu)$$

$$\frac{t_c}{t_h} = \frac{2 (1 - \frac{1}{2} \nu)}{1 - \nu} = \frac{2 - \nu}{1 - \nu}$$

$$t_h = \frac{(1 - \nu) t_c}{2 - \nu} = \frac{(1 - 0.3) (0.5)}{2 - 0.3} = 0.206 \text{ in.}$$

**QED**

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–46.** The principal strains in a plane, measured experimentally at a point on the aluminum fuselage of a jet aircraft, are  $\epsilon_1 = 630(10^{-6})$  and  $\epsilon_2 = 350(10^{-6})$ . If this is a case of plane stress, determine the associated principal stresses at the point in the same plane.  $E_{\text{al}} = 10(10^3)$  ksi and  $\nu_{\text{al}} = 0.33$ .

*Normal Stresses:* For plane stress,  $\sigma_3 = 0$ .

*Normal Strains:* Applying the generalized Hooke's Law.

$$\epsilon_1 = \frac{1}{E} [\sigma_1 - \nu (\sigma_2 + \sigma_3)]$$

$$630(10^{-6}) = \frac{1}{10(10^3)} [\sigma_1 - 0.33(\sigma_2 + 0)]$$

$$6.30 = \sigma_1 - 0.33\sigma_2 \quad [1]$$

$$\epsilon_2 = \frac{1}{E} [\sigma_2 - \nu (\sigma_1 + \sigma_3)]$$

$$350(10^{-6}) = \frac{1}{10(10^3)} [\sigma_2 - 0.33(\sigma_1 + 0)]$$

$$3.50 = \sigma_2 - 0.33\sigma_1 \quad [2]$$

Solving Eqs.[1] and [2] yields:

$$\sigma_1 = 8.37 \text{ ksi} \quad \sigma_2 = 6.26 \text{ ksi}$$

**Ans.**

**10–47.** The principal stresses at a point are shown in the figure. If the material is aluminum for which  $E_{\text{al}} = 10(10^3)$  ksi and  $\nu_{\text{al}} = 0.33$ , determine the principal strains.


$$\epsilon_1 = \frac{1}{E} [\sigma_1 - \nu (\sigma_2 + \sigma_3)] = \frac{1}{10(10^3)} \left\{ 8 - 0.33[3 + (-4)] \right\} = 833 (10^{-6})$$

$$\epsilon_2 = \frac{1}{E} [\sigma_2 - \nu (\sigma_1 + \sigma_3)] = \frac{1}{10(10^3)} \left\{ 3 - 0.33[8 + (-4)] \right\} = 168 (10^{-6})$$

$$\epsilon_3 = \frac{1}{E} [\sigma_3 - \nu (\sigma_1 + \sigma_2)] = \frac{1}{10(10^3)} [-4 - 0.33(8 + 3)] = -763 (10^{-6})$$


Using these results,

$$\epsilon_1 = 833(10^{-6}) \quad \epsilon_2 = 168(10^{-6}) \quad \epsilon_3 = -763(10^{-6})$$

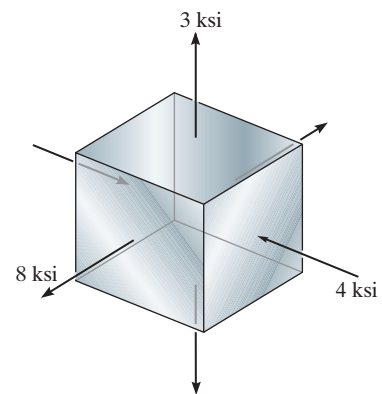

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–48.** The 6061-T6 aluminum alloy plate fits snugly into the rigid constraint. Determine the normal stresses  $\sigma_x$  and  $\sigma_y$  developed in the plate if the temperature is increased by  $\Delta T = 50^\circ\text{C}$ . To solve, add the thermal strain  $\alpha\Delta T$  to the equations for Hooke's Law.

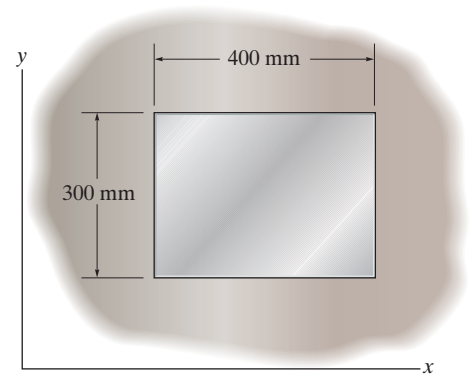

Generalized Hooke's Law: Since the sides of the aluminum plate are confined in the rigid constraint along the  $x$  and  $y$  directions,  $\epsilon_x = \epsilon_y = 0$ . However, the plate is allowed to have free expansion along the  $z$  direction. Thus,  $\sigma_z = 0$ . With the additional thermal strain term, we have

$$\epsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)] + \alpha\Delta T$$

$$0 = \frac{1}{68.9(10^9)} [\sigma_x - 0.35(\sigma_y + 0)] + 24(10^{-6})(50)$$

$$\sigma_x - 0.35\sigma_y = -82.68(10^6) \quad (1)$$

$$\epsilon_y = \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)] + \alpha\Delta T$$

$$0 = \frac{1}{68.9(10^9)} [\sigma_y - 0.35(\sigma_x + 0)] + 24(10^{-6})(50)$$

$$\sigma_y - 0.35\sigma_x = -82.68(10^6) \quad (2)$$


Solving Eqs. (1) and (2),

$$\sigma_x = \sigma_y = -127.2 \text{ MPa} = 127.2 \text{ MPa (C)} \quad \textbf{Ans.}$$

Since  $\sigma_x = \sigma_y$  and  $\sigma_y < \sigma_y$ , the above results are valid.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–49.** Initially, gaps between the A-36 steel plate and the rigid constraint are as shown. Determine the normal stresses  $\sigma_x$  and  $\sigma_y$  developed in the plate if the temperature is increased by  $\Delta T = 100^\circ\text{F}$ . To solve, add the thermal strain  $\alpha\Delta T$  to the equations for Hooke's Law.

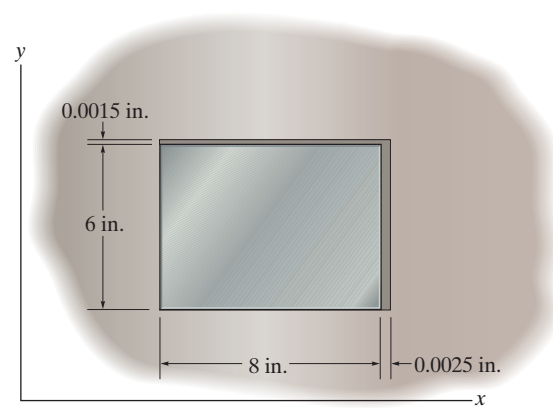

**Generalized Hooke's Law:** Since there are gaps between the sides of the plate and the rigid constraint, the plate is allowed to expand before it comes in contact with the constraint. Thus,  $\varepsilon_x = \frac{\delta_x}{L_x} = \frac{0.0025}{8} = 0.3125(10^{-3})$  and  $\varepsilon_y = \frac{\delta_y}{L_y} = \frac{0.0015}{6} = 0.25(10^{-3})$ . However, the plate is allowed to have free expansion along the  $z$  direction. Thus,  $\sigma_z = 0$ .

With the additional thermal strain term, we have

$$\varepsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)] + \alpha\Delta T$$

$$0.3125(10^{-3}) = \frac{1}{29.0(10^3)} [\sigma_x - 0.32(\sigma_y + 0)] + 6.60(10^{-6})(100)$$

$$\sigma_x - 0.32\sigma_y = -10.0775 \quad (1)$$

$$\varepsilon_y = \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)] + \alpha\Delta T$$

$$0.25(10^{-3}) = \frac{1}{29.0(10^3)} [\sigma_y - 0.32(\sigma_x + 0)] + 6.60(10^{-6})(100)$$

$$\sigma_y - 0.32\sigma_x = -11.89 \quad (2)$$

Solving Eqs. (1) and (2),


$$\sigma_x = -15.5 \text{ ksi} = 15.5 \text{ ksi (C)} \quad \text{Ans.}$$

$$\sigma_y = -16.8 \text{ ksi} = 16.8 \text{ ksi (C)} \quad \text{Ans.}$$

Since  $\sigma_x < \sigma_Y$  and  $\sigma_y < \sigma_Y$ , the above results are valid.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–50.** Two strain gauges  $a$  and  $b$  are attached to a plate made from a material having a modulus of elasticity of  $E = 70 \text{ GPa}$  and Poisson's ratio  $\nu = 0.35$ . If the gauges give a reading of  $\epsilon_a = 450(10^{-6})$  and  $\epsilon_b = 100(10^{-6})$ , determine the intensities of the uniform distributed load  $w_x$  and  $w_y$  acting on the plate. The thickness of the plate is 25 mm.

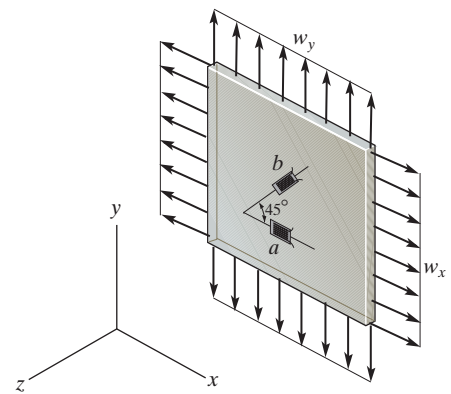

**Normal Strain:** Since no shear force acts on the plane along the  $x$  and  $y$  axes,  $\gamma_{xy} = 0$ . With  $\theta_a = 0$  and  $\theta_b = 45^\circ$ , we have

$$\epsilon_a = \epsilon_x \cos^2 \theta_a + \epsilon_y \sin^2 \theta_a + \gamma_{xy} \sin \theta_a \cos \theta_a$$

$$450(10^{-6}) = \epsilon_x \cos^2 0^\circ + \epsilon_y \sin^2 0^\circ + 0$$

$$\epsilon_x = 450(10^{-6})$$

$$\epsilon_b = \epsilon_x \cos^2 \theta_b + \epsilon_y \sin^2 \theta_b + \gamma_{xy} \sin \theta_b \cos \theta_b$$

$$100(10^{-6}) = 450(10^{-6}) \cos^2 45^\circ + \epsilon_y \sin^2 45^\circ + 0$$

$$\epsilon_y = -250(10^{-6})$$

**Generalized Hooke's Law:** This is a case of plane stress. Thus,  $\sigma_z = 0$ .

$$\epsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)]$$

$$450(10^{-6}) = \frac{1}{70(10^9)} [\sigma_x - 0.35(\sigma_y + 0)]$$

$$\sigma_x - 0.35\sigma_y = 31.5(10^6) \quad (1)$$

$$\epsilon_y = \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)]$$

$$-250(10^{-6}) = \frac{1}{70(10^9)} [\sigma_y - 0.35(\sigma_x + 0)]$$

$$\sigma_y - 0.35\sigma_x = -17.5(10^6) \quad (2)$$

Solving Eqs. (1) and (2),

$$\sigma_y = -7.379(10^6) \text{ N/m}^2 \quad \sigma_x = 28.917(10^6) \text{ N/m}^2$$

Then,

$$w_y = \sigma_y t = -7.379(10^6)(0.025) = -184 \text{ N/m} \quad \text{Ans.}$$

$$w_x = \sigma_x t = 28.917(10^6)(0.025) = 723 \text{ N/m} \quad \text{Ans.}$$



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–51.** Two strain gauges  $a$  and  $b$  are attached to the surface of the plate which is subjected to the uniform distributed load  $w_x = 700 \text{ kN/m}$  and  $w_y = -175 \text{ kN/m}$ . If the gauges give a reading of  $\epsilon_a = 450(10^{-6})$  and  $\epsilon_b = 100(10^{-6})$ , determine the modulus of elasticity  $E$ , shear modulus  $G$ , and Poisson's ratio  $\nu$  for the material.

**Normal Stress and Strain:** The normal stresses along the  $x$ ,  $y$ , and  $z$  axes are

$$\sigma_x = \frac{700(10^3)}{0.025} = 28(10^6) \text{ N/m}^2$$

$$\sigma_y = -\frac{175(10^3)}{0.025} = -7(10^6) \text{ N/m}^2$$

$$\sigma_z = 0 \text{ (plane stress)}$$

Since no shear force acts on the plane along the  $x$  and  $y$  axes,  $\gamma_{xy} = 0$ . With  $\theta_a = 0^\circ$  and  $\theta_b = 45^\circ$ , we have

$$\epsilon_a = \epsilon_x \cos^2 \theta_a + \epsilon_y \sin^2 \theta_a + \gamma_{xy} \sin \theta_a \cos \theta_a$$

$$450(10^{-6}) = \epsilon_x \cos^2 0^\circ + \epsilon_y \sin^2 0^\circ + 0$$

$$\epsilon_x = 450(10^{-6})$$

$$\epsilon_b = \epsilon_x \cos^2 \theta_b + \epsilon_y \sin^2 \theta_b + \gamma_{xy} \sin \theta_b \cos \theta_b$$

$$100(10^{-6}) = 450(10^{-6}) \cos^2 45^\circ + \epsilon_y \sin^2 45^\circ + 0$$

$$\epsilon_y = -250(10^{-6})$$

**Generalized Hooke's Law:**

$$\epsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)]$$

$$450(10^{-6}) = \frac{1}{E} [28(10^6) - \nu[-7(10^6) + 0]]$$

$$450(10^{-6})E - 7(10^6)\nu = 28(10^6) \quad (1)$$

$$\epsilon_y = \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)]$$

$$-250(10^{-6}) = \frac{1}{E} \left\{ -7(10^6) - \nu[28(10^6) + 0] \right\}$$

$$250(10^{-6})E - 28(10^6)\nu = 7(10^6) \quad (2)$$


Solving Eqs. (1) and (2),

$$E = 67.74(10^9) \text{ N/m}^2 = 67.7 \text{ GPa} \quad \text{Ans.}$$

$$\nu = 0.3548 = 0.355 \quad \text{Ans.}$$


Using the above results,

$$\begin{aligned} G &= \frac{E}{2(1 + \nu)} = \frac{67.74(10^9)}{2(1 + 0.3548)} \\ &= 25.0(10^9) \text{ N/m}^2 = 25.0 \text{ GPa} \quad \text{Ans.} \end{aligned}$$

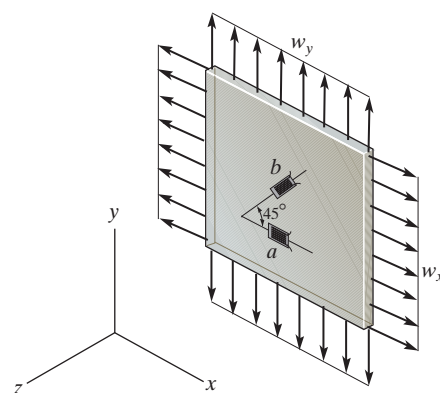

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–52.** The block is fitted between the fixed supports. If the glued joint can resist a maximum shear stress of  $\tau_{\text{allow}} = 2$  ksi, determine the temperature rise that will cause the joint to fail. Take  $E = 10(10^3)$  ksi,  $\nu = 0.2$ , and *Hint:* Use Eq. 10–18 with an additional strain term of  $\alpha\Delta T$  (Eq. 4–4).

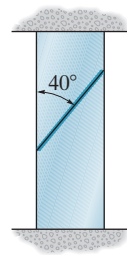

**Normal Strain:** Since the aluminum is confined along the  $y$  direction by the rigid frame, then  $\epsilon_y = 0$  and  $\sigma_x = \sigma_z = 0$ . Applying the generalized Hooke's Law with the additional thermal strain,

$$\epsilon_y = \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)] + \alpha\Delta T$$

$$0 = \frac{1}{10.0(10^3)} [\sigma_y - 0.2(0 + 0)] + 6.0(10^{-6})(\Delta T)$$

$$\sigma_y = -0.06\Delta T$$

**Construction of the Circle:** In accordance with the sign convention.  $\sigma_x = 0$ ,  $\sigma_y = -0.06\Delta T$  and  $\tau_{xy} = 0$ . Hence,

$$\sigma_{\text{avg}} = \frac{\sigma_x + \sigma_y}{2} = \frac{0 + (-0.06\Delta T)}{2} = -0.03\Delta T$$

The coordinates for reference points  $A$  and  $C$  are  $A(0, 0)$  and  $C(-0.03\Delta T, 0)$ .

The radius of the circle is  $R = \sqrt{(0 - 0.03\Delta T)^2 + 0} = 0.03\Delta T$

**Stress on The inclined plane:** The shear stress components  $\tau_{x'y'}$ , are represented by the coordinates of point  $P$  on the circle.

$$\tau_{x'y'} = 0.03\Delta T \sin 80^\circ = 0.02954\Delta T$$




**Allowable Shear Stress:**

$$\tau_{\text{allow}} = \tau_{x'y'}$$

$$2 = 0.02954\Delta T$$


$$\Delta T = 67.7^\circ\text{F}$$

**Ans.**

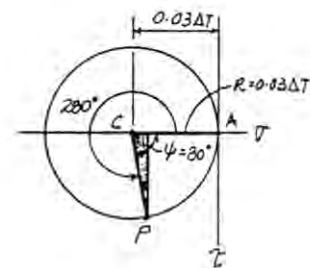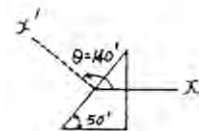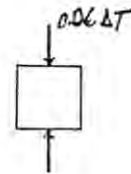

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

•10-53. The smooth rigid-body cavity is filled with liquid 6061-T6 aluminum. When cooled it is 0.012 in. from the top of the cavity. If the top of the cavity is covered and the temperature is increased by 200°F, determine the stress components  $\sigma_x$ ,  $\sigma_y$ , and  $\sigma_z$  in the aluminum. *Hint:* Use Eqs. 10-18 with an additional strain term of  $\alpha\Delta T$  (Eq. 4-4).

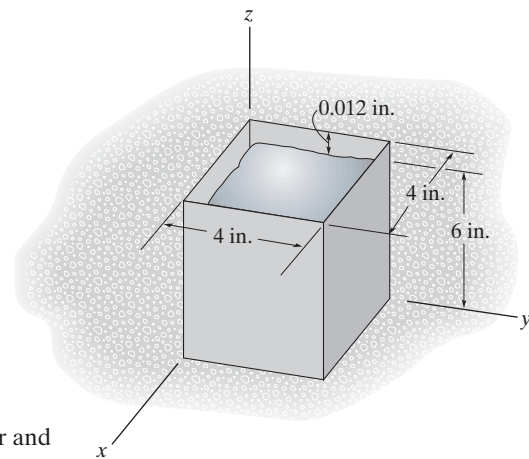

**Normal Strains:** Since the aluminum is confined at its sides by a rigid container and allowed to expand in the  $z$  direction,  $\epsilon_x = \epsilon_y = 0$ ; whereas  $\epsilon_z = \frac{0.012}{6} = 0.002$ . Applying the generalized Hooke's Law with the additional thermal strain,

$$\epsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)] + \alpha\Delta T$$

$$0 = \frac{1}{10.0(10^3)} [\sigma_x - 0.35(\sigma_y + \sigma_z)] + 13.1(10^{-6}) (200)$$

$$0 = \sigma_x - 0.35\sigma_y - 0.35\sigma_z + 26.2 \quad [1]$$

$$\epsilon_y = \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)] + \alpha\Delta T$$

$$0 = \frac{1}{10.0(10^3)} [\sigma_y - 0.35(\sigma_x + \sigma_z)] + 13.1(10^{-6}) (200)$$

$$0 = \sigma_y - 0.35\sigma_x - 0.35\sigma_z + 26.2 \quad [2]$$

$$\epsilon_z = \frac{1}{E} [\sigma_z - \nu(\sigma_x + \sigma_y)] + \alpha\Delta T$$

$$0.002 = \frac{1}{10.0(10^3)} [\sigma_z - 0.35(\sigma_x + \sigma_y)] + 13.1(10^{-6}) (200)$$

$$0 = \sigma_z - 0.35\sigma_x - 0.35\sigma_y + 6.20 \quad [3]$$


Solving Eqs.[1], [2] and [3] yields:

$$\sigma_x = \sigma_y = -70.0 \text{ ksi} \quad \sigma_z = -55.2 \text{ ksi}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–54.** The smooth rigid-body cavity is filled with liquid 6061-T6 aluminum. When cooled it is 0.012 in. from the top of the cavity. If the top of the cavity is not covered and the temperature is increased by 200°F, determine the strain components  $\epsilon_x$ ,  $\epsilon_y$ , and  $\epsilon_z$  in the aluminum. *Hint:* Use Eqs. 10–18 with an additional strain term of  $\alpha\Delta T$  (Eq. 4–4).

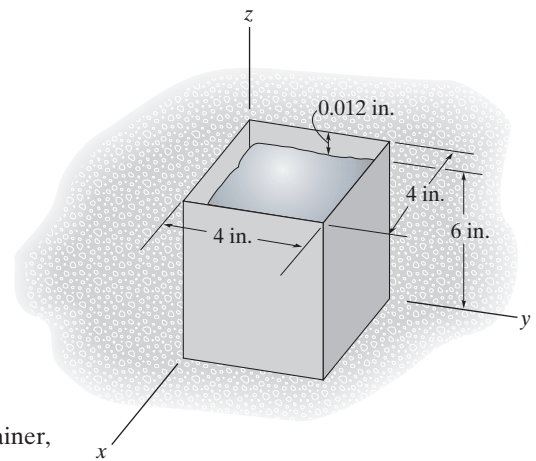

**Normal Strains:** Since the aluminum is confined at its sides by a rigid container, then

$$\epsilon_x = \epsilon_y = 0$$

**Ans.**

and since it is not restrained in  $z$  direction,  $\sigma_z = 0$ . Applying the generalized Hooke's Law with the additional thermal strain,

$$\begin{aligned}\epsilon_x &= \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)] + \alpha\Delta T \\ 0 &= \frac{1}{10.0(10^3)} [\sigma_x - 0.35(\sigma_y + 0)] + 13.1(10^{-6})(200) \\ 0 &= \sigma_x - 0.35\sigma_y + 26.2\end{aligned}\quad [1]$$

$$\begin{aligned}\epsilon_y &= \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)] + \alpha\Delta T \\ 0 &= \frac{1}{10.0(10^3)} [\sigma_y - 0.35(\sigma_x + 0)] + 13.1(10^{-6})(200) \\ 0 &= \sigma_y - 0.35\sigma_x + 26.2\end{aligned}\quad [2]$$

Solving Eqs. [1] and [2] yields:

$$\sigma_x = \sigma_y = -40.31 \text{ ksi}$$

$$\begin{aligned}\epsilon_z &= \frac{1}{E} [\sigma_z - \nu(\sigma_x + \sigma_y)] + \alpha\Delta T \\ &= \frac{1}{10.0(10^3)} \{0 - 0.35[-40.31 + (-40.31)]\} + 13.1(10^{-6})(200) \\ &= 5.44(10^{-3})\end{aligned}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–55.** A thin-walled spherical pressure vessel having an inner radius  $r$  and thickness  $t$  is subjected to an internal pressure  $p$ . Show that the increase in the volume within the vessel is  $\Delta V = (2p\pi r^4/Et)(1 - \nu)$ . Use a small-strain analysis.

$$\sigma_1 = \sigma_2 = \frac{pr}{2t}$$

$$\sigma_3 = 0$$

$$\varepsilon_1 = \varepsilon_2 = \frac{1}{E}(\sigma_1 - \nu\sigma_2)$$

$$\varepsilon_1 = \varepsilon_2 = \frac{pr}{2tE}(1 - \nu)$$

$$\varepsilon_3 = \frac{1}{E}(-\nu(\sigma_1 + \sigma_2))$$

$$\varepsilon_3 = -\frac{\nu pr}{tE}$$

$$V = \frac{4\pi r^3}{3}$$

$$V + \Delta V = \frac{4\pi}{3}(r + \Delta r)^3 = \frac{4\pi r^3}{3}\left(1 + \frac{\Delta r}{r}\right)^3$$

where  $\Delta V \ll V$ ,  $\Delta r \ll r$

$$V + \Delta V = \frac{4\pi r^3}{3}\left(1 + 3\frac{\Delta r}{r}\right)$$

$$\varepsilon_{\text{Vol}} = \frac{\Delta V}{V} = 3\left(\frac{\Delta r}{r}\right)$$

$$\text{Since } \varepsilon_1 = \varepsilon_2 = \frac{2\pi(r + \Delta r) - 2\pi r}{2\pi r} = \frac{\Delta r}{r}$$

$$\varepsilon_{\text{Vol}} = 3\varepsilon_1 = \frac{3pr}{2tE}(1 - \nu)$$

$$\Delta V = V\varepsilon_{\text{Vol}} = \frac{2p\pi r^4}{Et}(1 - \nu)$$

**QED**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–56.** A thin-walled cylindrical pressure vessel has an inner radius  $r$ , thickness  $t$ , and length  $L$ . If it is subjected to an internal pressure  $p$ , show that the increase in its inner radius is  $dr = r\epsilon_1 = pr^2(1 - \frac{1}{2}\nu)/Et$  and the increase in its length is  $\Delta L = pLr(\frac{1}{2} - \nu)/Et$ . Using these results, show that the change in internal volume becomes  $dV = \pi r^2(1 + \epsilon_1)^2(1 + \epsilon_2)L - \pi r^2L$ . Since  $\epsilon_1$  and  $\epsilon_2$  are small quantities, show further that the change in volume per unit volume, called *volumetric strain*, can be written as  $dV/V = pr(2.5 - 2\nu)/Et$ .

Normal stress:

$$\sigma_1 = \frac{pr}{t}; \quad \sigma_2 = \frac{pr}{2t}$$

Normal strain: Applying Hooke's law

$$\epsilon_1 = \frac{1}{E} [\sigma_1 - \nu(\sigma_2 + \sigma_3)], \quad \sigma_3 = 0$$

$$= \frac{1}{E} \left( \frac{pr}{t} - \frac{\nu pr}{2t} \right) = \frac{pr}{Et} \left( 1 - \frac{1}{2}\nu \right)$$

$$dr = \epsilon_1 r = \frac{pr^2}{Et} \left( 1 - \frac{1}{2}\nu \right) \quad \text{QED}$$

$$\epsilon_2 = \frac{1}{E} [\sigma_2 - \nu(\sigma_1 + \sigma_3)], \quad \sigma_3 = 0$$

$$= \frac{1}{E} \left( \frac{pr}{2t} - \frac{\nu pr}{t} \right) = \frac{pr}{Et} \left( \frac{1}{2} - \nu \right)$$

$$\Delta L = \epsilon_2 L = \frac{pLr}{Et} \left( \frac{1}{2} - \nu \right) \quad \text{QED}$$

$$V' = \pi(r + \epsilon_1 r)^2 (L + \epsilon_2 L); \quad V = \pi r^2 L$$

$$dV = V' - V = \pi r^2 (1 + \epsilon_1)^2 (1 + \epsilon_2)L - \pi r^2 L \quad \text{QED}$$

$$(1 + \epsilon_1)^2 = 1 + 2\epsilon_1 \text{ neglect } \epsilon_1^2 \text{ term}$$

$$(1 + \epsilon_1)^2 (1 + \epsilon_2) = (1 + 2\epsilon_1)(1 + \epsilon_2) = 1 + \epsilon_2 + 2\epsilon_1 \text{ neglect } \epsilon_1\epsilon_2 \text{ term}$$


$$\frac{dV}{V} = 1 + \epsilon_2 + 2\epsilon_1 - 1 = \epsilon_2 + 2\epsilon_1$$

$$= \frac{pr}{Et} \left( \frac{1}{2} - \nu \right) + \frac{2pr}{Et} \left( 1 - \frac{1}{2}\nu \right)$$

$$= \frac{pr}{Et} (2.5 - 2\nu) \quad \text{QED}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–57.** The rubber block is confined in the U-shape smooth rigid block. If the rubber has a modulus of elasticity  $E$  and Poisson's ratio  $\nu$ , determine the effective modulus of elasticity of the rubber under the confined condition.

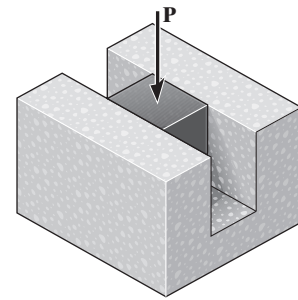

**Generalized Hooke's Law:** Under this confined condition,  $\varepsilon_x = 0$  and  $\sigma_y = 0$ . We have

$$\varepsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)]$$

$$0 = \frac{1}{E} (\sigma_x - \nu\sigma_z)$$

$$\sigma_x = \nu\sigma_z \quad (1)$$

$$\varepsilon_z = \frac{1}{E} [\sigma_z - \nu(\sigma_x + \sigma_y)]$$

$$\varepsilon_z = \frac{1}{E} [\sigma_z - \nu(\sigma_x + 0)]$$

$$\varepsilon_z = \frac{1}{E} (\sigma_z - \nu\sigma_x) \quad (2)$$

Substituting Eq. (1) into Eq. (2),

$$\varepsilon_z = \frac{\sigma_z}{E} (1 - \nu^2)$$

The effective modulus of elasticity of the rubber block under the confined condition can be determined by considering the rubber block as unconfined but rather undergoing the same normal strain of  $\varepsilon_z$  when it is subjected to the same normal stress  $\sigma_z$ . Thus,


$$\sigma_z = E_{\text{eff}} \varepsilon_z$$

$$E_{\text{eff}} = \frac{\sigma_z}{\varepsilon_z} = \frac{\sigma_z}{\frac{\sigma_z}{E} (1 - \nu^2)} = \frac{E}{1 - \nu^2}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–58.** A soft material is placed within the confines of a rigid cylinder which rests on a rigid support. Assuming that  $\epsilon_x = 0$  and  $\epsilon_y = 0$ , determine the factor by which the modulus of elasticity will be increased when a load is applied if  $\nu = 0.3$  for the material.

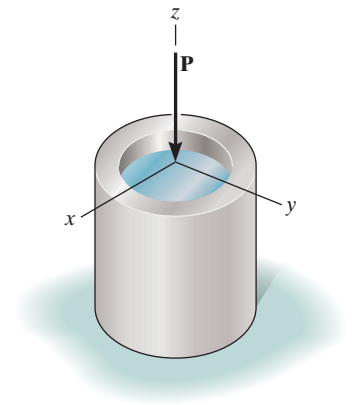

**Normal Strain:** Since the material is confined in a rigid cylinder.  $\epsilon_x = \epsilon_y = 0$ . Applying the generalized Hooke's Law,

$$\epsilon_x = \frac{1}{E} [\sigma_x - \nu(\sigma_y + \sigma_z)]$$

$$0 = \sigma_x - \nu(\sigma_y + \sigma_z) \quad [1]$$

$$\epsilon_y = \frac{1}{E} [\sigma_y - \nu(\sigma_x + \sigma_z)]$$

$$0 = \sigma_y - \nu(\sigma_x + \sigma_z) \quad [2]$$

Solving Eqs.[1] and [2] yields:

$$\sigma_x = \sigma_y = \frac{\nu}{1 - \nu} \sigma_z$$

Thus,

$$\begin{aligned} \epsilon_z &= \frac{1}{E} [\sigma_z - \nu(\sigma_x + \sigma_y)] \\ &= \frac{1}{E} \left[ \sigma_z - \nu \left( \frac{\nu}{1 - \nu} \sigma_z + \frac{\nu}{1 - \nu} \sigma_z \right) \right] \\ &= \frac{\sigma_z}{E} \left[ 1 - \frac{2\nu^2}{1 - \nu} \right] \\ &= \frac{\sigma_z}{E} \left[ \frac{1 - \nu - 2\nu^2}{1 - \nu} \right] \\ &= \frac{\sigma_z}{E} \left[ \frac{(1 + \nu)(1 - 2\nu)}{1 - \nu} \right] \end{aligned}$$

Thus, when the material is not being confined and undergoes the same normal strain of  $\epsilon_z$ , then the required modulus of elasticity is

$$E' = \frac{\sigma_z}{\epsilon_z} = \frac{1 - \nu}{(1 - 2\nu)(1 + \nu)} E$$

The increased factor is  $k = \frac{E'}{E} = \frac{1 - \nu}{(1 - 2\nu)(1 + \nu)}$

$$\begin{aligned} &= \frac{1 - 0.3}{[1 - 2(0.3)](1 + 0.3)} \\ &= 1.35 \end{aligned}$$

**Ans.**



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–59.** A material is subjected to plane stress. Express the distortion-energy theory of failure in terms of  $\sigma_x$ ,  $\sigma_y$ , and  $\tau_{xy}$ .

Maximum distortion energy theory:

$$(\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2) = \sigma_Y^2 \quad (1)$$

$$\sigma_{1,2} = \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2}$$

$$\text{Let } a = \frac{\sigma_x + \sigma_y}{2} \text{ and } b = \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2}$$

$$\sigma_1 = a + b; \quad \sigma_2 = a - b$$

$$\sigma_1^2 = a^2 + b^2 + 2ab; \quad \sigma_2^2 = a^2 + b^2 - 2ab$$

$$\sigma_1 \sigma_2 = a^2 - b^2$$

From Eq. (1)

$$(a^2 + b^2 + 2ab - a^2 + b^2 + a^2 + b^2 - 2ab) = \sigma_Y^2$$

$$(a^2 + 3b^2) = \sigma_Y^2$$

$$\frac{(\sigma_x + \sigma_y)^2}{4} + 3 \frac{(\sigma_x - \sigma_y)^2}{4} + 3\tau_{xy}^2 = \sigma_Y^2$$

$$\sigma_x^2 + \sigma_y^2 - \sigma_x \sigma_y + 3\tau_{xy}^2 = \sigma_Y^2 \quad \text{Ans.}$$

**\*10–60.** A material is subjected to plane stress. Express the maximum-shear-stress theory of failure in terms of  $\sigma_x$ ,  $\sigma_y$ , and  $\tau_{xy}$ . Assume that the principal stresses are of different algebraic signs.

Maximum shear stress theory:

$$|\sigma_1 - \sigma_2| = \sigma_Y \quad (1)$$

$$\sigma_{1,2} = \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2}$$

$$|\sigma_1 - \sigma_2| = 2 \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2}$$

From Eq. (1)

$$4 \left[ \left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2 \right] = \sigma_Y^2$$

$$(\sigma_x - \sigma_y)^2 + 4\tau_{xy}^2 = \sigma_Y^2 \quad \text{Ans.}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–61.** An aluminum alloy 6061-T6 is to be used for a solid drive shaft such that it transmits 40 hp at 2400 rev/min. Using a factor of safety of 2 with respect to yielding, determine the smallest-diameter shaft that can be selected based on the maximum-shear-stress theory.

$$\omega = \left(2400 \frac{\text{rev}}{\text{min}}\right) \left(\frac{2\pi \text{ rad}}{\text{rev}}\right) \left(\frac{1 \text{ min}}{60\text{s}}\right) = 80 \pi \text{ rad/s}$$

$$T = \frac{P}{\omega} = \frac{40 (550) (12)}{80 \pi} = \frac{3300}{\pi} \text{ lb} \cdot \text{in.}$$

$$\text{Applying } \tau = \frac{T c}{J}$$

$$\tau = \frac{\left(\frac{3300}{\pi}\right) c}{\frac{\pi}{2} c^4} = \frac{6600}{\pi^2 c^3}$$

The principal stresses:

$$\sigma_1 = \tau = \frac{6600}{\pi^2 c^3}; \quad \sigma_2 = -\tau = -\frac{6600}{\pi^2 c^3}$$

Maximum shear stress theory: Both principal stresses have opposite sign, hence,

$$\left| \sigma_1 - \sigma_2 \right| = \frac{\sigma_Y}{\text{F.S.}}; \quad 2 \left( \frac{6600}{\pi^2 c^3} \right) = \left| \frac{37 (10^3)}{2} \right|$$

$$c = 0.4166 \text{ in.}$$

$$d = 0.833 \text{ in.}$$

**Ans.**

**10–62.** Solve Prob. 10–61 using the maximum-distortion-energy theory.

$$\omega = \left(2400 \frac{\text{rev}}{\text{min}}\right) \left(\frac{2\pi \text{ rad}}{\text{rev}}\right) \left(\frac{1 \text{ min}}{60\text{s}}\right) = 80 \pi \text{ rad/s}$$

$$T = \frac{P}{\omega} = \frac{40 (550) (12)}{80 \pi} = \frac{3300}{\pi} \text{ lb} \cdot \text{in.}$$

$$\text{Applying } \tau = \frac{T c}{J}$$

$$\tau = \frac{\left(\frac{3300}{\pi}\right) c}{\frac{\pi}{2} c^4} = \frac{6600}{\pi^2 c^3}$$

The principal stresses:

$$\sigma_1 = \tau = \frac{6600}{\pi^2 c^3}; \quad \sigma_2 = -\tau = -\frac{6600}{\pi^2 c^3}$$

The maximum distortion-energy theory:

$$\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2 = \left( \frac{\sigma_Y}{\text{F.S.}} \right)^2$$

$$3 \left[ \frac{6600}{\pi^2 c^3} \right]^2 = \left( \frac{37(10^3)}{2} \right)^2$$

$$c = 0.3971 \text{ in.}$$

$$d = 0.794 \text{ in.}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–63.** An aluminum alloy is to be used for a drive shaft such that it transmits 25 hp at 1500 rev/min. Using a factor of safety of 2.5 with respect to yielding, determine the smallest-diameter shaft that can be selected based on the maximum-distortion-energy theory.  $\sigma_Y = 3.5$  ksi.

$$T = \frac{P}{\omega} \quad \omega = \frac{1500(2\pi)}{60} = 50\pi$$

$$T = \frac{25(550)(12)}{50\pi} = \frac{3300}{\pi}$$

$$\tau = \frac{Tc}{J}, \quad J = \frac{\pi}{2}c^4$$

$$\tau = \frac{\frac{3300}{\pi}c}{\frac{\pi}{2}c^4} = \frac{6600}{\pi^2c^3}$$

$$\sigma_1 = \frac{6600}{\pi^2c^3} \quad \sigma_2 = \frac{-6600}{\pi^2c^3}$$

$$\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 = \left(\frac{\sigma_Y}{\text{F.S.}}\right)^2$$

$$3\left(\frac{6600}{\pi^2c^3}\right)^2 = \left(\frac{3.5(10^3)}{2.5}\right)^2$$

$$c = 0.9388 \text{ in.}$$

$$d = 1.88 \text{ in.}$$

**Ans.**

**\*10–64.** A bar with a square cross-sectional area is made of a material having a yield stress of  $\sigma_Y = 120$  ksi. If the bar is subjected to a bending moment of 75 kip·in., determine the required size of the bar according to the maximum-distortion-energy theory. Use a factor of safety of 1.5 with respect to yielding.

*Normal and Shear Stress:* Applying the flexure formula,

$$\sigma = \frac{Mc}{I} = \frac{75\left(\frac{a}{2}\right)}{\frac{1}{12}a^4} = \frac{450}{a^3}$$

*In-Plane Principal Stress:* Since no shear stress acts on the element

$$\sigma_1 = \sigma_x = \frac{450}{a^3} \quad \sigma_2 = \sigma_y = 0$$


*Maximum Distortion Energy Theory:*

$$\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 = \sigma_{\text{allow}}^2$$

$$\left(\frac{450}{a^3}\right)^2 - 0 + 0 = \left(\frac{120}{1.5}\right)^2$$

$$a = 1.78 \text{ in.}$$

**Ans.**



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

•10–65. Solve Prob. 10–64 using the maximum-shear-stress theory.

*Normal and Shear Stress:* Applying the flexure formula,

$$\sigma = \frac{Mc}{I} = \frac{75\left(\frac{a}{2}\right)}{\frac{1}{12}a^4} = \frac{450}{a^3}$$

*In-Plane Principal Stress:* Since no shear stress acts on the element.

$$\sigma_1 = \sigma_x = \frac{450}{a^3} \quad \sigma_2 = \sigma_y = 0$$

*Maximum Shear Stress Theory:*


$$|\sigma_2| = 0 < \sigma_{\text{allow}} = \frac{120}{1.5} = 80.0 \text{ ksi} \quad (O.K!)$$

$$|\sigma_1| = \sigma_{\text{allow}}$$

$$\frac{450}{a^3} = \frac{120}{1.5}$$

$$a = 1.78 \text{ in.}$$

**Ans.**



10–66. Derive an expression for an equivalent torque  $T_e$  that, if applied alone to a solid bar with a circular cross section, would cause the same energy of distortion as the combination of an applied bending moment  $M$  and torque  $T$ .

$$\tau = \frac{T_e c}{J}$$

**Principal stress:**

$$\sigma_1 = \tau_x' \quad \sigma_2 = -\tau$$

$$u_d = \frac{1+\nu}{3E} (\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2)$$

$$(u_d)_1 = \frac{1+\nu}{3E} (3\tau^2) = \frac{1+\nu}{3E} \left( \frac{3T_x^2 c^2}{J^2} \right)$$

**Bending moment and torsion:**

$$\sigma = \frac{M c}{I}; \quad \tau = \frac{T c}{J}$$

**Principal stress:**

$$\sigma_{1,2} = \frac{\sigma + 0}{2} \pm \sqrt{\left(\frac{\sigma - 0}{2}\right)^2 + \tau^2}$$

$$\sigma_1 = \frac{\sigma}{2} + \sqrt{\frac{\sigma^2}{4} + \tau^2}; \quad \sigma_2 = \frac{\sigma}{2} - \sqrt{\frac{\sigma^2}{4} + \tau^2}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-66. Continued**

$$\text{Let } a = \frac{\sigma}{2} \quad b = \sqrt{\frac{\sigma^2}{4} + \tau^2}$$

$$\sigma_1^2 = a^2 + b^2 + 2ab$$

$$\sigma_1 \sigma_2 = a^2 - b^2$$

$$\sigma_2^2 = a^2 + b^2 - 2ab$$

$$\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2 = 3b^2 + a^2$$

$$u_d = \frac{1+\nu}{3E} (\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2)$$

$$\begin{aligned} (u_d)_2 &= \frac{1+\nu}{3E} (3b^2 + a^2) = \frac{1+\nu}{3E} \left( \frac{3\sigma^2}{4} + 3\tau^2 + \frac{\sigma^2}{4} \right) \\ &= \frac{1+\nu}{3E} (\sigma^2 + 3\tau^2) = \frac{c^2(1+\nu)}{3E} \left( \frac{M^2}{I^2} + \frac{3T^2}{J^2} \right) \end{aligned}$$

$$(u_d)_1 = (u_d)_2$$

$$\frac{c^3(1+\nu)}{3E} \frac{3T_x^2}{J^2} = \frac{c^2(1+\nu)}{3E} \left( \frac{M^2}{I^2} + \frac{3T^2}{J^2} \right)$$

For circular shaft

$$\frac{J}{I} = \frac{\frac{\pi}{3}c^4}{\frac{\pi}{4}c^4} = 2$$

$$T_e = \sqrt{\frac{J^2}{I^2} \frac{M^2}{3} + T^2}$$

$$T_e = \sqrt{\frac{4}{3} M^2 + T^2}$$

**Ans.**

**10-67.** Derive an expression for an equivalent bending moment  $M_e$  that, if applied alone to a solid bar with a circular cross section, would cause the same energy of distortion as the combination of an applied bending moment  $M$  and torque  $T$ .

Principal stresses:

$$\sigma_1 = \frac{M_e c}{I}; \quad \sigma_2 = 0$$

$$u_d = \frac{1+\nu}{3E} (\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2)$$

$$(u_d)_1 = \frac{1+\nu}{3E} \left( \frac{M_e^2 c^2}{I^2} \right) \quad (1)$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10–67. Continued

Principal stress:

$$\sigma_{1,2} = \frac{\sigma + 0}{2} \pm \sqrt{\left(\frac{\sigma - 0}{2}\right)^2 + \tau^2}$$

$$\sigma_1 = \frac{\sigma}{2} + \sqrt{\frac{\sigma^2}{4} + \tau^2}; \quad \sigma_2 = \frac{\sigma}{2} - \sqrt{\frac{\sigma^2}{4} + \tau^2}$$

Distortion Energy:

$$\text{Let } a = \frac{\sigma}{2}, b = \sqrt{\frac{\sigma^2}{4} + \tau^2}$$

$$\sigma_1^2 = a^2 + b^2 + 2ab$$

$$\sigma_1 \sigma_2 = a^2 - b^2$$

$$\sigma_2^2 = a^2 + b^2 - 2ab$$

$$\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2 = 3b^2 + a^2$$

$$\text{Apply } \sigma = \frac{M c}{I}; \quad \tau = \frac{T c}{J}$$

$$\begin{aligned} (u_d)_2 &= \frac{1+\nu}{3E} (3b^2 + a^2) = \frac{1+\nu}{3E} \left( \frac{\sigma^2}{4} + \frac{3\sigma^2}{4} + 3\tau^2 \right) \\ &= \frac{1+\nu}{3E} (\sigma^2 + 3\tau^2) = \frac{1+\nu}{3E} \left( \frac{M^2 c^2}{I^2} + \frac{3T^2 c^2}{J^2} \right) \end{aligned} \quad (2)$$

Equating Eq. (1) and (2) yields:

$$\frac{(1+\nu)}{3E} \left( \frac{M_e c^2}{I^2} \right) = \frac{1+\nu}{3E} \left( \frac{M^2 c^2}{I^2} + \frac{3T^2 c^2}{J^2} \right)$$

$$\frac{M_e^2}{I^2} = \frac{M^2}{I^2} + \frac{3T^2}{J^2}$$

$$M_e^2 = M^2 + 3T^2 \left( \frac{I}{J} \right)^2$$

For circular shaft

$$\frac{I}{J} = \frac{\frac{\pi}{4} c^4}{\frac{\pi}{2} c^4} = \frac{1}{2}$$

$$\text{Hence, } M_e^2 = M^2 + 3T^2 \left( \frac{1}{2} \right)^2$$

$$M_e = \sqrt{M^2 + \frac{3}{4} T^2}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10-68.** The short concrete cylinder having a diameter of 50 mm is subjected to a torque of 500 N·m and an axial compressive force of 2 kN. Determine if it fails according to the maximum-normal-stress theory. The ultimate stress of the concrete is  $\sigma_{ult} = 28$  MPa.

$$A = \frac{\pi}{4}(0.05)^2 = 1.9635(10^{-3}) \text{ m}^2$$

$$J = \frac{\pi}{2}(0.025)^4 = 0.61359(10^{-6}) \text{ m}^4$$

$$\sigma = \frac{P}{A} = \frac{2(10^3)}{1.9635(10^{-3})} = 1.019 \text{ MPa}$$

$$\tau = \frac{Tc}{J} = \frac{500(0.025)}{0.61359(10^{-6})} = 20.372 \text{ MPa}$$

$$\sigma_x = 0 \quad \sigma_y = -1.019 \text{ MPa} \quad \tau_{xy} = 20.372 \text{ MPa}$$

$$\sigma_{1,2} = \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2}$$

$$\sigma_{1,2} = \frac{0 - 1.018}{2} \pm \sqrt{\left(\frac{0 - (-1.019)}{2}\right)^2 + 20.372^2}$$

$$\sigma_1 = 19.87 \text{ MPa} \quad \sigma_2 = -20.89 \text{ MPa}$$

Failure criteria:

$$|\sigma_1| < \sigma_{alt} = 28 \text{ MPa}$$


**OK**

$$|\sigma_2| < \sigma_{alt} = 28 \text{ MPa}$$

**OK**

No.

**Ans.**

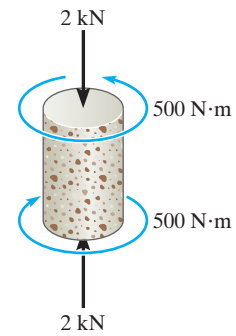

**•10-69.** Cast iron when tested in tension and compression has an ultimate strength of  $(\sigma_{ult})_t = 280$  MPa and  $(\sigma_{ult})_c = 420$  MPa, respectively. Also, when subjected to pure torsion it can sustain an ultimate shear stress of  $\tau_{ult} = 168$  MPa. Plot the Mohr's circles for each case and establish the failure envelope. If a part made of this material is subjected to the state of plane stress shown, determine if it fails according to Mohr's failure criterion.


$$\sigma_1 = 50 + 197.23 = 247 \text{ MPa}$$

$$\sigma_2 = 50 - 197.23 = -147 \text{ MPa}$$


The principal stress coordinate is located at point A which is outside the shaded region. Therefore the material fails according to Mohr's failure criterion.

Yes.

**Ans.**

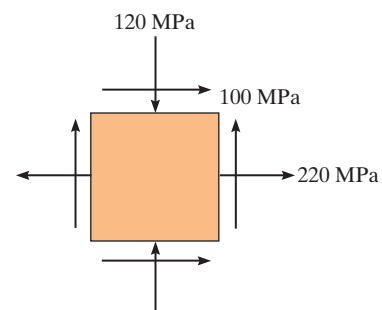

### 10–69. Continued

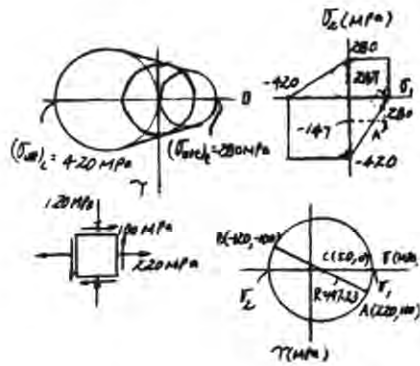

**10–70.** Derive an expression for an equivalent bending moment  $M_e$  that, if applied alone to a solid bar with a circular cross section, would cause the same maximum shear stress as the combination of an applied moment  $M$  and torque  $T$ . Assume that the principal stresses are of opposite algebraic signs.

Bending and Torsion:

$$\sigma = \frac{M c}{I} = \frac{M c}{\frac{\pi}{4} c^4} = \frac{4 M}{\pi c^3}; \quad \tau = \frac{T c}{J} = \frac{T c}{\frac{\pi}{2} c^4} = \frac{2 T}{\pi c^3}$$

The principal stresses:

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} = \frac{\frac{4 M}{\pi c^3} + 0}{2} \pm \sqrt{\left(\frac{\frac{4 M}{\pi c^3} - 0}{2}\right)^2 + \left(\frac{2 T}{\pi c^3}\right)^2} \\ &= \frac{2 M}{\pi c^3} \pm \frac{2}{\pi c^3} \sqrt{M^2 + T^2} \end{aligned}$$

$$\tau_{\max}^{\text{abs}} = \sigma_1 - \sigma_2 = 2 \left[ \frac{2}{\pi c^3} \sqrt{M^2 + T^2} \right] \quad (1)$$

Pure bending:

$$\sigma_1 = \frac{M c}{I} = \frac{M_e c}{\frac{\pi}{4} c^4} = \frac{4 M_e}{\pi c^3}; \quad \sigma_2 = 0$$

$$\tau_{\max}^{\text{abs}} = \sigma_1 - \sigma_2 = \frac{4 M_e}{\pi c^3} \quad (2)$$

Equating Eq. (1) and (2) yields:

$$\frac{4}{\pi c^3} \sqrt{M^2 + T^2} = \frac{4 M_e}{\pi c^3}$$

$$M_e = \sqrt{M^2 + T^2}$$

**Ans.**



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–71.** The components of plane stress at a critical point on an A-36 steel shell are shown. Determine if failure (yielding) has occurred on the basis of the maximum-shear-stress theory.


In accordance to the established sign convention,  $\sigma_x = 70 \text{ MPa}$ ,  $\sigma_y = -60 \text{ MPa}$  and  $\tau_{xy} = 40 \text{ MPa}$ .

$$\begin{aligned}\sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{70 + (-60)}{2} \pm \sqrt{\left[\frac{70 - (-60)}{2}\right]^2 + 40^2} \\ &= 5 \pm \sqrt{5825} \\ \sigma_1 &= 81.32 \text{ MPa} \quad \sigma_2 = -71.32 \text{ MPa}\end{aligned}$$

In this case,  $\sigma_1$  and  $\sigma_2$  have opposite sign. Thus,

$$|\sigma_1 - \sigma_2| = |81.32 - (-71.32)| = 152.64 \text{ MPa} < \sigma_y = 250 \text{ MPa}$$

Based on this result, **the steel shell does not yield according to the maximum shear stress theory.**

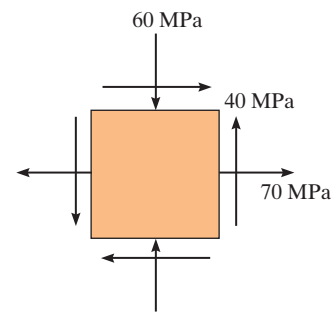


**\*10–72.** The components of plane stress at a critical point on an A-36 steel shell are shown. Determine if failure (yielding) has occurred on the basis of the maximum-distortion-energy theory.

In accordance to the established sign convention,  $\sigma_x = 70 \text{ MPa}$ ,  $\sigma_y = -60 \text{ MPa}$  and  $\tau_{xy} = 40 \text{ MPa}$ .

$$\begin{aligned}\sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{70 + (-60)}{2} \pm \sqrt{\left[\frac{70 - (-60)}{2}\right]^2 + 40^2} \\ &= 5 \pm \sqrt{5825} \\ \sigma_1 &= 81.32 \text{ MPa} \quad \sigma_2 = -71.32 \text{ MPa}\end{aligned}$$


$$\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 = 81.32^2 - 81.32(-71.32) + (-71.32)^2 = 17,500 < \sigma_y^2 = 62,500$$

Based on this result, **the steel shell does not yield according to the maximum distortion energy theory.**

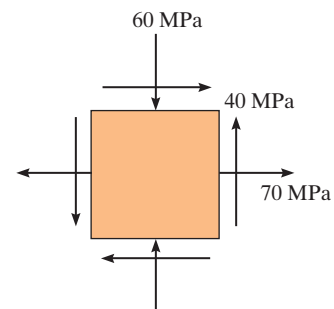

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–73.** If the 2-in. diameter shaft is made from brittle material having an ultimate strength of  $\sigma_{ult} = 50$  ksi for both tension and compression, determine if the shaft fails according to the maximum-normal-stress theory. Use a factor of safety of 1.5 against rupture.

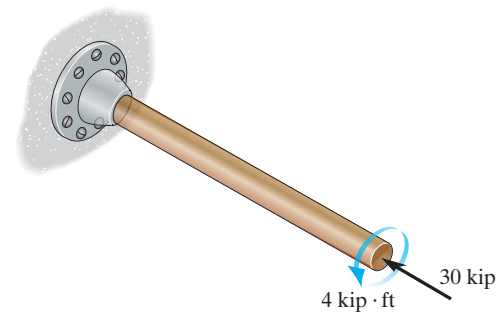

**Normal Stress and Shear Stresses.** The cross-sectional area and polar moment of inertia of the shaft's cross-section are


$$A = \pi(1^2) = \pi \text{ in}^2 \quad J = \frac{\pi}{2}(1^4) = \frac{\pi}{2} \text{ in}^4$$

The normal stress is caused by axial stress.

$$\sigma = \frac{N}{A} = -\frac{30}{\pi} = -9.549 \text{ ksi}$$

The shear stress is contributed by torsional shear stress.

$$\tau = \frac{Tc}{J} = \frac{4(12)(1)}{\frac{\pi}{2}} = 30.56 \text{ ksi}$$

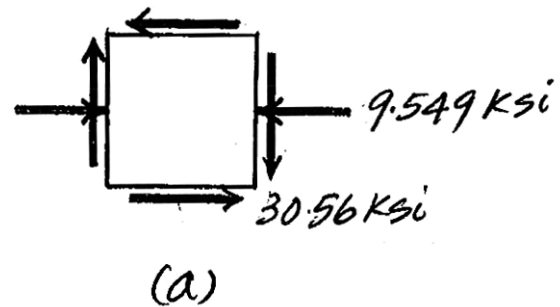

The state of stress at the points on the surface of the shaft is represented on the element shown in Fig. *a*.

**In-Plane Principal Stress.**  $\sigma_x = -9.549$  ksi,  $\sigma_y = 0$  and  $\tau_{xy} = -30.56$  ksi. We have

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{-9.549 + 0}{2} \pm \sqrt{\left(\frac{-9.549 - 0}{2}\right)^2 + (-30.56)^2} \\ &= (-4.775 \pm 30.929) \text{ ksi} \end{aligned}$$

$$\sigma_1 = 26.15 \text{ ksi} \quad \sigma_2 = -35.70 \text{ ksi}$$

**Maximum Normal-Stress Theory.**

$$\sigma_{\text{allow}} = \frac{\sigma_{\text{ult}}}{F.S.} = \frac{50}{1.5} = 33.33 \text{ ksi}$$

$$|\sigma_1| = 26.15 \text{ ksi} < \sigma_{\text{allow}} = 33.33 \text{ ksi} \quad (\text{O.K.})$$

$$|\sigma_2| = 35.70 \text{ ksi} > \sigma_{\text{allow}} = 33.33 \text{ ksi} \quad (\text{N.G.})$$


Based on these results, the material *fails* according to the maximum normal-stress theory.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–74.** If the 2-in. diameter shaft is made from cast iron having tensile and compressive ultimate strengths of  $(\sigma_{ult})_t = 50$  ksi and  $(\sigma_{ult})_c = 75$  ksi, respectively, determine if the shaft fails in accordance with Mohr's failure criterion.

**Normal Stress and Shear Stresses.** The cross-sectional area and polar moment of inertia of the shaft's cross-section are

$$A = \pi(1^2) = \pi \text{ in}^2 \quad J = \frac{\pi}{2}(1^4) = \frac{\pi}{2} \text{ in}^4$$

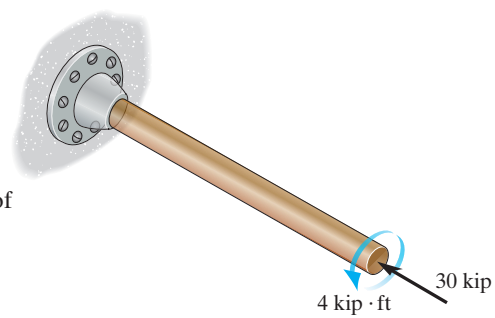

The normal stress is contributed by axial stress.

$$\sigma = \frac{N}{A} = -\frac{30}{\pi} = -9.549 \text{ ksi}$$

The shear stress is contributed by torsional shear stress.

$$\tau = \frac{Tc}{J} = \frac{4(12)(1)}{\frac{\pi}{2}} = 30.56 \text{ ksi}$$

The state of stress at the points on the surface of the shaft is represented on the element shown in Fig. *a*.



**In-Plane Principal Stress.**  $\sigma_x = -9.549$  ksi,  $\sigma_y = 0$ , and  $\tau_{xy} = -30.56$  ksi. We have

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{-9.549 + 0}{2} \pm \sqrt{\left(\frac{-9.549 - 0}{2}\right)^2 + (-30.56)^2} \\ &= (-4.775 \pm 30.929) \text{ ksi} \end{aligned}$$


$$\sigma_1 = 26.15 \text{ ksi}$$

$$\sigma_2 = -35.70 \text{ ksi}$$

**Mohr's Failure Criteria.** As shown in Fig. *b*, the coordinates of point *A*, which represent the principal stresses, are located inside the shaded region. Therefore, the material *does not fail* according to Mohr's failure criteria.

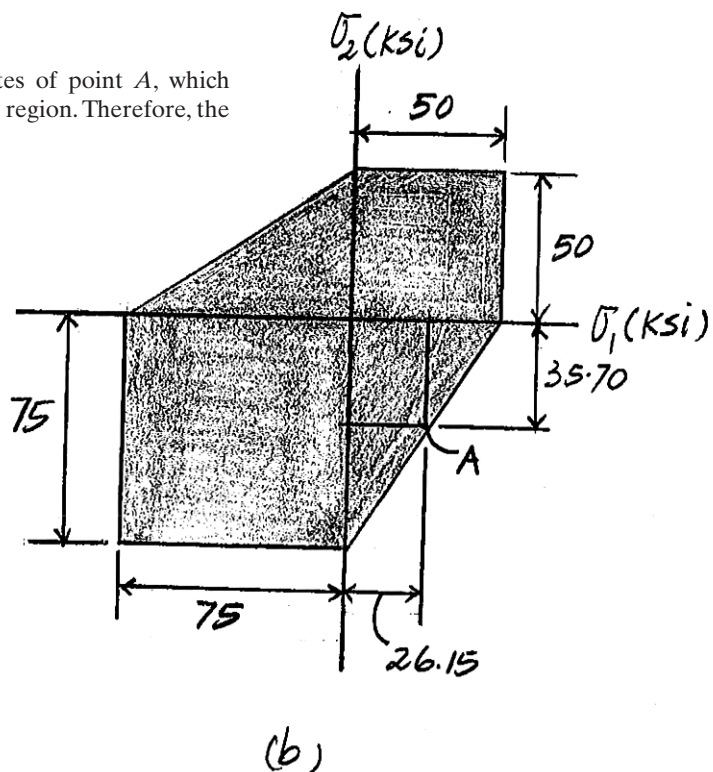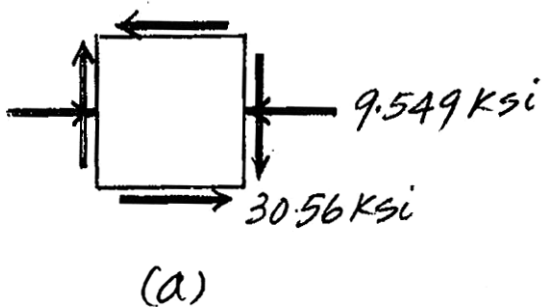

**10–75.** If the A-36 steel pipe has outer and inner diameters of 30 mm and 20 mm, respectively, determine the factor of safety against yielding of the material at point A according to the maximum-shear-stress theory.

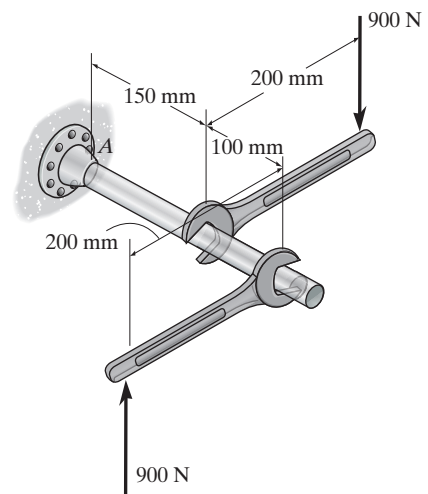

**Internal Loadings.** Considering the equilibrium of the free - body diagram of the post's right cut segment Fig. a,

$$\begin{aligned}\Sigma F_y = 0; \quad V_y + 900 - 900 &= 0 & V_y &= 0 \\ \Sigma M_x = 0; \quad T + 900(0.4) &= 0 & T &= -360 \text{ N} \cdot \text{m} \\ \Sigma M_z = 0; \quad M_z + 900(0.15) - 900(0.25) &= 0 & M_z &= 90 \text{ N} \cdot \text{m}\end{aligned}$$

**Section Properties.** The moment of inertia about the  $z$  axis and the polar moment of inertia of the pipe's cross section are

$$I_z = \frac{\pi}{4} (0.015^4 - 0.01^4) = 10.15625\pi(10^{-9}) \text{ m}^4$$

$$J = \frac{\pi}{2} (0.015^4 - 0.01^4) = 20.3125\pi(10^{-9}) \text{ m}^4$$

**Normal Stress and Shear Stress.** The normal stress is contributed by bending stress. Thus,

$$\sigma_y = -\frac{My_A}{I_z} = -\frac{90(0.015)}{10.15625\pi(10^{-9})} = -42.31 \text{ MPa}$$

The shear stress is contributed by torsional shear stress.

$$\tau = \frac{Tc}{J} = \frac{360(0.015)}{20.3125\pi(10^{-9})} = 84.62 \text{ MPa}$$

The state of stress at point A is represented by the two - dimensional element shown in Fig. b.

**In - Plane Principal Stress.**  $\sigma_x = -42.31 \text{ MPa}$ ,  $\sigma_z = 0$  and  $\tau_{xz} = 84.62 \text{ MPa}$ . We have

$$\begin{aligned}\sigma_{1,2} &= \frac{\sigma_x + \sigma_z}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_z}{2}\right)^2 + \tau_{xz}^2} \\ &= \frac{-42.31 + 0}{2} \pm \sqrt{\left(\frac{-42.31 - 0}{2}\right)^2 + 84.62^2} \\ &= (-21.16 \pm 87.23) \text{ MPa} \\ \sigma_1 &= 66.07 \text{ MPa} & \sigma_2 &= -108.38 \text{ MPa}\end{aligned}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–75. Continued**

**Maximum Shear Stress Theory.**  $\sigma_1$  and  $\sigma_2$  have opposite signs. This requires

$$|\sigma_1 - \sigma_2| = \sigma_{\text{allow}}$$



$$66.07 - (-108.38) = \sigma_{\text{allow}}$$

$$\sigma_{\text{allow}} = 174.45 \text{ MPa}$$


The factor of safety is

$$F.S. = \frac{\sigma_Y}{\sigma_{\text{allow}}} = \frac{250}{174.45} = 1.43$$

**Ans.**

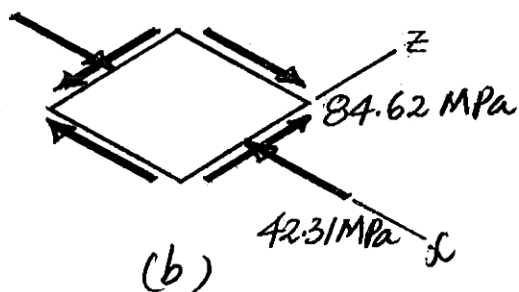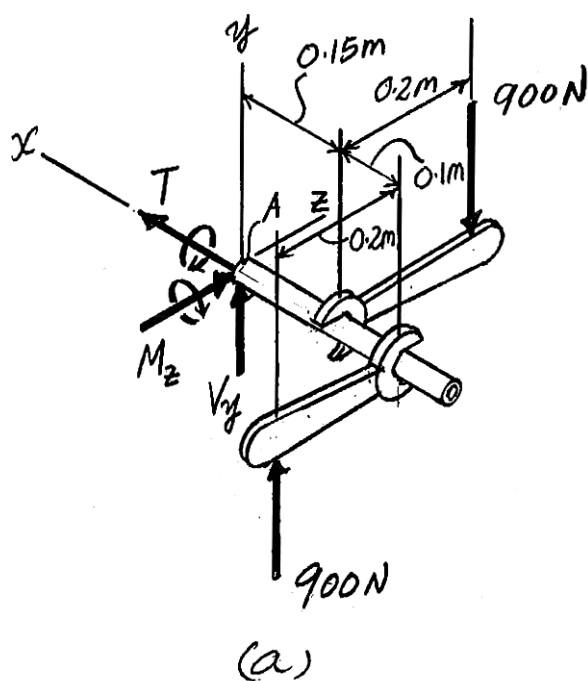

**\*10–76.** If the A-36 steel pipe has an outer and inner diameter of 30 mm and 20 mm, respectively, determine the factor of safety against yielding of the material at point A according to the maximum-distortion-energy theory.

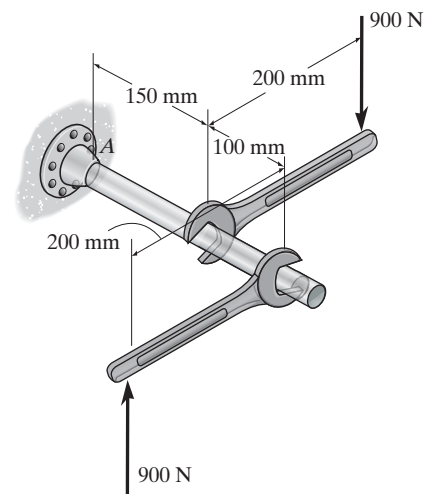

**Internal Loadings:** Considering the equilibrium of the free-body diagram of the pipe's right cut segment Fig. *a*,

$$\begin{aligned}\Sigma F_y = 0; \quad V_y + 900 - 900 &= 0 & V_y &= 0 \\ \Sigma M_x = 0; \quad T + 900(0.4) &= 0 & T &= -360 \text{ N} \cdot \text{m} \\ \Sigma M_z = 0; \quad M_z + 900(0.15) - 900(0.25) &= 0 & M_z &= 90 \text{ N} \cdot \text{m}\end{aligned}$$

**Section Properties.** The moment of inertia about the  $z$  axis and the polar moment of inertia of the pipe's cross section are

$$I_z = \frac{\pi}{4} (0.015^4 - 0.01^4) = 10.15625\pi (10^{-9}) \text{ m}^4$$

$$J = \frac{\pi}{2} (0.015^4 - 0.01^4) = 20.3125\pi (10^{-9}) \text{ m}^4$$

**Normal Stress and Shear Stress.** The normal stress is caused by bending stress. Thus,

$$\sigma_y = -\frac{My_A}{I_z} = -\frac{90(0.015)}{10.15625\pi (10^{-9})} = -42.31 \text{ MPa}$$

The shear stress is caused by torsional stress.

$$\tau = \frac{Tc}{J} = \frac{360(0.015)}{20.3125\pi (10^{-9})} = 84.62 \text{ MPa}$$

The state of stress at point A is represented by the two-dimensional element shown in Fig. *b*.

**In - Plane Principal Stress.**  $\sigma_x = -42.31 \text{ MPa}$ ,  $\sigma_z = 0$  and  $\tau_{xz} = 84.62 \text{ MPa}$ . We have

$$\begin{aligned}\sigma_{1,2} &= \frac{\sigma_x + \sigma_z}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_z}{2}\right)^2 + \tau_{xz}^2} \\ &= \frac{-42.31 + 0}{2} \pm \sqrt{\left(\frac{-42.31 - 0}{2}\right)^2 + 84.62^2} \\ &= (-21.16 \pm 87.23) \text{ MPa} \\ \sigma_1 &= 66.07 \text{ MPa} & \sigma_2 &= -108.38 \text{ MPa}\end{aligned}$$

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-76. Continued**

**Maximum Distortion Energy Theory.**

$$\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 = \sigma_{\text{allow}}^2$$



$$66.07^2 - 66.07(-108.38) + (-108.38)^2 = \sigma_{\text{allow}}^2$$

$$\sigma_{\text{allow}} = 152.55 \text{ MPa}$$

Thus, the factor of safety is

$$F.S. = \frac{\sigma_Y}{\sigma_{\text{allow}}} = \frac{250}{152.55} = 1.64$$

**Ans.**

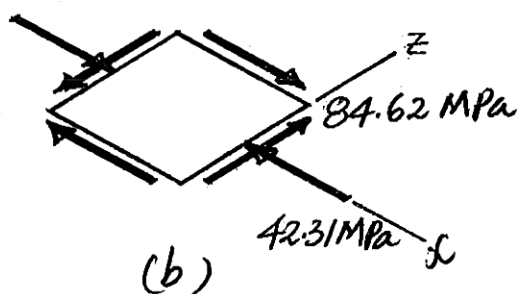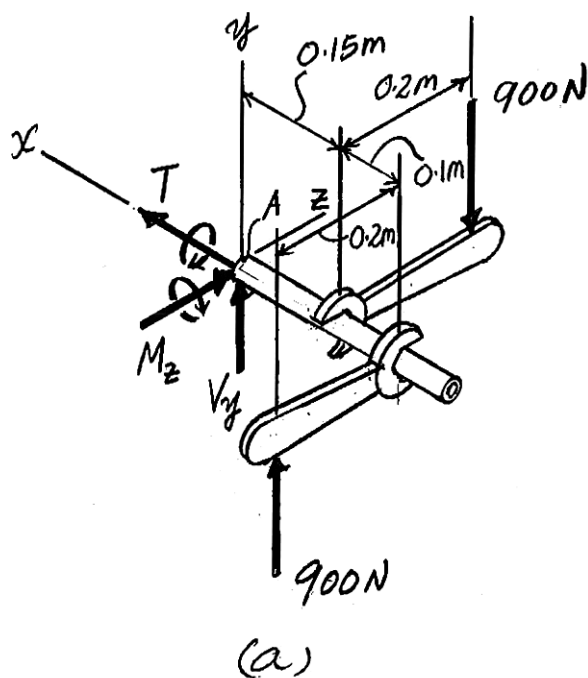

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–77.** The element is subjected to the stresses shown. If  $\sigma_Y = 36$  ksi, determine the factor of safety for the loading based on the maximum-shear-stress theory.

$$\sigma_x = 4 \text{ ksi} \quad \sigma_y = -12 \text{ ksi} \quad \tau_{xy} = -8 \text{ ksi}$$

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{4 - 12}{2} \pm \sqrt{\left(\frac{4 - (-12)}{2}\right)^2 + (-8)^2} \end{aligned}$$


$$\sigma_1 = 7.314 \text{ ksi} \quad \sigma_2 = -15.314 \text{ ksi}$$

$$\tau_{\text{abs}_{\max}} = \frac{\sigma_1 - \sigma_2}{2} = \frac{7.314 - (-15.314)}{2} = 11.314 \text{ ksi}$$

$$\tau_{\text{allow}} = \frac{\sigma_Y}{2} = \frac{36}{2} = 18 \text{ ksi}$$

$$F.S. = \frac{\tau_{\text{allow}}}{\tau_{\text{abs}_{\max}}} = \frac{18}{11.314} = 1.59$$

**Ans.**

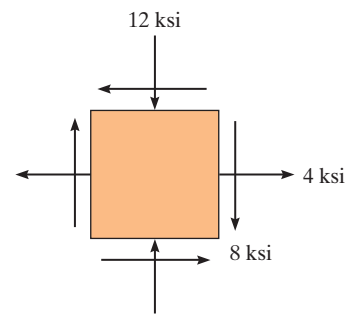

**10–78.** Solve Prob. 10–77 using the maximum-distortion-energy theory.

$$\sigma_x = 4 \text{ ksi} \quad \sigma_y = -12 \text{ ksi} \quad \tau_{xy} = -8 \text{ ksi}$$


$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{4 - 12}{2} \pm \sqrt{\left(\frac{4 - (-12)}{2}\right)^2 + (-8)^2} \end{aligned}$$

$$\sigma_1 = 7.314 \text{ ksi} \quad \sigma_2 = -15.314 \text{ ksi}$$

$$\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2 = \left(\frac{\sigma_Y}{F.S.}\right)^2$$

$$F.S. = \sqrt{\frac{36^2}{(7.314)^2 - (7.314)(-15.314) + (-15.314)^2}} = 1.80$$

**Ans.**

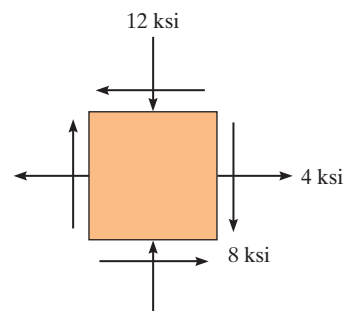



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–79.** The yield stress for heat-treated beryllium copper is  $\sigma_Y = 130$  ksi. If this material is subjected to plane stress and elastic failure occurs when one principal stress is 145 ksi, what is the smallest magnitude of the other principal stress? Use the maximum-distortion-energy theory.

**Maximum Distortion Energy Theory :** With  $\sigma_1 = 145$  ksi,

$$\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2 = \sigma_Y^2$$

$$145^2 - 145\sigma_2 + \sigma_2^2 = 130^2$$

$$\sigma_2^2 - 145\sigma_2 + 4125 = 0$$

$$\sigma_2 = \frac{-(-145) \pm \sqrt{(-145)^2 - 4(1)(4125)}}{2(1)}$$

$$= 72.5 \pm 33.634$$

Choose the smaller root,  $\sigma_2 = 38.9$  ksi

**Ans.**


**\*10–80.** The plate is made of hard copper, which yields at  $\sigma_Y = 105$  ksi. Using the maximum-shear-stress theory, determine the tensile stress  $\sigma_x$  that can be applied to the plate if a tensile stress  $\sigma_y = 0.5\sigma_x$  is also applied.

$$\sigma_1 = \sigma_x \quad \sigma_2 = \frac{1}{2} \sigma_x$$

$$|\sigma_1| = \sigma_Y$$

$$\sigma_x = 105 \text{ ksi}$$

**Ans.**

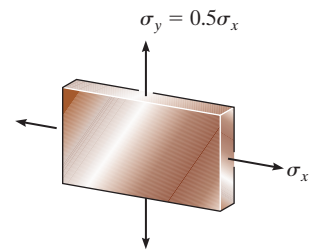

**•10–81.** Solve Prob. 10–80 using the maximum-distortion-energy theory.

$$\sigma_1 = \sigma_x$$


$$\sigma_2 = \frac{\sigma_x}{2}$$

$$\sigma_1^2 - \sigma_1 \sigma_2 + \sigma_2^2 = \sigma_Y^2$$

$$\sigma_x^2 - \frac{\sigma_x^2}{2} + \frac{\sigma_x^2}{4} = (105)^2$$

$$\sigma_x = 121 \text{ ksi}$$

**Ans.**

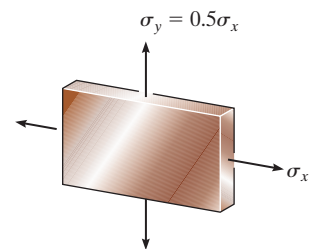

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–82.** The state of stress acting at a critical point on the seat frame of an automobile during a crash is shown in the figure. Determine the smallest yield stress for a steel that can be selected for the member, based on the maximum-shear-stress theory.

**Normal and Shear Stress:** In accordance with the sign convention.

$$\sigma_x = 80 \text{ ksi} \quad \sigma_y = 0 \quad \tau_{xy} = 25 \text{ ksi}$$

**In - Plane Principal Stress:** Applying Eq. 9-5.

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{80 + 0}{2} \pm \sqrt{\left(\frac{80 - 0}{2}\right)^2 + 25^2} \\ &= 40 \pm 47.170 \end{aligned}$$

$$\sigma_1 = 87.170 \text{ ksi} \quad \sigma_2 = -7.170 \text{ ksi}$$

**Maximum Shear Stress Theory:**  $\sigma_1$  and  $\sigma_2$  have opposite signs so

$$\begin{aligned} |\sigma_1 - \sigma_2| &= \sigma_Y \\ |87.170 - (-7.170)| &= \sigma_Y \\ \sigma_Y &= 94.3 \text{ ksi} \end{aligned}$$

**Ans.**



**10–83.** Solve Prob. 10–82 using the maximum-distortion-energy theory.

**Normal and Shear Stress:** In accordance with the sign convention.

$$\sigma_x = 80 \text{ ksi} \quad \sigma_y = 0 \quad \tau_{xy} = 25 \text{ ksi}$$

**In - Plane Principal Stress:** Applying Eq. 9-5.

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{80 + 0}{2} \pm \sqrt{\left(\frac{80 - 0}{2}\right)^2 + 25^2} \\ &= 40 \pm 47.170 \end{aligned}$$

$$\sigma_1 = 87.170 \text{ ksi} \quad \sigma_2 = -7.170 \text{ ksi}$$

**Maximum Distortion Energy Theory:**

$$\begin{aligned} \sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 &= \sigma_Y^2 \\ 87.170^2 - 87.170(-7.170) + (-7.170)^2 &= \sigma_Y^2 \\ \sigma_Y &= 91.0 \text{ ksi} \end{aligned}$$

**Ans.**



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–84.** A bar with a circular cross-sectional area is made of SAE 1045 carbon steel having a yield stress of  $\sigma_Y = 150$  ksi. If the bar is subjected to a torque of 30 kip · in. and a bending moment of 56 kip · in., determine the required diameter of the bar according to the maximum-distortion-energy theory. Use a factor of safety of 2 with respect to yielding.

**Normal and Shear Stresses:** Applying the flexure and torsion formulas.

$$\sigma = \frac{Mc}{I} = \frac{56\left(\frac{d}{2}\right)}{\frac{\pi}{4}\left(\frac{d}{2}\right)^4} = \frac{1792}{\pi d^3}$$

$$\tau = \frac{Tc}{J} = \frac{30\left(\frac{d}{2}\right)}{\frac{\pi}{2}\left(\frac{d}{2}\right)^4} = \frac{480}{\pi d^3}$$

The critical state of stress is shown in Fig. (a) or (b), where

$$\sigma_x = \frac{1792}{\pi d^3} \quad \sigma_y = 0 \quad \tau_{xy} = \frac{480}{\pi d^3}$$



**In - Plane Principal Stresses :** Applying Eq. 9-5,

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{\frac{1792}{\pi d^3} + 0}{2} \pm \sqrt{\left(\frac{\frac{1792}{\pi d^3} - 0}{2}\right)^2 + \left(\frac{480}{\pi d^3}\right)^2} \\ &= \frac{896}{\pi d^3} \pm \frac{1016.47}{\pi d^3} \\ \sigma_1 &= \frac{1912.47}{\pi d^3} \quad \sigma_2 = -\frac{120.47}{\pi d^3} \end{aligned}$$

**Maximum Distortion Energy Theory :**

$$\begin{aligned} \sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 &= \sigma_{\text{allow}}^2 \\ \left(\frac{1912.47}{\pi d^3}\right)^2 - \left(\frac{1912.47}{\pi d^3}\right)\left(-\frac{120.47}{\pi d^3}\right) + \left(-\frac{120.47}{\pi d^3}\right)^2 &= \left(\frac{150}{2}\right)^2 \\ d &= 2.30 \text{ in.} \end{aligned}$$

**Ans.**

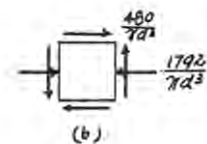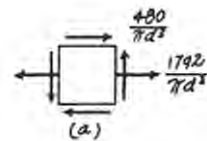

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–85.** The state of stress acting at a critical point on a machine element is shown in the figure. Determine the smallest yield stress for a steel that might be selected for the part, based on the maximum-shear-stress theory.

The Principal stresses:

$$\begin{aligned}\sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{8 - 10}{2} \pm \sqrt{\left(\frac{8 - (-10)}{2}\right)^2 + 4^2}\end{aligned}$$


$$\sigma_1 = 8.8489 \text{ ksi} \quad \sigma_2 = -10.8489 \text{ ksi}$$

Maximum shear stress theory: Both principal stresses have opposite sign. hence,

$$|\sigma_1 - \sigma_2| = \sigma_Y \quad 8.8489 - (-10.8489) = \sigma_Y$$

$$\sigma_Y = 19.7 \text{ ksi}$$

**Ans.**

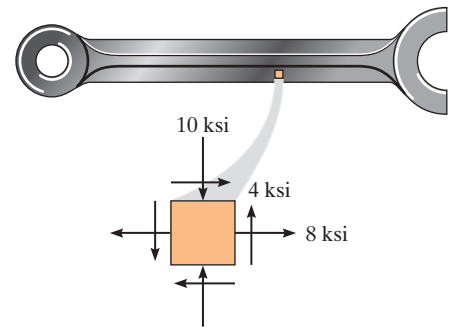

**10–86.** The principal stresses acting at a point on a thin-walled cylindrical pressure vessel are  $\sigma_1 = pr/t$ ,  $\sigma_2 = pr/2t$ , and  $\sigma_3 = 0$ . If the yield stress is  $\sigma_Y$ , determine the maximum value of  $p$  based on (a) the maximum-shear-stress theory and (b) the maximum-distortion-energy theory.

**a) Maximum Shear Stress Theory:**  $\sigma_1$  and  $\sigma_2$  have the same signs, then

$$|\sigma_2| = \sigma_Y \quad \left| \frac{pr}{2t} \right| = \sigma_Y \quad p = \frac{2t}{r} \sigma_Y$$

$$|\sigma_1| = \sigma_Y \quad \left| \frac{pr}{t} \right| = \sigma_Y \quad p = \frac{t}{r} \sigma_Y \text{ (Controls!)}$$

**Ans.**

**b) Maximum Distortion Energy Theory :**

$$\begin{aligned}\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 &= \sigma_Y^2 \\ \left(\frac{pr}{t}\right)^2 - \left(\frac{pr}{t}\right)\left(\frac{pr}{2t}\right) + \left(\frac{pr}{2t}\right)^2 &= \sigma_Y^2\end{aligned}$$

$$p = \frac{2t}{\sqrt{3}r} \sigma_Y$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–87.** If a solid shaft having a diameter  $d$  is subjected to a torque  $\mathbf{T}$  and moment  $\mathbf{M}$ , show that by the maximum-shear-stress theory the maximum allowable shear stress is  $\tau_{\text{allow}} = (16/\pi d^3)\sqrt{M^2 + T^2}$ . Assume the principal stresses to be of opposite algebraic signs.



Section properties :

$$I = \frac{\pi}{4} \left( \frac{d}{2} \right)^4 = \frac{\pi d^4}{64}; \quad J = \frac{\pi}{2} \left( \frac{d}{2} \right)^4 = \frac{\pi d^4}{32}$$

Thus,

$$\sigma = \frac{M c}{I} = \frac{M (\frac{d}{2})}{\frac{\pi d^4}{64}} = \frac{32 M}{\pi d^3}$$

$$\tau = \frac{T c}{J} = \frac{T (\frac{d}{2})}{\frac{\pi d^4}{32}} = \frac{16 T}{\pi d^3}$$

The principal stresses :

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left( \frac{\sigma_x - \sigma_y}{2} \right)^2 + \tau_{xy}^2} \\ &= \frac{16 M}{\pi d^3} \pm \sqrt{\left( \frac{16 M}{\pi d^3} \right)^2 + \left( \frac{16 T}{\pi d^3} \right)^2} = \frac{16 M}{\pi d^3} \pm \frac{16}{\pi d^3} \sqrt{M^2 + T^2} \end{aligned}$$

Assume  $\sigma_1$  and  $\sigma_2$  have opposite sign, hence,

$$\tau_{\text{allow}} = \frac{\sigma_1 - \sigma_2}{2} = \frac{2 \left[ \frac{16}{\pi d^3} \sqrt{M^2 + T^2} \right]}{2} = \frac{16}{\pi d^3} \sqrt{M^2 + T^2}$$

**QED**

**\*10–88.** If a solid shaft having a diameter  $d$  is subjected to a torque  $\mathbf{T}$  and moment  $\mathbf{M}$ , show that by the maximum-normal-stress theory the maximum allowable principal stress is  $\sigma_{\text{allow}} = (16/\pi d^3)(M + \sqrt{M^2 + T^2})$ .



Section properties :

$$I = \frac{\pi d^4}{64}; \quad J = \frac{\pi d^4}{32}$$

Stress components :

$$\sigma = \frac{M c}{I} = \frac{M (\frac{d}{2})}{\frac{\pi d^4}{64}} = \frac{32 M}{\pi d^3}; \quad \tau = \frac{T c}{J} = \frac{T (\frac{d}{2})}{\frac{\pi d^4}{32}} = \frac{16 T}{\pi d^3}$$

The principal stresses :

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left( \frac{\sigma_x - \sigma_y}{2} \right)^2 + \tau_{xy}^2} = \frac{\frac{32 M}{\pi d^3} + 0}{2} \pm \sqrt{\left( \frac{\frac{32 M}{\pi d^3} - 0}{2} \right)^2 + \left( \frac{16 T}{\pi d^3} \right)^2} \\ &= \frac{16 M}{\pi d^3} \pm \frac{16}{\pi d^3} \sqrt{M^2 + T^2} \end{aligned}$$


Maximum normal stress theory. Assume  $\sigma_1 > \sigma_2$

$$\begin{aligned} \sigma_{\text{allow}} = \sigma_1 &= \frac{16 M}{\pi d^3} + \frac{16}{\pi d^3} \sqrt{M^2 + T^2} \\ &= \frac{16}{\pi d^3} [M + \sqrt{M^2 + T^2}] \end{aligned}$$

**QED**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–89.** The shaft consists of a solid segment  $AB$  and a hollow segment  $BC$ , which are rigidly joined by the coupling at  $B$ . If the shaft is made from A-36 steel, determine the maximum torque  $T$  that can be applied according to the maximum-shear-stress theory. Use a factor of safety of 1.5 against yielding.

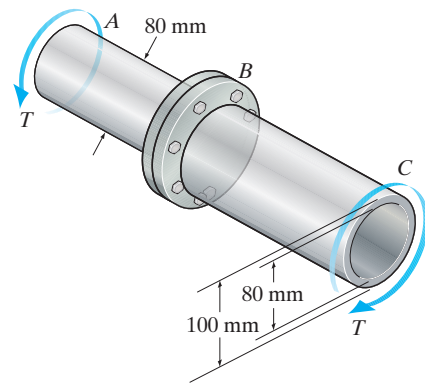


**Shear Stress:** This is a case of pure shear, and the shear stress is contributed by torsion. For the hollow segment,  $J_h = \frac{\pi}{2} (0.05^4 - 0.04^4) = 1.845\pi(10^{-6}) \text{ m}^4$ . Thus,

$$(\tau_{\max})_h = \frac{Tc_h}{J_h} = \frac{T(0.05)}{1.845\pi(10^{-6})} = 8626.28T$$

For the solid segment,  $J_s = \frac{\pi}{2} (0.04^4) = 1.28\pi(10^{-6}) \text{ m}^4$ . Thus,

$$(\tau_{\max})_s = \frac{Tc_s}{J_s} = \frac{T(0.04)}{1.28\pi(10^{-6})} = 9947.18T$$

By comparison, the points on the surface of the solid segment are critical and their state of stress is represented on the element shown in Fig.  $a$ .

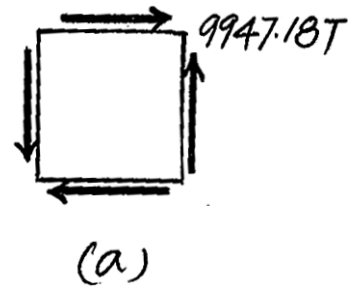

**In - Plane Principal Stress.**  $\sigma_x = \sigma_y = 0$  and  $\tau_{xy} = 9947.18T$ . We have

$$\begin{aligned}\sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{0 + 0}{2} \pm \sqrt{\left(\frac{0 - 0}{2}\right)^2 + (9947.18T)^2} \\ \sigma_1 &= 9947.18T \quad \sigma_2 = -9947.18T\end{aligned}$$

**Maximum Shear Stress Theory.**

$$\sigma_{\text{allow}} = \frac{\sigma_Y}{F.S.} = \frac{250}{1.5} = 166.67 \text{ MPa}$$


Since  $\sigma_1$  and  $\sigma_2$  have opposite signs,

$$\begin{aligned}|\sigma_1 - \sigma_2| &= \sigma_{\text{allow}} \\ 9947.18T - (-9947.18T) &= 166.67(10^6) \\ T &= 8377.58 \text{ N} \cdot \text{m} = 8.38 \text{ kN} \cdot \text{m}\end{aligned}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–90.** The shaft consists of a solid segment  $AB$  and a hollow segment  $BC$ , which are rigidly joined by the coupling at  $B$ . If the shaft is made from A-36 steel, determine the maximum torque  $T$  that can be applied according to the maximum-distortion-energy theory. Use a factor of safety of 1.5 against yielding.

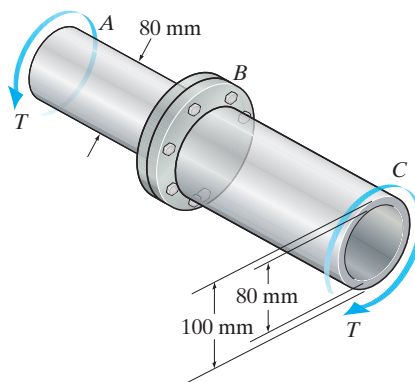

**Shear Stress.** This is a case of pure shear, and the shear stress is contributed by torsion. For the hollow segment,  $J_h = \frac{\pi}{2} (0.05^4 - 0.04^4) = 1.845\pi(10^{-6}) \text{ m}^4$ . Thus,

$$(\tau_{\max})_h = \frac{Tc_h}{J_h} = \frac{T(0.05)}{1.845\pi(10^{-6})} = 8626.28T$$

For the solid segment,  $J_s = \frac{\pi}{2} (0.04^4) = 1.28\pi(10^{-6}) \text{ m}^4$ . Thus,

$$(\tau_{\max})_s = \frac{Tc_s}{J_s} = \frac{T(0.04)}{1.28\pi(10^{-6})} = 9947.18T$$

By comparison, the points on the surface of the solid segment are critical and their state of stress is represented on the element shown in Fig.  $a$ .

**In - Plane Principal Stress.**  $\sigma_x = \sigma_y = 0$  and  $\tau_{xy} = 9947.18T$ . We have

$$\begin{aligned}\sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{0 + 0}{2} \pm \sqrt{\left(\frac{0 - 0}{2}\right)^2 + (9947.18T)^2} \\ \sigma_1 &= 9947.18T \quad \sigma_2 = -9947.18T\end{aligned}$$

**Maximum Distortion Energy Theory.**

$$\sigma_{\text{allow}} = \frac{\sigma_Y}{F.S.} = \frac{250}{1.5} = 166.67 \text{ MPa}$$

Then,


$$\begin{aligned}\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 &= \sigma_{\text{allow}}^2 \\ (9947.18T)^2 - (9947.18T)(-9947.18T) + (-9947.18T)^2 &= [166.67(10^6)]^2\end{aligned}$$

$$T = 9673.60 \text{ N} \cdot \text{m} = 9.67 \text{ kN} \cdot \text{m}$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–91.** The internal loadings at a critical section along the steel drive shaft of a ship are calculated to be a torque of 2300 lb·ft, a bending moment of 1500 lb·ft, and an axial thrust of 2500 lb. If the yield points for tension and shear are  $\sigma_Y = 100$  ksi and  $\tau_Y = 50$  ksi, respectively, determine the required diameter of the shaft using the maximum-shear-stress theory.

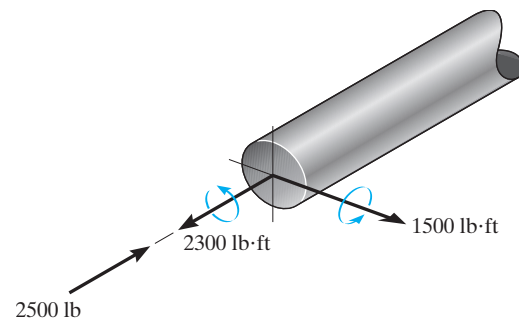

$$A = \pi c^2 \quad I = \frac{\pi}{4} c^4 \quad J = \frac{\pi}{2} c^4$$

$$\sigma_A = \frac{P}{A} + \frac{Mc}{I} = -\left(\frac{2500}{\pi c^2} + \frac{1500(12)(c)}{\frac{\pi c^4}{4}}\right) = -\left(\frac{2500}{\pi c^2} + \frac{72\,000}{\pi c^3}\right)$$

$$\tau_A = \frac{Tc}{J} = \frac{2300(12)(c)}{\frac{\pi c^4}{2}} = \frac{55\,200}{\pi c^3}$$

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= -\left(\frac{2500c + 72\,000}{2\pi c^3}\right) \pm \sqrt{\left(\frac{2500c + 72\,000}{2\pi c^3}\right)^2 + \left(\frac{55\,200}{\pi c^3}\right)^2} \end{aligned} \quad (1)$$

Assume  $\sigma_1$  and  $\sigma_2$  have opposite signs:

$$|\sigma_1 - \sigma_2| = \sigma_Y$$

$$2\sqrt{\left(\frac{2500c + 72\,000}{2\pi c^3}\right)^2 + \left(\frac{55\,200}{\pi c^3}\right)^2} = 100(10^3)$$

$$(2500c + 72\,000)^2 + 110\,400^2 = 10\,000(10^6)\pi^2 c^6$$

$$6.25c^2 + 360c + 17372.16 - 10\,000\pi^2 c^6 = 0$$

By trial and error:

$$c = 0.75057 \text{ in.}$$

Substitute  $c$  into Eq. (1):

$$\sigma_1 = 22\,193 \text{ psi} \quad \sigma_2 = -77\,807 \text{ psi}$$

$\sigma_1$  and  $\sigma_2$  are of opposite signs

**OK**

Therefore,


$$d = 1.50 \text{ in.}$$

**Ans.**



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–92.** The gas tank has an inner diameter of 1.50 m and a wall thickness of 25 mm. If it is made from A-36 steel and the tank is pressured to 5 MPa, determine the factor of safety against yielding using (a) the maximum-shear-stress theory, and (b) the maximum-distortion-energy theory.

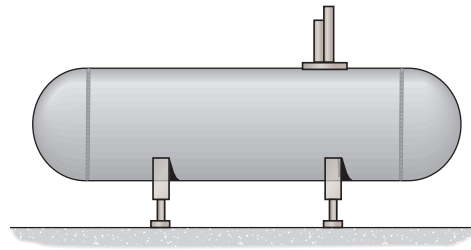

(a) **Normal Stress.** Since  $\frac{r}{t} = \frac{0.75}{0.025} = 30 > 10$ , thin-wall analysis can be used. We have

$$\sigma_1 = \sigma_h = \frac{pr}{t} = \frac{5(0.75)}{0.025} = 150 \text{ MPa}$$

$$\sigma_2 = \sigma_{\text{long}} = \frac{pr}{2t} = \frac{5(0.75)}{2(0.025)} = 75 \text{ MPa}$$

**Maximum Shear Stress Theory.**  $\sigma_1$  and  $\sigma_2$  have the sign. Thus,

$$|\sigma_1| = \sigma_{\text{allow}}$$

$$\sigma_{\text{allow}} = 150 \text{ MPa}$$

The factor of safety is

$$F.S. = \frac{\sigma_Y}{\sigma_{\text{allow}}} = \frac{250}{150} = 1.67$$

**Ans.**

(b) **Maximum Distortion Energy Theory.**

$$\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 = \sigma_{\text{allow}}^2$$

$$150^2 - 150(75) + 75^2 = \sigma_{\text{allow}}^2$$

$$\sigma_{\text{allow}} = 129.90 \text{ MPa}$$


The factor of safety is

$$F.S. = \frac{\sigma_Y}{\sigma_{\text{allow}}} = \frac{250}{129.90} = 1.92$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**•10–93.** The gas tank is made from A-36 steel and has an inner diameter of 1.50 m. If the tank is designed to withstand a pressure of 5 MPa, determine the required minimum wall thickness to the nearest millimeter using (a) the maximum-shear-stress theory, and (b) maximum-distortion-energy theory. Apply a factor of safety of 1.5 against yielding.

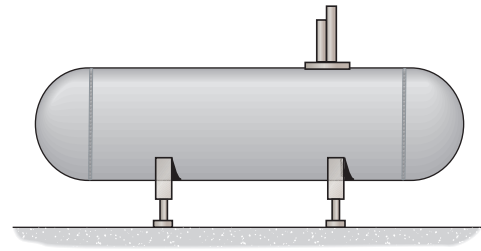

(a) **Normal Stress.** Assuming that thin - wall analysis is valid, we have

$$\sigma_1 = \sigma_h = \frac{pr}{t} = \frac{5(10^6)(0.75)}{t} = \frac{3.75(10^6)}{t}$$

$$\sigma_2 = \sigma_{\text{long}} = \frac{pr}{2t} = \frac{5(10^6)(0.75)}{2t} = \frac{1.875(10^6)}{t}$$

**Maximum Shear Stress Theory.**

$$\sigma_{\text{allow}} = \frac{\sigma_Y}{F.S.} = \frac{250(10^6)}{1.5} = 166.67(10^6)\text{Pa}$$

$\sigma_1$  and  $\sigma_2$  have the same sign. Thus,

$$|\sigma_1| = \sigma_{\text{allow}}$$

$$\frac{3.75(10^6)}{t} = 166.67(10^6)$$

$$t = 0.0225 \text{ m} = 22.5 \text{ mm}$$

**Ans.**

Since  $\frac{r}{t} = \frac{0.75}{0.0225} = 33.3 > 10$ , thin - wall analysis is valid.

(b) **Maximum Distortion Energy Theory.**

$$\sigma_{\text{allow}} = \frac{\sigma_Y}{F.S.} = \frac{250(10^6)}{1.5} = 166.67(10^6)\text{Pa}$$

Thus,

$$\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2^2 = \sigma_{\text{allow}}^2$$

$$\left[ \frac{3.75(10^6)}{t} \right]^2 - \left[ \frac{3.75(10^6)}{t} \right] \left[ \frac{1.875(10^6)}{t} \right] + \left[ \frac{1.875(10^6)}{t} \right]^2 = \left[ 166.67(10^6) \right]^2$$

$$\frac{3.2476(10^6)}{t} = 166.67(10^6)$$

$$t = 0.01949 \text{ m} = 19.5 \text{ mm}$$

**Ans.**

Since  $\frac{r}{t} = \frac{0.75}{0.01949} = 38.5 > 10$ , thin - wall analysis is valid.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10-94.** A thin-walled spherical pressure vessel has an inner radius  $r$ , thickness  $t$ , and is subjected to an internal pressure  $p$ . If the material constants are  $E$  and  $\nu$ , determine the strain in the circumferential direction in terms of the stated parameters.


$$\sigma_1 = \sigma_2 = \frac{pr}{2t}$$

$$\varepsilon_1 = \varepsilon_2 = \varepsilon = \frac{1}{E}(\sigma - \nu\sigma)$$

$$\varepsilon = \frac{1-\nu}{E}\sigma = \frac{1-\nu}{E}\left(\frac{pr}{2t}\right) = \frac{pr}{2Et}(1-\nu)$$

**Ans.**

**10-95.** The strain at point  $A$  on the shell has components  $\varepsilon_x = 250(10^{-6})$ ,  $\varepsilon_y = 400(10^{-6})$ ,  $\gamma_{xy} = 275(10^{-6})$ ,  $\varepsilon_z = 0$ . Determine (a) the principal strains at  $A$ , (b) the maximum shear strain in the  $x$ - $y$  plane, and (c) the absolute maximum shear strain.

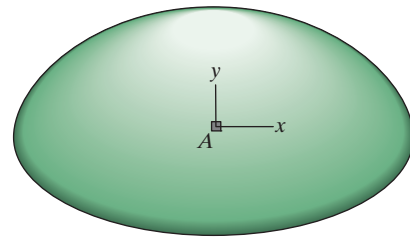

$$\varepsilon_x = 250(10^{-6}) \quad \varepsilon_y = 400(10^{-6}) \quad \gamma_{xy} = 275(10^{-6}) \quad \frac{\gamma_{xy}}{2} = 137.5(10^{-6})$$

$$A(250, 137.5)10^{-6} \quad C(325, 0)10^{-6}$$

$$R = \left( \sqrt{(325 - 250)^2 + (137.5)^2} \right) 10^{-6} = 156.62(10^{-6})$$

a)

$$\varepsilon_1 = (325 + 156.62)10^{-6} = 482(10^{-6})$$

**Ans.**

$$\varepsilon_2 = (325 - 156.62)10^{-6} = 168(10^{-6})$$

**Ans.**

b)

$$\gamma_{\max}^{\text{in-plane}} = 2R = 2(156.62)(10^{-6}) = 313(10^{-6})$$


**Ans.**

c)

$$\frac{\gamma_{\max}^{\text{abs}}}{2} = \frac{482(10^{-6})}{2}$$


$$\gamma_{\max}^{\text{abs}} = 482(10^{-6})$$

**Ans.**

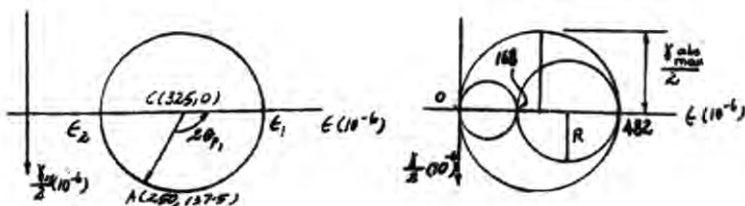

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10-96.** The principal plane stresses acting at a point are shown in the figure. If the material is machine steel having a yield stress of  $\sigma_Y = 500$  MPa, determine the factor of safety with respect to yielding if the maximum-shear-stress theory is considered.

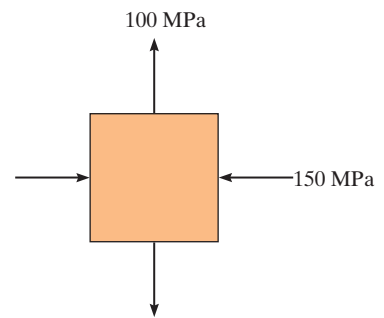

Have, the in plane principal stresses are


$$\sigma_1 = \sigma_y = 100 \text{ MPa} \quad \sigma_2 = \sigma_x = -150 \text{ MPa}$$

Since  $\sigma_1$  and  $\sigma_2$  have same sign,

$$F.S. = \frac{\sigma_y}{|\sigma_1 - \sigma_2|} = \frac{500}{|100 - (-150)|} = 2$$

**Ans.**

**•10-97.** The components of plane stress at a critical point on a thin steel shell are shown. Determine if failure (yielding) has occurred on the basis of the maximum-distortion-energy theory. The yield stress for the steel is  $\sigma_Y = 650$  MPa.

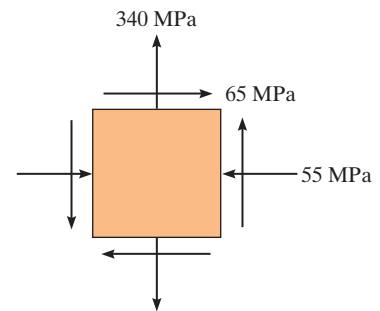

$$\sigma_x = -55 \text{ MPa} \quad \sigma_y = 340 \text{ MPa} \quad \tau_{xy} = 65 \text{ MPa}$$

$$\begin{aligned} \sigma_{1,2} &= \frac{\sigma_x + \sigma_y}{2} \pm \sqrt{\left(\frac{\sigma_x - \sigma_y}{2}\right)^2 + \tau_{xy}^2} \\ &= \frac{-55 + 340}{2} \pm \sqrt{\left(\frac{-55 - 340}{2}\right)^2 + 65^2} \end{aligned}$$

$$\sigma_1 = 350.42 \text{ MPa} \quad \sigma_2 = -65.42 \text{ MPa}$$

$$\begin{aligned} (\sigma_1^2 - \sigma_1\sigma_2 + \sigma_2) &= [350.42^2 - 350.42(-65.42) + (-65.42)^2] \\ &= 150\,000 < \sigma_Y^2 = 422\,500 \end{aligned}$$


**OK**

No.

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–98.** The  $60^\circ$  strain rosette is mounted on a beam. The following readings are obtained for each gauge:  $\epsilon_a = 600(10^{-6})$ ,  $\epsilon_b = -700(10^{-6})$ , and  $\epsilon_c = 350(10^{-6})$ . Determine (a) the in-plane principal strains and (b) the maximum in-plane shear strain and average normal strain. In each case show the deformed element due to these strains.

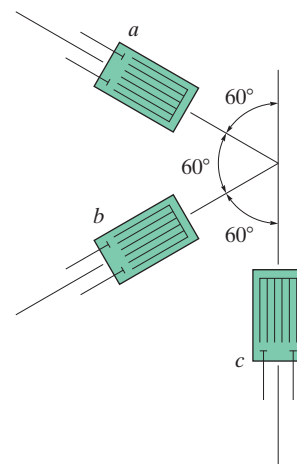

**Strain Rosettes ( $60^\circ$ ):** Applying Eq. 10-15 with  $\epsilon_x = 600(10^{-6})$ ,

$$\epsilon_b = -700(10^{-6}), \epsilon_c = 350(10^{-6}), \theta_a = 150^\circ, \theta_b = -150^\circ \text{ and } \theta_c = -90^\circ,$$

$$350(10^{-6}) = \epsilon_x \cos^2(-90^\circ) + \epsilon_y \sin^2(-90^\circ) + \gamma_{xy} \sin(-90^\circ) \cos(-90^\circ)$$

$$\epsilon_y = 350(10^{-6})$$

$$600(10^{-6}) = \epsilon_x \cos^2 150^\circ + 350(10^{-6}) \sin^2 150^\circ + \gamma_{xy} \sin 150^\circ \cos 150^\circ$$

$$512.5(10^{-6}) = 0.75 \epsilon_x - 0.4330 \gamma_{xy} \quad [1]$$

$$-700(10^{-6}) = \epsilon_x \cos^2(-150^\circ) + 350(10^{-6}) \sin^2(-150^\circ) + \gamma_{xy} \sin(-150^\circ) \cos(-150^\circ)$$

$$-787.5(10^{-6}) = 0.75 \epsilon_x + 0.4330 \gamma_{xy} \quad [2]$$

$$\text{Solving Eq. [1] and [2] yields } \epsilon_x = -183.33(10^{-6}) \quad \gamma_{xy} = -1501.11(10^{-6})$$

**Construction of the Circle:** With  $\epsilon_x = -183.33(10^{-6})$ ,  $\epsilon_y = 350(10^{-6})$ , and  $\frac{\gamma_{xy}}{2} = -750.56(10^{-6})$ .

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left( \frac{-183.33 + 350}{2} \right) (10^{-6}) = 83.3(10^{-6}) \quad \text{Ans.}$$

The coordinates for reference points A and C are

$$A(-183.33, -750.56)(10^{-6}) \quad C(83.33, 0)(10^{-6})$$

The radius of the circle is

$$R = \left( \sqrt{(183.33 + 83.33)^2 + 750.56^2} \right) (10^{-6}) = 796.52(10^{-6})$$

a)

**In-plane Principal Strain:** The coordinates of points B and D represent  $\epsilon_1$  and  $\epsilon_2$ , respectively.

$$\epsilon_1 = (83.33 + 796.52)(10^{-6}) = 880(10^{-6}) \quad \text{Ans.}$$




$$\epsilon_2 = (83.33 - 796.52)(10^{-6}) = -713(10^{-6}) \quad \text{Ans.}$$

**Orientation of Principal Strain:** From the circle,

$$\tan 2\theta_{P1} = \frac{750.56}{183.33 + 83.33} = 2.8145 \quad 2\theta_{P2} = 70.44^\circ$$

$$2\theta_{P1} = 180^\circ - 2\theta_{P2}$$

$$\theta_P = \frac{180^\circ - 70.44^\circ}{2} = 54.8^\circ \quad (\text{Clockwise}) \quad \text{Ans.}$$

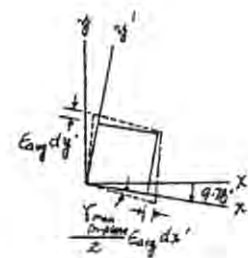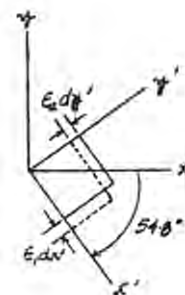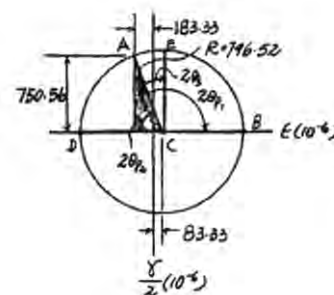

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10–98. Continued

b)

**Maximum In - Plane Shear Strain:** Represented by the coordinates of point  $E$  on the circle.

$$\frac{\gamma_{\text{in-plane}}^{\max}}{2} = -R = -796.52(10^{-6})$$

$$\gamma_{\text{in-plane}}^{\max} = -1593(10^{-6}) \quad \text{Ans.}$$

**Orientation of Maximum In-Plane Shear Strain:** From the circle.

$$\tan 2\theta_P = \frac{183.33 + 83.33}{750.56} = 0.3553$$

$$\theta_P = 9.78^\circ \text{ (Clockwise)} \quad \text{Ans.}$$

**10–99.** A strain gauge forms an angle of  $45^\circ$  with the axis of the 50-mm diameter shaft. If it gives a reading of  $\epsilon = -200(10^{-6})$  when the torque  $\mathbf{T}$  is applied to the shaft, determine the magnitude of  $\mathbf{T}$ . The shaft is made from A-36 steel.

**Shear Stress.** This is a case of pure shear, and the shear stress developed is contributed by torsional shear stress. Here,  $J = \frac{\pi}{2}(0.025^4) = 0.1953125\pi(10^{-6})\text{m}^4$ . Then

$$\tau = \frac{Tc}{J} = \frac{T(0.025)}{0.1953125\pi(10^{-6})} = \frac{0.128(10^6)T}{\pi}$$

The state of stress at points on the surface of the shaft can be represented by the element shown in Fig.  $a$ .

**Shear Strain:** For pure shear  $\epsilon_x = \epsilon_y = 0$ . We obtain,

$$\epsilon_a = \epsilon_x \cos^2\theta_a + \epsilon_y \sin^2\theta_a + \gamma_{xy} \sin\theta_a \cos\theta_a$$

$$-200(10^{-6}) = 0 + 0 + \gamma_{xy} \sin 45^\circ \cos 45^\circ$$

$$\gamma_{xy} = -400(10^{-6})$$



**Shear Stress and Strain Relation:** Applying Hooke's Law for shear,

$$\tau_{xy} = G\gamma_{xy}$$

$$-\frac{0.128(10^6)T}{\pi} = 75(10^9)[-400(10^{-6})]$$


$$T = 736 \text{ N}\cdot\text{m}$$

Ans.

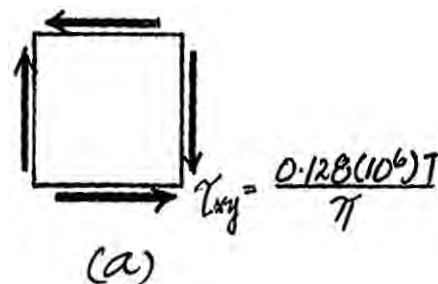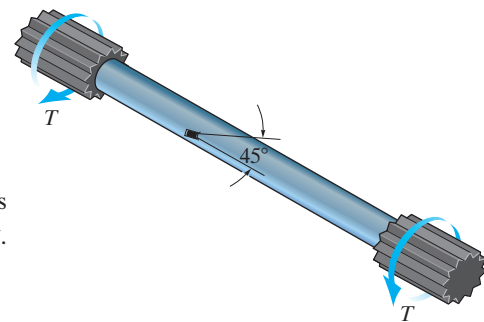

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**\*10–100.** The A-36 steel post is subjected to the forces shown. If the strain gauges  $a$  and  $b$  at point  $A$  give readings of  $\epsilon_a = 300(10^{-6})$  and  $\epsilon_b = 175(10^{-6})$ , determine the magnitudes of  $P_1$  and  $P_2$ .

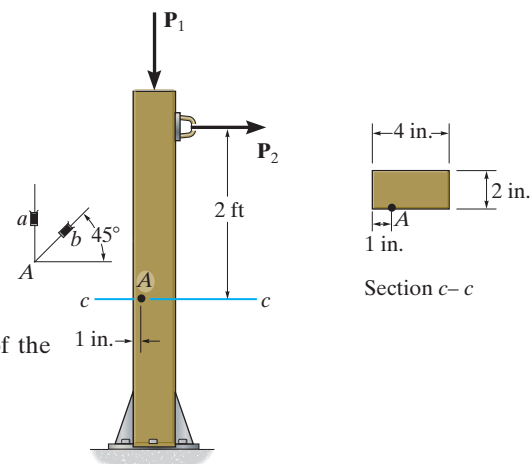

**Internal Loadings:** Considering the equilibrium of the free-body diagram of the post's segment, Fig.  $a$ ,

$$\begin{aligned} \rightarrow \Sigma F_x &= 0; & P_2 - V &= 0 & V &= P_2 \\ + \uparrow \Sigma F_y &= 0; & N - P_1 &= 0 & N &= P_1 \\ \curvearrowright \Sigma M_O &= 0; & M + P_2(2) &= 0 & M &= -2P_2 \end{aligned}$$

**Section Properties:** The cross-sectional area and the moment of inertia about the bending axis of the post's cross-section are

$$A = 4(2) = 8 \text{ in}^2$$

$$I = \frac{1}{12} (2)(4^3) = 10.667 \text{ in}^4$$

Referring to Fig.  $b$ ,

$$(Q_y)_A = \bar{x}' A' = 1.5(1)(2) = 3 \text{ in}^3$$

**Normal and Shear Stress:** The normal stress is a combination of axial and bending stress.

$$\sigma_A = \frac{N}{A} + \frac{Mx_A}{I} = -\frac{P_1}{8} + \frac{2P_2(12)(1)}{10.667} = 2.25P_2 - 0.125P_1$$

The shear stress is caused by transverse shear stress.

$$\tau_A = \frac{VQ_A}{It} = \frac{P_2(3)}{10.667(2)} = 0.140625P_2$$

Thus, the state of stress at point  $A$  is represented on the element shown in Fig.  $c$ .

**Normal and Shear Strain:** With  $\theta_a = 90^\circ$  and  $\theta_b = 45^\circ$ , we have



$$\epsilon_a = \epsilon_x \cos^2 \theta_a + \epsilon_y \sin^2 \theta_a + \gamma_{xy} \sin \theta_a \cos \theta_a$$

$$300(10^{-6}) = \epsilon_x \cos^2 90^\circ + \epsilon_y \sin^2 90^\circ + \gamma_{xy} \sin 90^\circ \cos 90^\circ$$

$$\epsilon_y = 300(10^{-6}) \epsilon_b = \epsilon_x \cos^2 \theta_b + \epsilon_y \sin^2 \theta_b + \gamma_{xy} \sin \theta_b \cos \theta_b$$

$$175(10^{-6}) = \epsilon_x \cos^2 45^\circ + 300(10^{-6}) \sin^2 45^\circ + \gamma_{xy} \sin 45^\circ \cos 45^\circ$$

$$\epsilon_x + \gamma_{xy} = 50(10^{-6}) \quad (1)$$

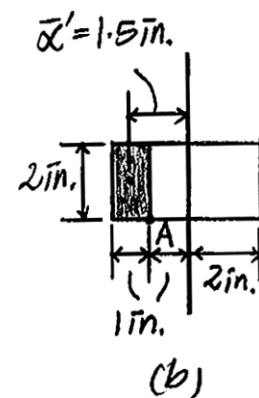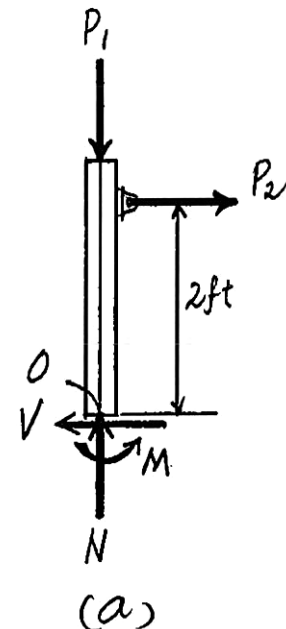

**10–100. Continued**

Since  $\sigma_y = \sigma_z = 0$ ,  $\epsilon_x = -\nu\epsilon_y = -0.32(300)(10^{-6}) = -96(10^{-6})$

Then Eq. (1) gives

$$\gamma_{xy} = 146(10^{-6})$$

**Stress and Strain Relation:** Hooke's Law for shear gives

$$\tau_x = G\gamma_{xy}$$

$$0.140625P_2 = 11.0(10^3)[146(10^{-6})]$$

$$P_2 = 11.42 \text{ kip} = 11.4 \text{ kip}$$

**Ans.**


Since  $\sigma_y = \sigma_z = 0$ , Hooke's Law gives

$$\sigma_y = E\epsilon_y$$

$$2.25(11.42) - 0.125P_1 = 29.0(10^3)[300(10^{-6})]$$

$$P_1 = 136 \text{ kip}$$

**Ans.**

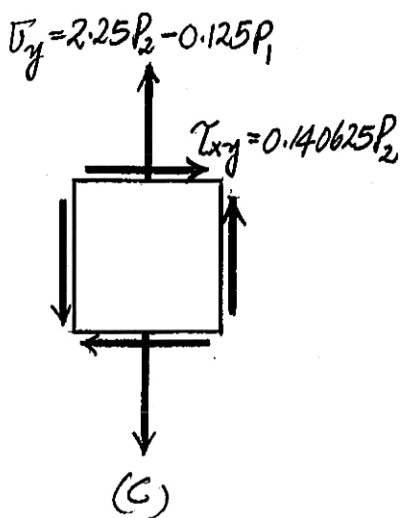



© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–101.** A differential element is subjected to plane strain that has the following components:  $\epsilon_x = 950(10^{-6})$ ,  $\epsilon_y = 420(10^{-6})$ ,  $\gamma_{xy} = -325(10^{-6})$ . Use the strain-transformation equations and determine (a) the principal strains and (b) the maximum in-plane shear strain and the associated average strain. In each case specify the orientation of the element and show how the strains deform the element.

$$\epsilon_{1,2} = \frac{\epsilon_x + \epsilon_y}{2} \pm \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \gamma_{xy}^2}$$

$$= \left[ \frac{950 + 420}{2} \pm \sqrt{\left(\frac{950 - 420}{2}\right)^2 + \left(\frac{-325}{2}\right)^2} \right] (10^{-6})$$

$$\epsilon_1 = 996(10^{-6})$$

**Ans.**

$$\epsilon_2 = 374(10^{-6})$$

**Ans.**

Orientation of  $\epsilon_1$  and  $\epsilon_2$ :

$$\tan 2\theta_P = \frac{\gamma_{xy}}{\epsilon_x - \epsilon_y} = \frac{-325}{950 - 420}$$

$$\theta_P = -15.76^\circ, 74.24^\circ$$

Use Eq. 10.5 to determine the direction of  $\epsilon_1$  and  $\epsilon_2$ .

$$\epsilon_{x'} = \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta$$

$$\theta = \theta_P = -15.76^\circ$$

$$\epsilon_{x'} = \left\{ \frac{950 + 420}{2} + \frac{950 - 420}{2} \cos(-31.52^\circ) + \frac{(-325)}{2} \sin(-31.52^\circ) \right\} (10^{-6}) = 996(10^{-6})$$

$$\theta_{P1} = -15.8^\circ$$

**Ans.**

$$\theta_{P2} = 74.2^\circ$$

**Ans.**

b)

$$\frac{\gamma_{\max \text{ in-plane}}}{2} = \sqrt{\left(\frac{\epsilon_x - \epsilon_y}{2}\right)^2 + \left(\frac{\gamma_{xy}}{2}\right)^2}$$

$$\frac{\gamma_{\max \text{ in-plane}}}{2} = 2 \left[ \sqrt{\left(\frac{950 - 420}{2}\right)^2 + \left(\frac{-325}{2}\right)^2} \right] (10^{-6}) = 622(10^{-6})$$

**Ans.**

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left( \frac{950 + 420}{2} \right) (10^{-6}) = 685(10^{-6})$$

**Ans.**

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

### 10–101. Continued

Orientation of  $\gamma_{\max}$  :

$$\tan 2\theta_P = \frac{-(\epsilon_x - \epsilon_y)}{\gamma_{xy}} = \frac{-(950 - 420)}{-325}$$

$$\theta_P = 29.2^\circ \text{ and } \theta_P = 119^\circ$$

**Ans.**

Use Eq. 10.6 to determine the sign of  $\gamma_{\max \text{ in-plane}}$  :

$$\frac{\gamma_{x'y'}}{2} = -\frac{\epsilon_x - \epsilon_y}{2} \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$

$$\theta = \theta_P = 29.2^\circ$$

$$\gamma_{x'y'} = 2 \left[ \frac{-(950 - 420)}{2} \sin (58.4^\circ) + \frac{-325}{2} \cos (58.4^\circ) \right] (10^{-6})$$

$$\gamma_{xy} = -622(10^{-6})$$

**10–102.** The state of plane strain on an element is  $\epsilon_x = 400(10^{-6})$ ,  $\epsilon_y = 200(10^{-6})$ , and  $\gamma_{xy} = -300(10^{-6})$ . Determine the equivalent state of strain on an element at the same point oriented  $30^\circ$  clockwise with respect to the original element. Sketch the results on the element.

#### Stress Transformation Equations:

$$\epsilon_x = 400(10^{-6}) \quad \epsilon_y = 200(10^{-6}) \quad \gamma_{xy} = -300(10^{-6}) \quad \theta = -30^\circ$$

We obtain,

$$\begin{aligned} \epsilon_{x'} &= \frac{\epsilon_x + \epsilon_y}{2} + \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta + \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{400 + 200}{2} + \frac{400 - 200}{2} \cos (-60^\circ) + \left( \frac{-300}{2} \right) \sin (-60^\circ) \right] (10^{-6}) \\ &= 480(10^{-6}) \end{aligned}$$

**Ans.**


$$\frac{\gamma_{x'y'}}{2} = -\left( \frac{\epsilon_x - \epsilon_y}{2} \right) \sin 2\theta + \frac{\gamma_{xy}}{2} \cos 2\theta$$

$$\begin{aligned} \gamma_{x'y'} &= [-(400 - 200) \sin (-60^\circ) + (-300) \cos (-60^\circ)] (10^{-6}) \\ &= 23.2(10^{-6}) \end{aligned}$$

**Ans.**


$$\begin{aligned} \epsilon_{y'} &= \frac{\epsilon_x + \epsilon_y}{2} - \frac{\epsilon_x - \epsilon_y}{2} \cos 2\theta - \frac{\gamma_{xy}}{2} \sin 2\theta \\ &= \left[ \frac{400 + 200}{2} - \frac{400 - 200}{2} \cos (-60^\circ) - \left( \frac{-300}{2} \right) \sin (-60^\circ) \right] (10^{-6}) \\ &= 120(10^{-6}) \end{aligned}$$

**Ans.**

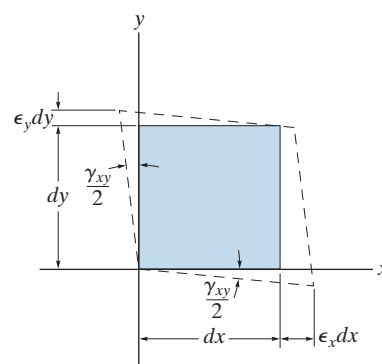

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

**10–103.** The state of plane strain on an element is  $\epsilon_x = 400(10^{-6})$ ,  $\epsilon_y = 200(10^{-6})$ , and  $\gamma_{xy} = -300(10^{-6})$ . Determine the equivalent state of strain, which represents (a) the principal strains, and (b) the maximum in-plane shear strain and the associated average normal strain. Specify the orientation of the corresponding element at the point with respect to the original element. Sketch the results on the element.

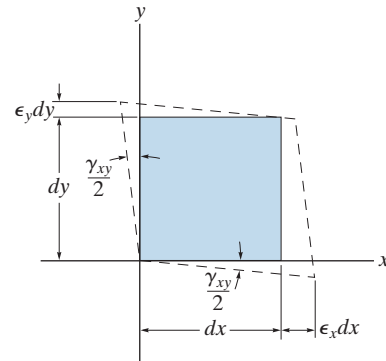

**Construction of the Circle:**  $\epsilon_x = 400(10^{-6})$ ,  $\epsilon_y = 200(10^{-6})$ , and  $\frac{\gamma_{xy}}{2} = -150(10^{-6})$ .

Thus,

$$\epsilon_{\text{avg}} = \frac{\epsilon_x + \epsilon_y}{2} = \left( \frac{400 + 200}{2} \right) (10^{-6}) = 300(10^{-6}) \quad \text{Ans.}$$

The coordinates for reference points *A* and the center *C* of the circle are

$$A(400, -150)(10^{-6}) \quad C(300, 0)(10^{-6})$$

The radius of the circle is

$$R = CA = \sqrt{(400 - 300)^2 + (-150)^2} = 180.28(10^{-6})$$

Using these results, the circle is shown in Fig. *a*.

**In - Plane Principal Stresses:** The coordinates of points *B* and *D* represent  $\epsilon_1$  and  $\epsilon_2$ , respectively. Thus,

$$\epsilon_1 = (300 + 180.28)(10^{-6}) = 480(10^{-6}) \quad \text{Ans.}$$

$$\epsilon_2 = (300 - 180.28)(10^{-6}) = 120(10^{-6}) \quad \text{Ans.}$$

**Orientation of Principal Plane:** Referring to the geometry of the circle,

$$\tan 2(\theta_p)_1 = \frac{150}{400 - 300} = 1.5$$

$$(\theta_p)_1 = 28.2^\circ \text{ (clockwise)} \quad \text{Ans.}$$

The deformed element for the state of principal strains is shown in Fig. *b*.

**Maximum In - Plane Shear Stress:** The coordinates of point *E* represent  $\epsilon_{\text{avg}}$  and  $\gamma_{\text{max in-plane}}$ . Thus

$$\frac{\gamma_{\text{max in-plane}}}{2} = -R = -180.28(10^{-6})$$

$$\gamma_{\text{max in-plane}} = -361(10^{-6}) \quad \text{Ans.}$$

**Orientation of the Plane of Maximum In - Plane Shear Strain:** Referring to the geometry of the circle,

$$\tan 2\theta_s = \frac{400 - 300}{150} = 0.6667$$

$$\theta_s = 16.8^\circ \text{ (counterclockwise)} \quad \text{Ans.}$$

The deformed element for the state of maximum in - plane shear strain is shown in Fig. *c*.

© 2010 Pearson Education, Inc., Upper Saddle River, NJ. All rights reserved. This material is protected under all copyright laws as they currently exist. No portion of this material may be reproduced, in any form or by any means, without permission in writing from the publisher.

10-103. Continued

